


Twin Alternating AIO Setup Instructions

If the demand for treated water is 24/7, you may require an AIO system in a dual-alternating configuration. You must program the AIO valve as a softener to access the ALT A, ALT B settings.

 **This setup will NOT have a slow air release and the drain line will need to be secured due to the rapid release of the air pocket.**

Two (2) – NWS10CFM-AIO-0.0
AIO Control Valves



One (1) – CL-MAV-125
Motorized Alternating Valve




One (1) – CL-COM-34-12
Communication Cable



Twin Alt Programming


Step 1

Press any button to activate display. Press **NEXT** and **▼** simultaneously for 3 seconds and release.

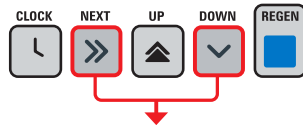


Step 5

Press the **▲** or **▼** to set the second Backwash cycle to OFF.
Press **NEXT** to go to Step 6.

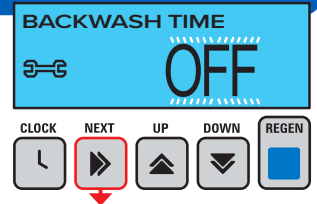


Step 2

Choose SOFTENING DN POST using **▲** or **▼**.
Press **NEXT** to go to Step 3.

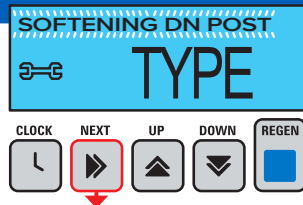

Step 6

Press the **▲** or **▼** to adjust the duration of the Rinse cycle.
Press **NEXT** to go to Step 7.

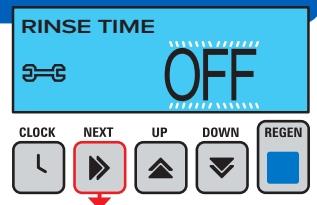


Step 3

Press the **▲** or **▼** to adjust the duration of the first Backwash cycle to 14 minutes.
Press **NEXT** to go to Step 4.




Step 7

Press the **▲** or **▼** to set the FILL to OFF.
Press **NEXT** to go to Step 8.

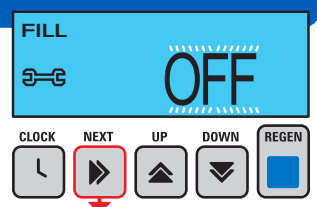


Step 4

Press the **▲** or **▼** to adjust the duration of Draw Down Time to 40 minutes.
Press **NEXT** to go to Step 5.

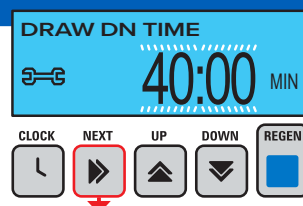

Step 8


Press the **▲** or **▼** to set the system capacity. This doesn't matter what you set it to as we will use day override..
Press **NEXT** to go to Step 9.

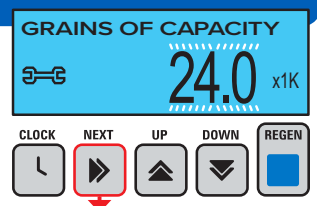

AIO Twin Alternating

Step 9


Set the Volume Capacity using the ▲ or ▼ to 1000 gallons (or calculate capacity according to media specs and contaminate load)

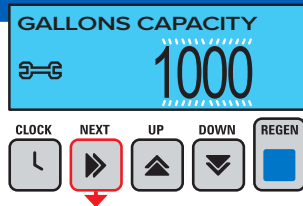

Press **NEXT** to go to Step 10.

Step 10

Set Regeneration Type Options using ▲ or ▼ to IMMEDIATE.

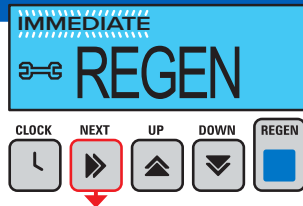

Press **NEXT** to go to Step 11.

Step 11


Set both Relay Options using ▲ or ▼ to OFF.



MAV Configuration Settings


MAV Step 1

Press any button to activate display. Press **NEXT** and ▼ simultaneously for 3 seconds and release. Press **NEXT** and ▼ simultaneously for 3 seconds again and release. Page 12 of Dealer Manual.

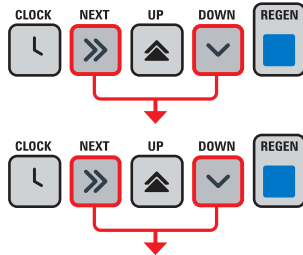


MAV Step 2

Displays Valve Type. Use ▲ or ▼ to select 1.0 for 1" valve, 1.25 for 1.25" valve, or 1.5 for 1.5" valve. Press **NEXT** to go to MAV Step 3.

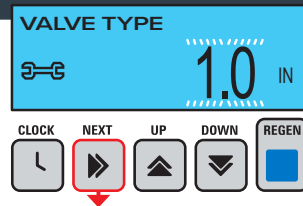


MAV Step 3

Use ▲ or ▼ to set the ALT MAV to Alt A for valve A. Press **NEXT** to go to MAV Step 4.

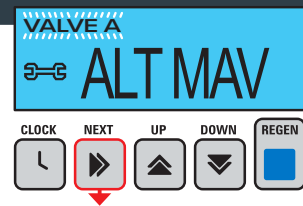


MAV Step 4

Use ▲ or ▼ to set the AUX MAV Output Operation to OFF. Press **NEXT** to go to MAV Step 5.

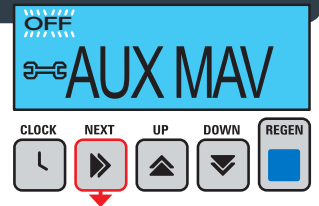

MAV Step 5

Use ▲ or ▼ to set the Auxiliary (DP) Input Operation to OFF. Press **NEXT** to EXIT

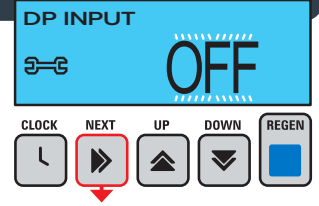


Set Day Override

NWS Dealer Manual Page 4.

Step 1


Press any button to activate display. Press **NEXT** and ▲ simultaneously for 3 seconds and release.

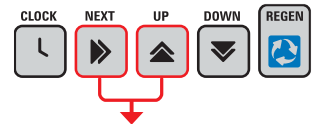

Step 2

Press ▲ or ▼ to adjust the Day Override to 1 day.

Press **NEXT** to go to Step 3L.

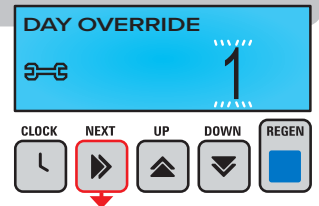

Step 3

Press ▲ or ▼ to turn Light On or Off.

Press **NEXT** to EXIT or to set **MINIMUM REGEN.**



Programming is now complete for the first valve in the sequence. Program the second valve for the Twin ALT setup.



Note: At Step MAV 3, set the ALT MAV to Alt B for Valve B