## **Commercial High Flow Mineral Extractor Kit**

For all 2-1/2" and 4" threaded tanks

The MINERAL EXTRACTOR offers an inexpensive way of removing the expelled bed of any size or height tank without removing the tank. It works with water pressure, not suction. It will work on any and all type beds, and will even remove the gravel bed if needed.

The MINERAL EXTRACTOR has a sealed cavity that is filled with liquid silicone to lubricate the "O" ring seals on the riser tube. The main body of the MINERAL EXTRACTOR carries a 5-year guarantee against cracking.

For larger commercial units with a fixed distributor, there is a 4" offset extension adapter that will allow you to leave the distributor in place, and use the MINERAL EXTRACTOR with the same ease as on the smaller 2-1/2" residential tanks.

This kit will work on all 2-1/2" and 4" tank threads. In most cases, the MINERAL EXTRACTOR will save you its cost every time you use it, not to mention your back. A must for every shop and service truck.

## Directions for Use

- 1. Remove control valve:
- 2. Slide black adapter to bottom of riser tube near the tee.
- 3. Screw black adapter on to tank and push riser tube down to bottom of mineral bed. (Tee will stop at gravel bed)
- 4. Connect garden hose to inlet adapter.
- 5. Turn water on and mineral will flow out of the tank with water pressure at outlet spout. (Will remove 1 cubic foot of resin in approximately 60 seconds.)

**OPTION: FLEX CENTER SHAFT KIT - This kit** allows unit to be used with low ceilings, pump houses, well pits, etc.





CORPORATION

3250 Barber Road Norton, OH 44203 Phone: 800.362.9686 Fax: 888.544.8780

14035 W. El Cielo Goodyear, AZ 85338 Phone: 866.445.4299 Fax: 602.442.0447

4410 E Adamo Dr Suite 102 Tampa, FL 33619 Phone: 813.712.2270 Fax: 813.712.2274

1012 Assembly Circle - # 100 Schertz, TX 78154 Phone: 855.674.0357 Fax: 210.714.2571