
Operation & Maintenance Manual

2900 NXT2 Systems

Table of Contents

- 1 INTRODUCTION**
 - 2 PRINCIPLES of ION EXCHANGE**
 - 2.1 Ion Exchange Softening Process
 - 2.2 Quality of Effluent
 - 2.3 Capacity of Ion Exchange
 - 2.4 Regeneration Steps
 - 3 INSTALLATION, LOADING & START-UP PROCEDURES**
 - 3.1 Installation of Equipment
 - 3.2 Loading of Gravel & Resin
 - 3.3 Start-Up Procedures
 - 4 OPERATING & REGENERATION PROCEDURES**
 - 4.1 Normal System Operations
 - 4.2 Multi-Port Valve Operation
 - 5 OPERATING RESPONSIBILITIES**
 - 5.1 Operator procedures
 - 5.2 Salt Specifications
 - 6 TROUBLE SHOOTING**
 - 6.1 General
 - 6.2 Reduced Capacity or Poor Effluent Quality
 - 6.3 Increase Pressure Loss or Decrease in Flow Rate
 - 7 SOFTENER SYSTEM DRAWINGS AND SPECIFICATIONS**
 - 7.1 Typical System 5 Duplex Interlock Unit Installation
 - 7.2 Typical System 6 Duplex Parallel Unit Installation
 - 7.3 Typical System 7 Duplex Alternating Unit Installation
 - 7.4 Typical System 9 Triplex Alternating Unit Installation
 - 7.5 Typical System 14 Twin Progressive Unit Installation
 - 7.6 Specifications
 - 7.7 Brine Float Setting
 - 7.8 Commercial/Industrial Brine Tanks
 - 8 FLECK SERVICE MANUALS**
 - 2900s Control Manual
 - NXT2 Service Manual
 - 9 SOFTENER ADDENDUM**
 - 9.1 Sample – Water Softening Log
-

Foreword

The operating instructions contained herein are intended to serve as a guide for the operation of the water softener equipment.

Since it is impossible to cover all operating contingencies and emergencies in a normal operating manual, the operator should read the manual and become familiar with its contents. They should also review the flow diagrams and vendor literature. This also should include all physical details, and full knowledge of the location and function of the equipment.

The use of an operating logbook is recommended in order to provide a proper record of performance. In the event of operational problems, such a record will prove invaluable when “trouble shooting” the system. This log should include all pertinent flow rates, temperatures and water characteristics. Equipment requiring maintenance or repair should be noted so that it can be scheduled for service or repair.

Frequently, water softener equipment like other processes, develop their own distinct characteristics. Design criteria outlined in this manual is based on many years of experience. However, they do not preclude modifications due to “personality” of the system. Operators should guide themselves accordingly and make any minor adjustments necessary for proper operation of the system.

Section 1: Introduction

Long term, successful operation of any softening system depends upon the care and attention it receives. Ordinarily, water treatment systems will provide uniform performance after the initial start-up period. Total gallons between regenerations and treated water purity usually do not vary appreciably over the life of the resin as long as the incoming water does not change.

This manual is intended to be a practical reference guide for operators. In view of the fact that system performance can change very dramatically throughout the year, a discussion of "ion exchange" theory is included in addition to basic information relative to equipment operation and regeneration procedures. Thorough understanding of the simple chemical reactions will help to determine if some equipment malfunction has occurred, or if the system is simply responding to changing water conditions. For this reason, the operator and supervising personnel should review Section 2, which defines terminology and simple chemistry associated with this system.

Ion exchange (softening process) is a reversible reaction. Ion exchange softening resins have only a limited capacity for removing hardness (calcium & magnesium). If the volume of water through the resin bed exceeds its capacity, hardness leakage will be detected in the effluent water. Therefore, service runs must be terminated before hardness leakage occurs. When the service run is completed, the resin is treated with sodium chloride (NaCl) to displace the hardness and restore its capacity. This process is termed "regeneration".

How completely softening can be accomplished depends upon several factors. The primary influences are the incoming water, type of resin, and amount of salt. Equally important, secondary influences are the concentrations and flow rates at which NaCl is introduced.

Section 2: Principles Of Ion Exchange

2.1 Ion Exchange Softening Process

In order to understand the softening process of ion exchange, it is first necessary to understand the meaning of the terms which are used in the explanation. Hard Water, Cation Exchanger, and Brine are defined below and used to show how the ion exchange process works.

Hard Water – All natural water contains dissolved impurities, but in widely varying amounts. There is always a balance of cations (+) and anions(-), but in the softening process anions have no effect. Water will be hard if it contains large amounts of calcium (Ca^{++}) and/or magnesium (Mg^{++}) ions.

Brine – Salt which has dissolved in water. Completed brine (100%) saturation contains as much salt as possible in water solution (26% to 27%). Salt – Sodium chloride (NaCl), when dissolved in water splits up (ionizes) into sodium (Na^+) ions and chloride (Cl^-) ions.

Saturated Brine – Contains a large amount of Na^+ and Cl^- ions (concentration is over 200,000 ppm). When used to regenerate a cation exchanger, only the sodium (Na^+) ions are used. The chloride (Cl^-) ions are washed to drain.

Cation Exchanger – A high-capacity bead form polystyrene sulfonate cation resin. These beads have negative (-) electric charge, which attracts and holds the cations, which are positively (+) charged (works like a magnet).

Softening Process – When the bead reaches the exchange capacity of Ca^{++} or Mg^{++} hardness break through the resin bed will increase. The increase in effluent hardness will indicate that the effective capacity of the cation resin has been reached. The cation exchanger must be regenerated to restore it to its original capacity.

Regeneration – Brine is used to regenerate the cation exchanger to its original capacity. Sodium (Na) ions attach to the resin beads forcing the calcium and magnesium ions to release from the resin beads. Once the exchange has taken place the sodium ions are rinsed to drain. The softener is now ready to remove hardness from the water.

2.2 Quality Of Effluent

If the hard water contains less than 500 ppm (about 30 grains) of calcium, magnesium and sodium salts, all expressed as CaCO_3 , it will be found that the effluent from a softener will contain an average of not more than 2 ppm actual total hardness (zero hardness by the soap test). However, as the total cation concentration in the hard water increases above 500 ppm, the average hardness in the effluent will also increase proportionately

The reason for this is that when the sodium salt - those present in the raw water plus those formed by the exchange reactions - are present in high enough concentrations, they cause a "back-regeneration" effect at the same time as the softening process is taking place. This effect prevents as complete a removal of calcium and magnesium as would otherwise be possible.

It is often possible to reduce the average hardness in the effluent below normally expected concentrations, by using a greater amount of salt than usual for regeneration. Normal Softening Cycle - At the start of a normal softening cycle, the hardness in the effluent drops rapidly as the residue of hardness ions left in the bed at the end of the rinse are forced out. The effluent hardness reaches a certain minimum value and remains at approximately this concentration for the major part of the softening run.

2.3 Capacity Of Ion Exchanger

The capacity for the removal of calcium and magnesium depends mainly upon the type of ion exchanger which is used. It is further influenced by the amounts of hardness and sodium ions in the raw water, and by the amount of salt used for regeneration.

Raw Water - The effect of the amounts of hardness and sodium ions in the raw water, is expressed in terms of compensated hardness. The hardness of the raw water is considered to be greater than it actually is for capacity determinations, whenever: (a) the total hardness is greater than 400 ppm (as CaCO_3), or (b) the sodium salts are over 100 ppm as (CaCO_3). This "greater-than-actual" hardness is referred to as compensated hardness.

Salt Dosage - The capacity, which will be obtained from a cation exchanger, is also determined by the amount of salt used during regeneration. The grains of hardness, which can be removed by each cubic foot of ion exchange, resin increases as more salt is used for regeneration.

At the same time, the efficiency of salt usage decreases with the higher regenerant dosages. That is, a greater number of grains of hardness are removed for each pound of salt used at the lower salt dosages, (and consequently, at the lower capacities). Thus, greater economy may be obtained at the expense of the number of gallons of water softened between regenerations.

Calculation Of Capacity - To determine the capacity of any cation exchanger, follow the procedure outlined below:

From the analysis of the raw water, determine the actual total hardness as the sum of the calcium and magnesium concentrations expressed as CaCO₃. If necessary, calculate the compensated hardness in accordance with the formula given above.

Express parts per million (ppm) of total hardness as grains per gallon by means of the following conversion formula:

PPM / 17.1 = grains per gallon (gpg)

2.4 Regeneration Steps

Regeneration is a process by which ions are stripped from the exhausted resin bed and its ion removal ability is restored. All exchangers, ranging from a simple water softener to a complex mixed bed deionizer go through four basic regeneration steps. There may be variations in flow rates; types of regenerating chemicals and regenerant concentrations but these general steps are as follows:

Backwash - Water flow is reversed so that it passes upward through the resin bed. Flow rates are sufficiently high to expand (fluidize) and to agitate the bed without washing large resin particles out of the tank. This action relieves any compaction that may have occurred during the service run. In addition, very fine resin fragments that can form during normal service are washed to drain. Proper backwash is essential to good exchanger performance. A compacted bed can develop high-pressure losses during service, which, in turn, can lead to flow channeling problems.

Brine In - A brine solution is passed slowly through the resin, displacing the exchanged ions and discharging them to drain. Proper control of flow rate and brine concentration is important to insure high regeneration efficiency. The amount of salt that is used depends upon the allowable hardness leakage for any given water supply and the desired resin operating capacity.

Displacement Rinse (Slow Rinse) - After all of the brine has been introduced into the resin bed, water continues to flow at approximately the same low flow rate. This slowly displaces the salt from the free space above the bed and from the void volume between resin particles, insuring that it is utilized to maximum efficiency.

Final Rinse - The final step in regenerating is important in that it will displace any salt left in the exchanger vessel prior to returning to service.

Section 3: Installation, Loading & Start Up Procedures

3.1 *Installation of Equipment*



1. Before beginning installation, review the following instructions to familiarize yourself with the general placement of the equipment.
 2. The operating pressure is between 30 to 100 psi. If pressure is higher than 100 psi, then a pressure regulator must be installed.
 3. The operating temperature is between 35 to 100 degrees F.
 4. Locate the equipment in the specified location. When setting the equipment, install on level concrete pad if possible. Level equipment as required.
 5. Equipment should be located near a floor drain. The floor drain should be adequate in size to handle the softener backwash flow rate.
 6. Interconnecting piping and shut off valves of equipment should be installed per local plumbing codes by a certified plumber.
 7. Unions to be installed in the drain line for cleaning of the backwash flow control. Do NOT reduce the drain line pipe size, or install a manual shut off valve. Provide an air gap in the drain line in accordance with local plumbing codes.
 8. Before installing any flow meters, read the instruction manual on proper installation of the sensor. Many flow meters must be installed in a certain way to operate properly.
 9. Once installed close all manual shut off valves.
 10. Brine tank should be located near the softeners, installed on a smooth flat surface. If not the brine tank should be placed on a smooth piece of exterior plywood and level.
 11. Once the brine tank has been set in place, remove the lid and check that the brine well is in a vertical position. If the brine tank is equipped with a brine valve/float assembly, remove and check to make sure the brine float setting is correct (See Section 7 – Brine Float Setting). The float will have a certain setting depending on the amount of salt used per regeneration. If incorrect adjust float to proper setting.
 12. Place brine valve into brine well and set all the way to the bottom of the brine tank.
 13. Fill brine tank with approximately 13-19 inches of water. The water level should be approximately half to the height of float setting.
-
-

3.2 Loading Gravel & Resin

1. Before loading the gravel, check the lower distributor for possible damage from shipping. Making sure all laterals are in proper location. Do **NOT** proceed with loading if any damage is evident.
2. Once the distributor is checked out ok, plug the end of the distributor tube with a PVC cap/plug, clean rag or tape to keep the gravel and resin out of the center of the riser.
3. Fill the tank with approximately 1/4 - 1/3 full of water. The water will act as a buffer when loading the gravel and prevent any damage to the lower distributor.
4. Determine the amount of gravel and resin required for each tank. **When coarse, medium and fine gravels are specified, add in that order.** Slowly pour the gravel into the tank. Try to keep it as level as possible.

(Not all systems have multiple sizes of gravel)

5. Once the gravel has been loaded. Slowly pour the determined amount of resin into the tank. Try to keep it as level as possible.
6. Flush the tank opening with water to clean resin beads from the top of the tank. Then, remove the cap, plug, rag or tape from the distributor pipe. Apply a light coat of approved lubricating silicone to the top edge of the pipe. **(DO NOT USE PETROLIUM LUBRICANTS, ie. Vaseline)**
7. Finish filling the tank with water, up to the top. This will eliminate air space and prevent excessive air – head pressure when the water conditioner is pressurized.
8. Once completed, lubricate the o-ring and carefully install the control valve being careful not to cross thread the valve into the tank, do not overtighten.
9. Keep power off until final checkout procedure is completed.

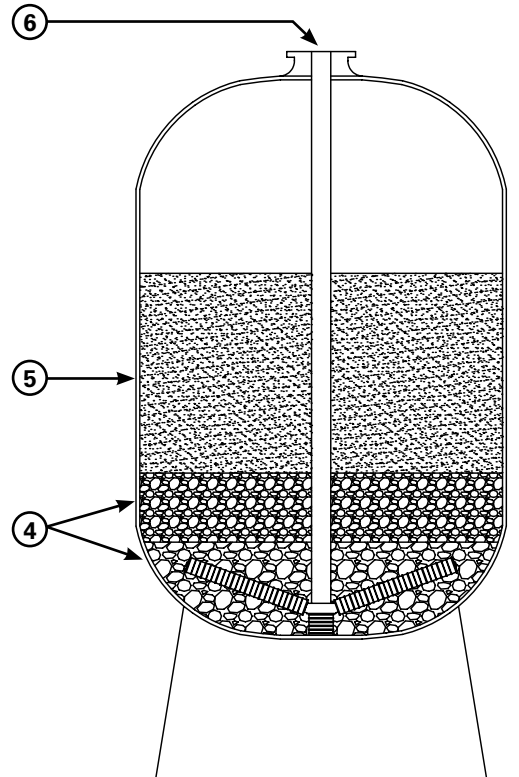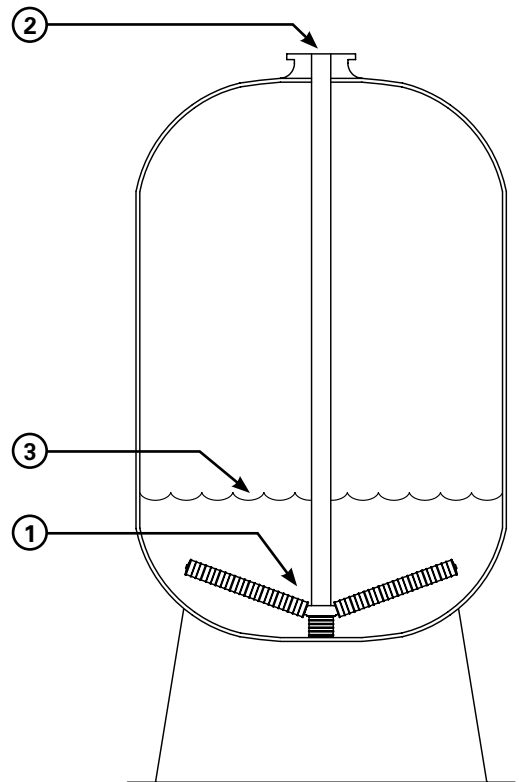

3.3 Start-Up Procedures

1. Once the piping and installation completed, and with the mineral in the tank, proceed with the following.
 2. Open the manual by-pass valve. The manual inlet and outlet valves are to remain closed.
 3. Plug electrical power of the main controller to a wall outlet (120v)
 4. The main controller is a Fleck NXT2. The controller is now ready to be programmed. See Section 8. Familiarize yourself with the proper manual, on proper wiring and programming procedure for your specific controller.
 5. Once the programming is completed, manually set the valve unit into backwash. Slowly open the manual inlet valve. **DO NOT OPEN INLET VALVE COMPLETELY.** (Full flow of water could cause loss of resin) Water will enter in the bottom of the mineral tank, causing any air to expel from top to the drain. Continue to slowly fill until all the air has expelled from the tank and only water flows to drain.
 6. When only water flows to drain, open manual inlet valve completely and continue backwashing until water is clear from any color.
 7. Manually set the unit through regeneration one step at a time. When doing this make sure the piston completely comes to a stop before proceeding to the next step.
 8. Fill brine tank with proper amount and type of salt recommended.
 9. Close the manual by-pass valve and open manual outlet valves. The system is ready for service.
-

Section 4: Operating & Regeneration Procedures

4.1 Normal System Operation

The system is designed for fully automatic operation. Service runs will automatically terminate when an exhaustion end-point is reached.

Although it should not be absolutely necessary to observe every regeneration, Operators should periodically witness a complete cycle to make sure that critical flow rates and steps have not gotten out of adjustment.

Daily

Date and Time

Meter Reading

Outlet Hardness

Inlet Hardness

Inlet and outlet pressure gauge readings; calculated pressure drop

Record Salt Usage

Miscellaneous

All of this information can be invaluable in detecting if something is going wrong, or when trouble shooting. High-pressure drop during the run can be symptomatic of buildup of suspended solids on the bed or excess breakage of resin beads. Short runs or higher than normal effluent hardness could be caused by resin fouling. This could be caused by malfunction during regeneration or even a contaminated batch of salt.

4.2 Multi-Port Valve Operation

(See Section 8 – Fleck 2900s Control Manual)

Multi-port valve consist of Fleck 2900s multi-port double piston operated valve. The valve operates with upper and lower piston that moves on a seals and spacer assembly. The upper piston is for regeneration and the lower piston is for service. The piston moves to a certain location, which determines the operation position of the unit.

SERVICE

During service flow, raw water passes through the valve and downflow through the softener up through the distributor tube to service. Service flow continues until the water meter/counter has signaled an end of run and will automatically switch service flow to the other unit and go into regeneration.

REGENERATION

Based on 10 grains/gallon of hardness as CaCO_3 , approximately 3000 gallons of water per cubic foot of resin in the softener can flow before exhaustion of resin.

BACKWASH

Raw water flow is diverted to pass down through the distributor tube and up-flow through the softener. The water expands the bed scrubbing the resin beads and washing any entrapped dirt out to drain. Backwash sequence lasts approximately 15 minutes.

BRINE AND SLOW RINSE

Raw water is directed through the ejector located at the multi-port valve creating a venturi action in the ejector to draw the required amount of brine into the softener. The brine float air check valve shuts off the brine flow when the preset draw down is reached. Raw water continues to the drain slow rinsing the resin for the remainder of the cycle. Brine and slow rinse sequence generally lasts 60 minutes.

FAST RINSE

Raw water passes through the multi-port valve down flow through the softener and out to drain. This sequence removes all remaining brine from the resin and lasts 10 minutes. When the regeneration cycle is completed and the softener goes back into service, raw water will backflow through the ejector refilling the brine tank to its normal level. The brine valve float will control water makeup level.

Section 5: Operator Responsibilities

Operator Maintenance

Long term, reliable system performance depends upon how conscientiously the equipment is operated and maintained. Operator responsibilities should include the following recommended practices:

1. Maintain Operating Logs - Operators should maintain close control of the process by monitoring system performance daily. Effluent hardness, service run lengths and pressure drop should be recorded. Since resins are subject to fouling, decrease in product quality or run length could be the result of fouling. In addition to operating data, log notations should include equipment design changes, or modifications in programmed times. This information can be invaluable if trouble shooting is ever required.
2. Check Regeneration Flow rates - Check and adjust flows during regeneration on a regular basis.
3. Institute, a Program of Preventative Maintenance - Setup a definite schedule for routine maintenance. Typical recommended practices are: annual resin sampling and analysis; and annual inspection, lubrication and/or replacement of diaphragms on all diaphragm valves.

5.2 Salt Specification - Use Salt As Specified.

- a. *Type* - Rock salt or evaporated salt
 - b. *Color* - White to grayish white
 - c. *Composition* - Not less than 98% sodium chloride, with a minimum of calcium and magnesium salts; zero phenolphthalein alkalinity (Alkalinity P); no grease, fat, or oil content
 - d. *Fineness* - Softeners using polyethylene brine tanks, with no gravel in the bottom, must use an extra coarse grade of rock salt.
 - e. *Solubility* - The salt should dissolve rapidly without packing, to form a clear solution.
-
-

Section 6: Trouble Shooting

6.1 General

The most common system failures are either "poor water quality" or "short service" run. If the change in performance occurs suddenly –i.e., within a couple of operating cycles, 9 times out of 10 these problems result from:

- a Insufficient regenerating chemical quantity,
- b Poor control of chemical concentrations and/or flow rates,
- c Over-running (over exhausted) resin beds during a service run
- d Flow channeling because of a plugged or failed internal flow distributor.

If however, the change occurs gradually over a period of weeks or months, the problem is more likely due either to a change in feed water mineral content or from fouling of the resins. Under any circumstance, the importance of maintaining Operating Logs cannot be stressed too strongly. Study of the Log will often reveal any trend that might be developing. In the case of fouling, periodic resin analyses are the only way to identify such problems.

General guidelines that will assist in determining common operating difficulties are given below. Often poor performance results because of one or more contributing factors. The recommended approach is to go systematically through the list to see what symptoms apply and then to take corrective action.

6.2 Reduced Capacity Or Poor Effluent Quality

<u>SOURCE OF TROUBLE</u>	<u>POSSIBLE CAUSE</u>	<u>CORRECTIVE ACTION</u>
Change In Chemical Composition Of Raw Water	Higher hardness in raw water	Check hardness by chemical test. If it has changed, compute new capacity and use new meter setting
Softener Being Overrun Consistently	Raw water has more hardness	Check raw water hardness and meter setting. Give unit a "double regeneration
	Meter setting is incorrect	Reset meter per manual
Incorrect Chemical Test Results	Test procedure in error	Follow instructions carefully
	Chemicals for test causing error	Replace weak or contaminated test solutions
Meter Slippage	Worn or damaged meter	Replace or repair as necessary

Inadequate Regeneration	Using a weak (less than 22 Be) brine solution	Recharge at required times Use salt which meets specification
	Not using enough salt	Use correct amount of dilution water Check text for specified amount. Use correct saturated brine draw (or pumpage)
Loss Of Ion Resin	Surges during backwash	Install pressure regulator
		Replace lost ion exchanger resin
*Fouling Of Ion Resin	Oxidized iron (Fe) or manganese (Mn) coating resin	If iron & manganese are in oxidized form at source, provide filter to remove. If water supply is clear when first drawn (Fe & Mn are in soluble form) eliminate any air leaks from suction piping. Do NOT feed chlorine or other oxidizing chemicals before softening the water
	Organic matter (slime) coating resin	Provide treatment to destroy organic matter
Damage To Ion Resin	High concentrations of chlorine (or other oxidizing agents) in water.	Add reducing agent (such as Sodium Sulfite) or otherwise remove
Channeling - caused by:		
1. Dirty or packed bed	Backwash rate too low	Adjust controller to correct rate
	Dirty inlet water or backwash water	May require pretreatment
2. Gravel hills, tipped bed or potholes	Careless placement of supporting bed	Inspect and probe bed
	Surges during backwash	Install pressure regulator
	Air in backwash water.	Eliminate air leaks and cause of surges

*NOTE: It is sometimes possible to restore a fouled bed to its original condition, or very nearly so.


6.3 Increase Pressure Lose Or Decrease In Flow Rate

Dirty Or Packed Bed - See above for possible causes and corrective actions.


Restricted Flow – Obstruction in meter, piping or valves. Inspect and clean as required.

Section 7: Softener System Drawings & Specifications


7.1 Typical System 5 Duplex Interlock Unit Installation

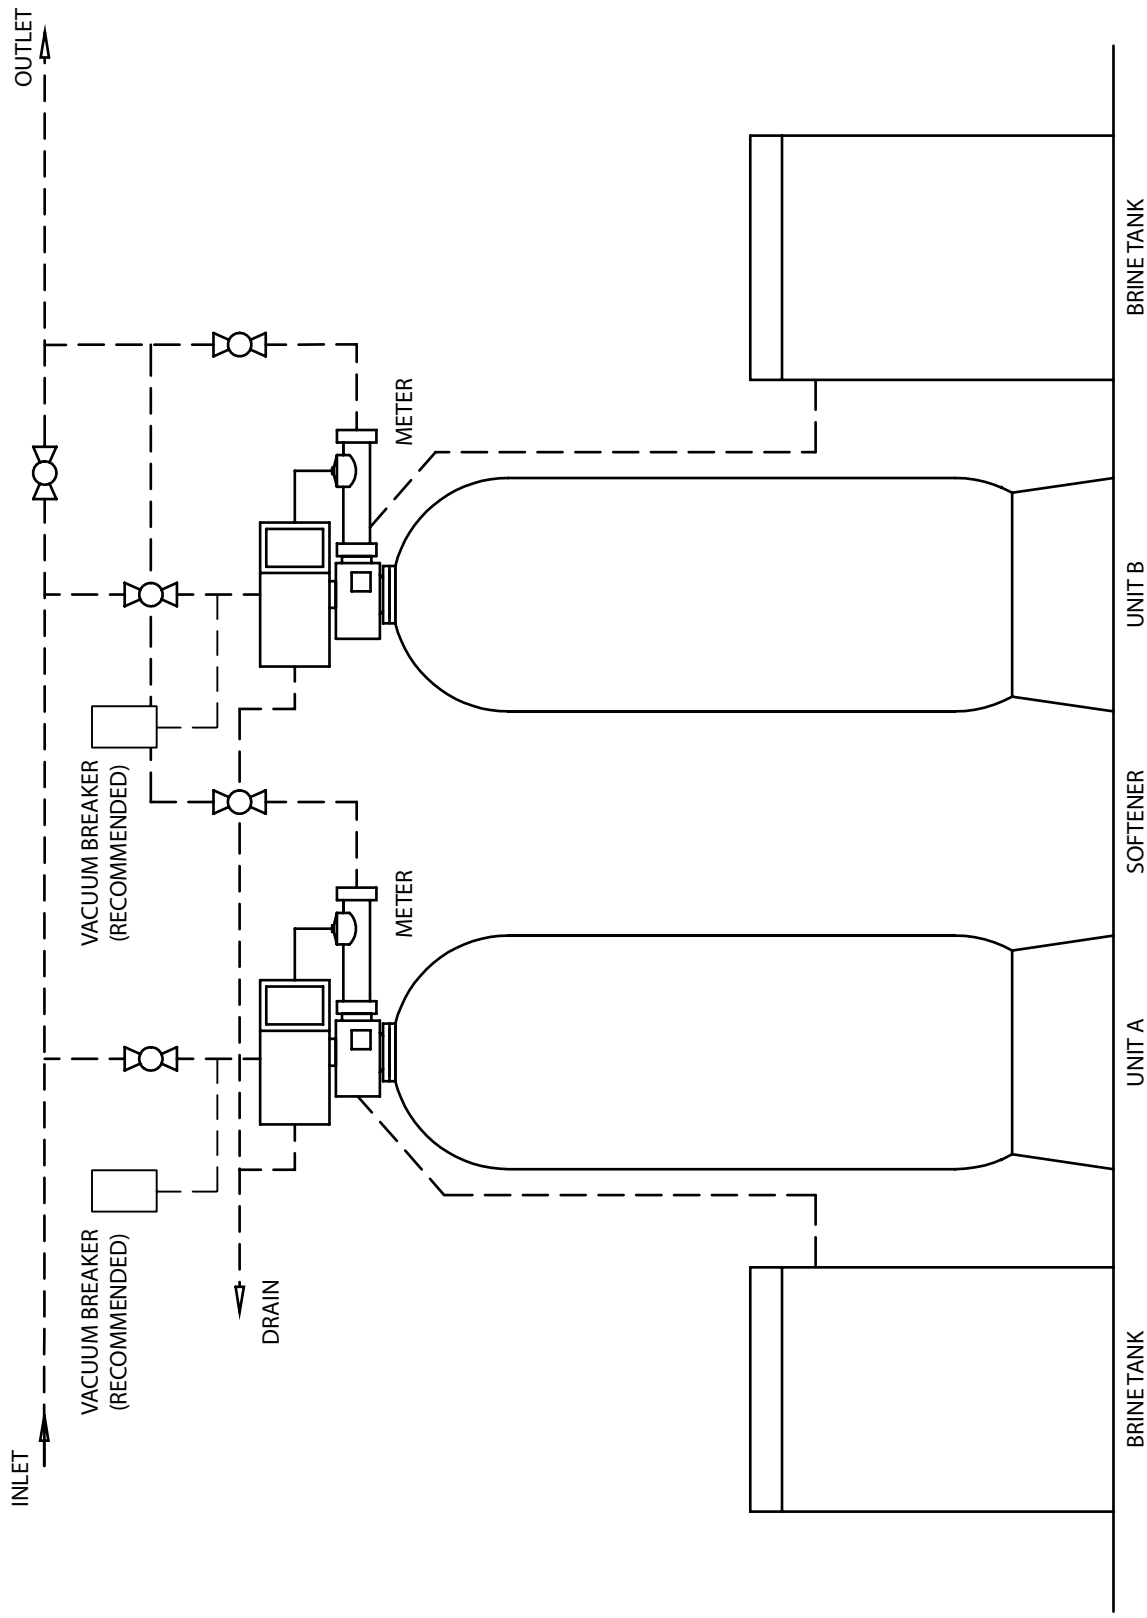


7.2 Typical System 6 Duplex Parallel Unit Installation

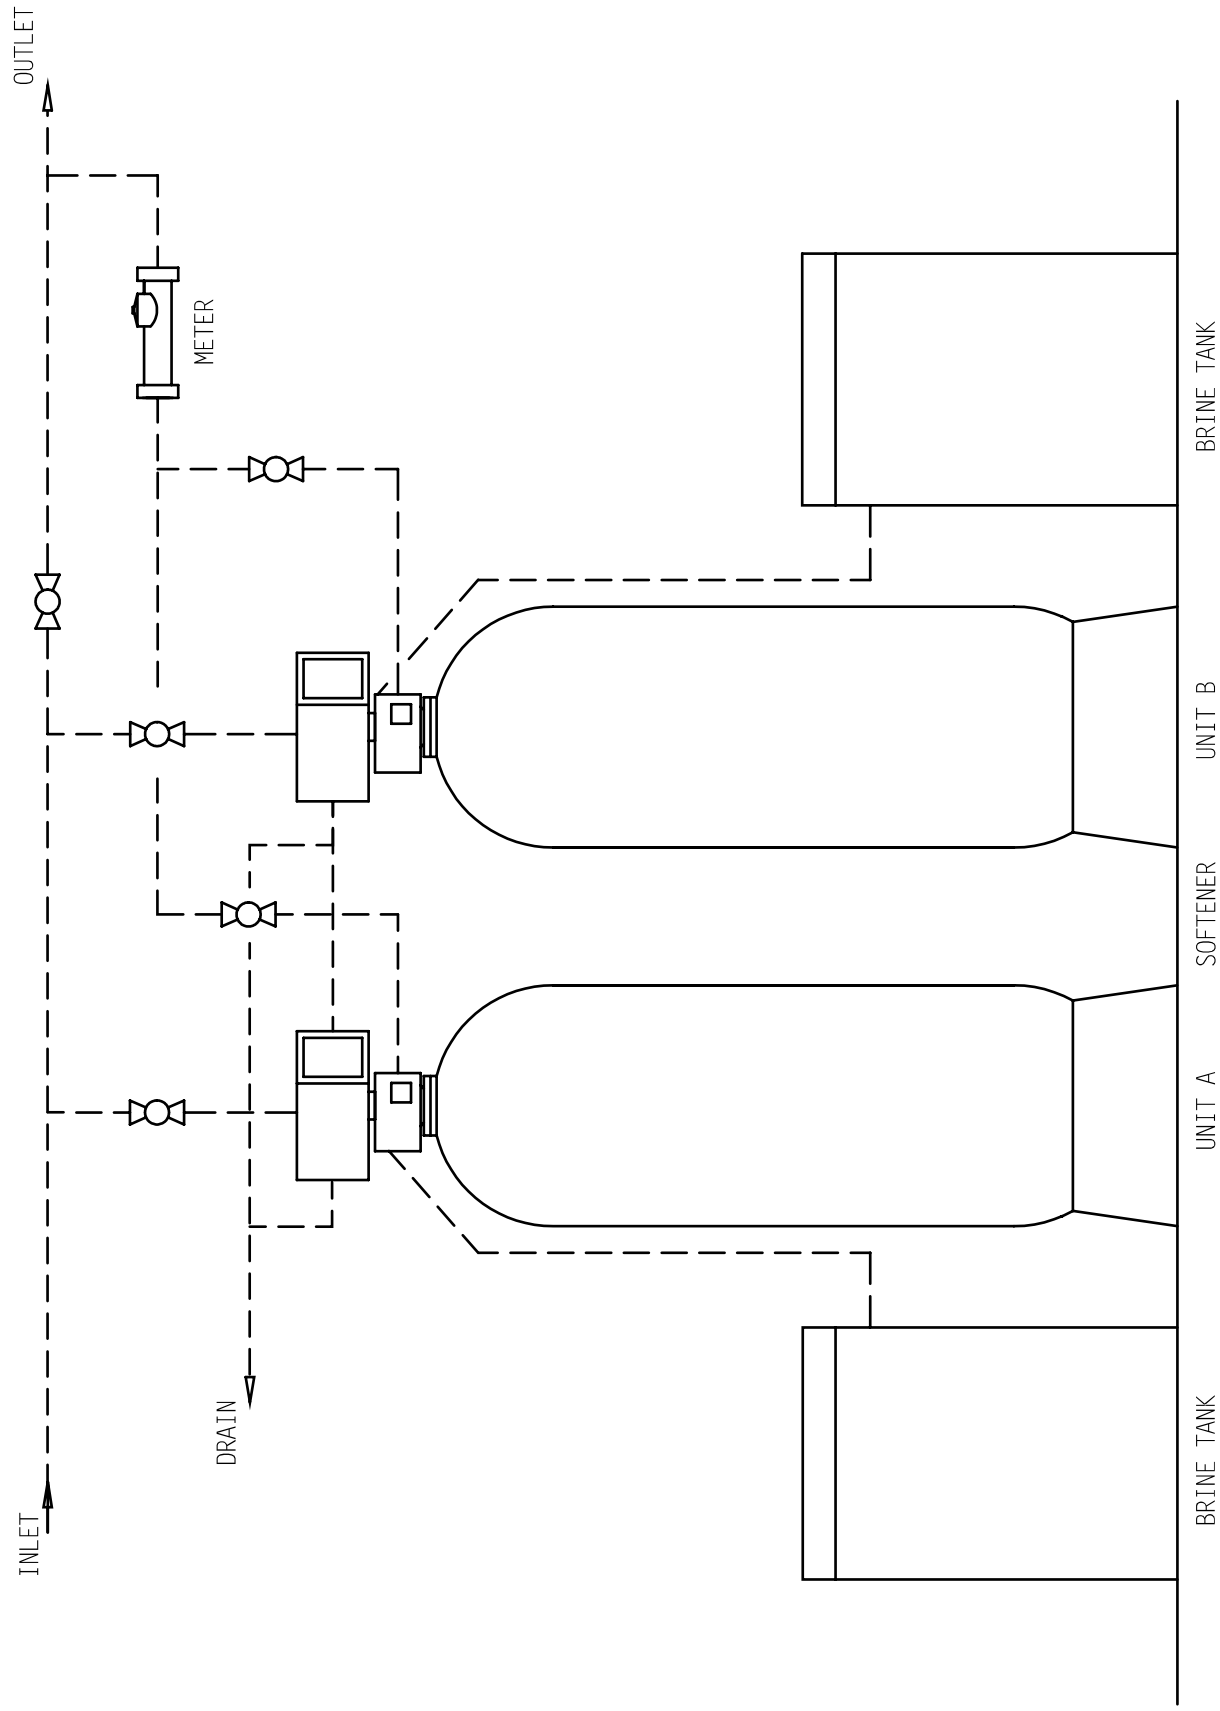


7.3 Typical System 7 Duplex Alternating Unit Installation

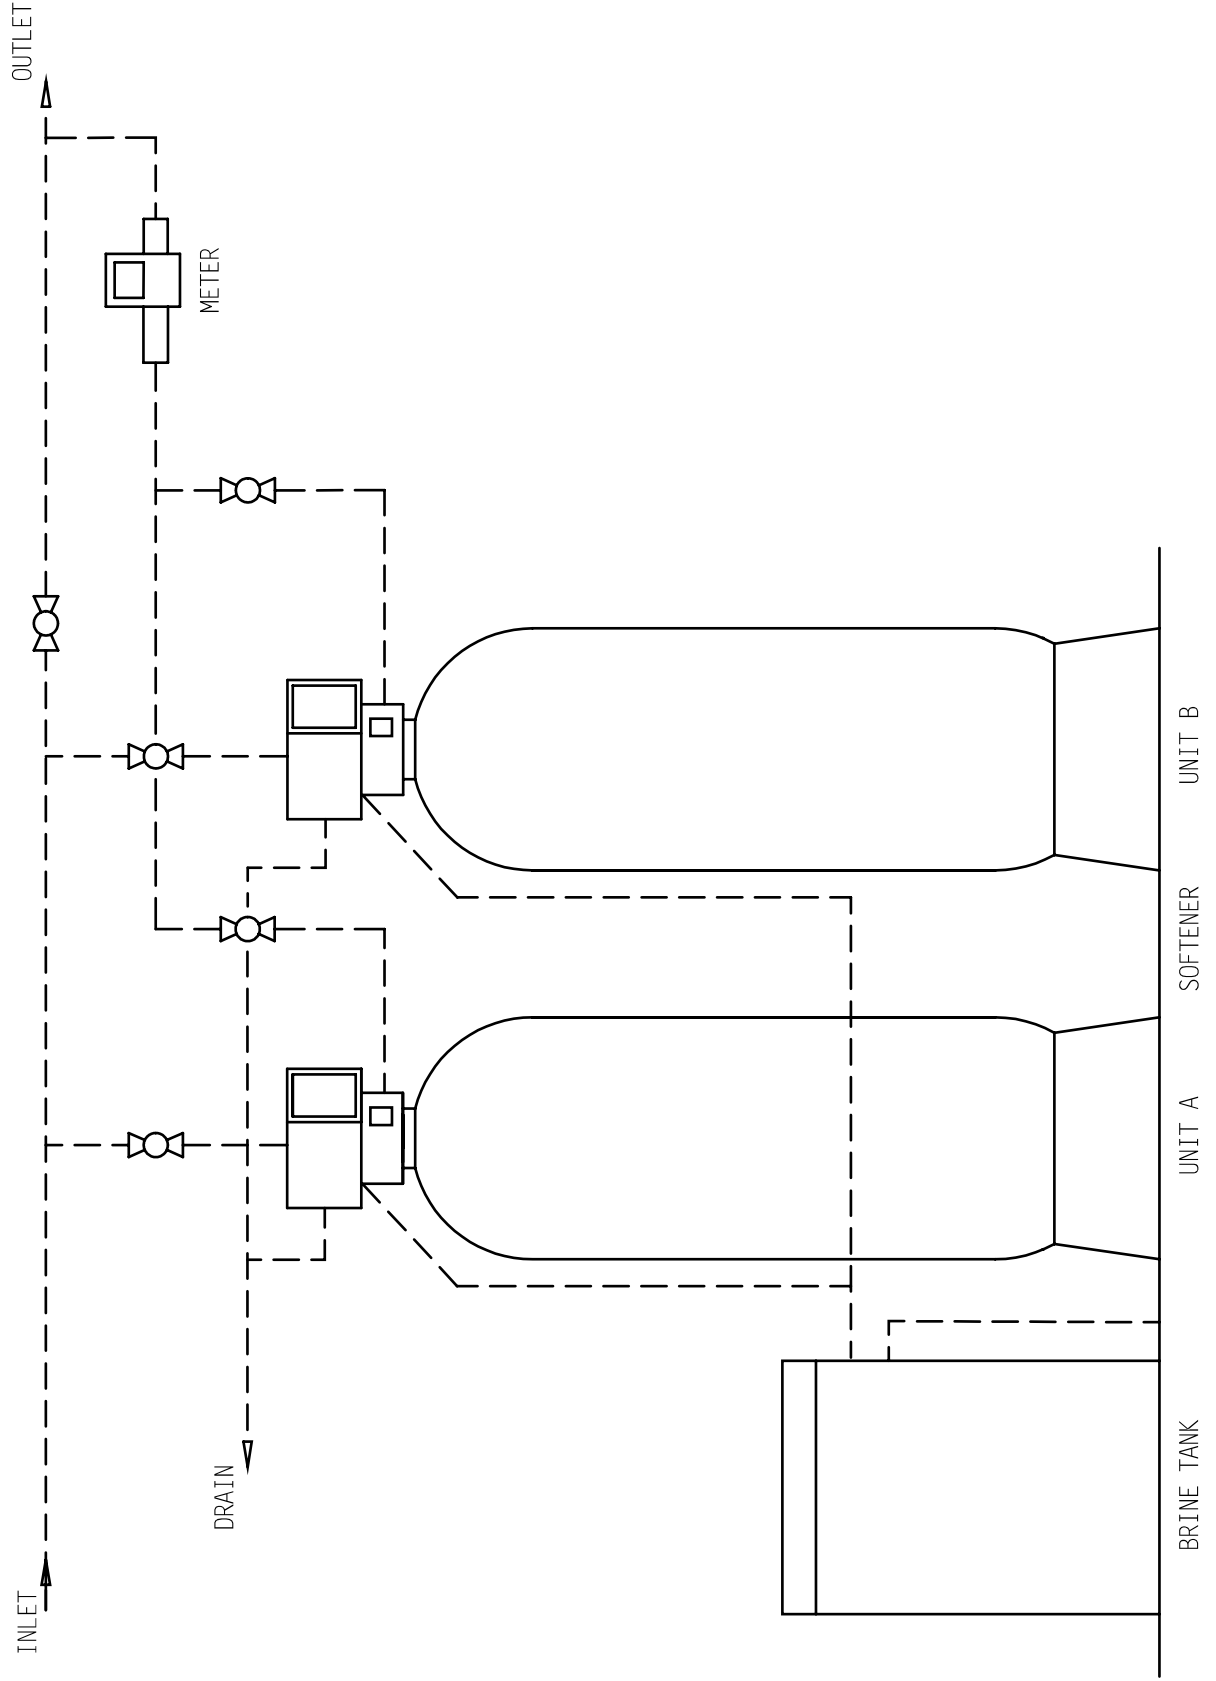

7.4 Typical System 9 Triplex Alternating Unit Installation 2 Units in Service, 1 Unit is Standby

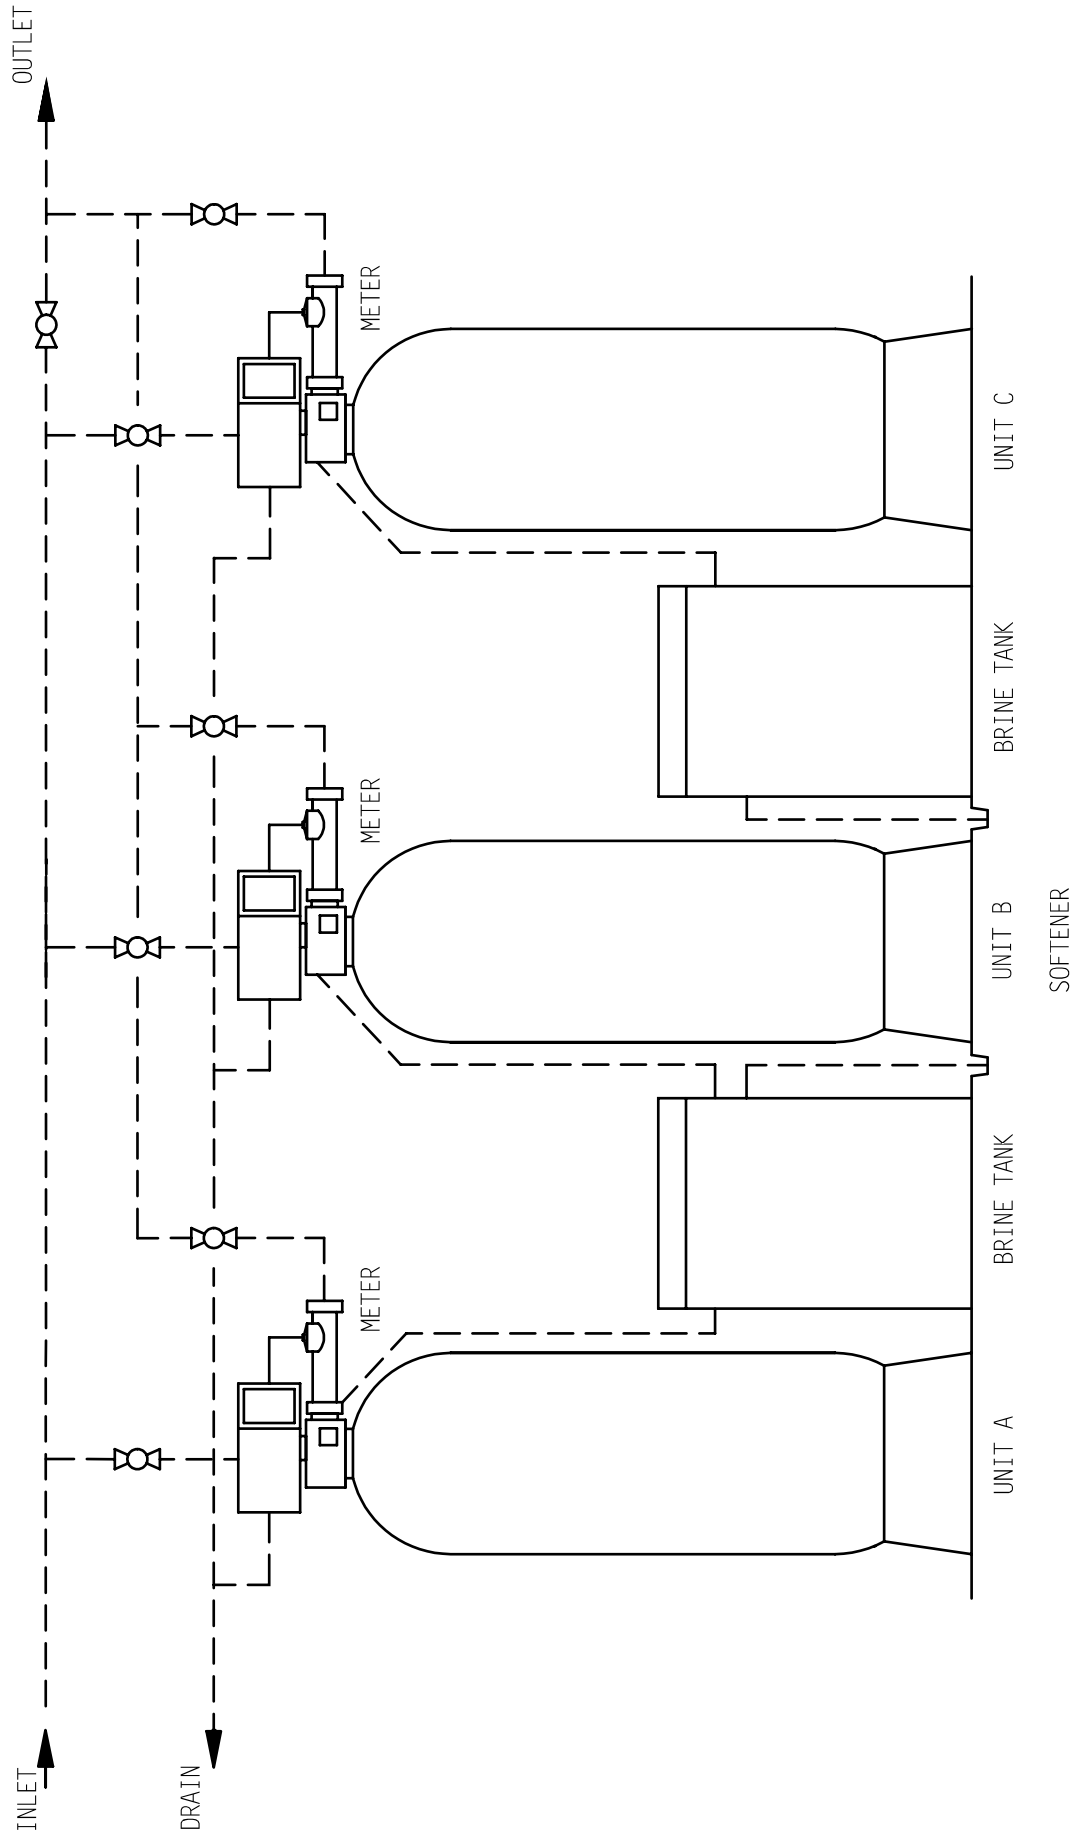

7.5 Typical System 14 Twin Progressive Unit Installation

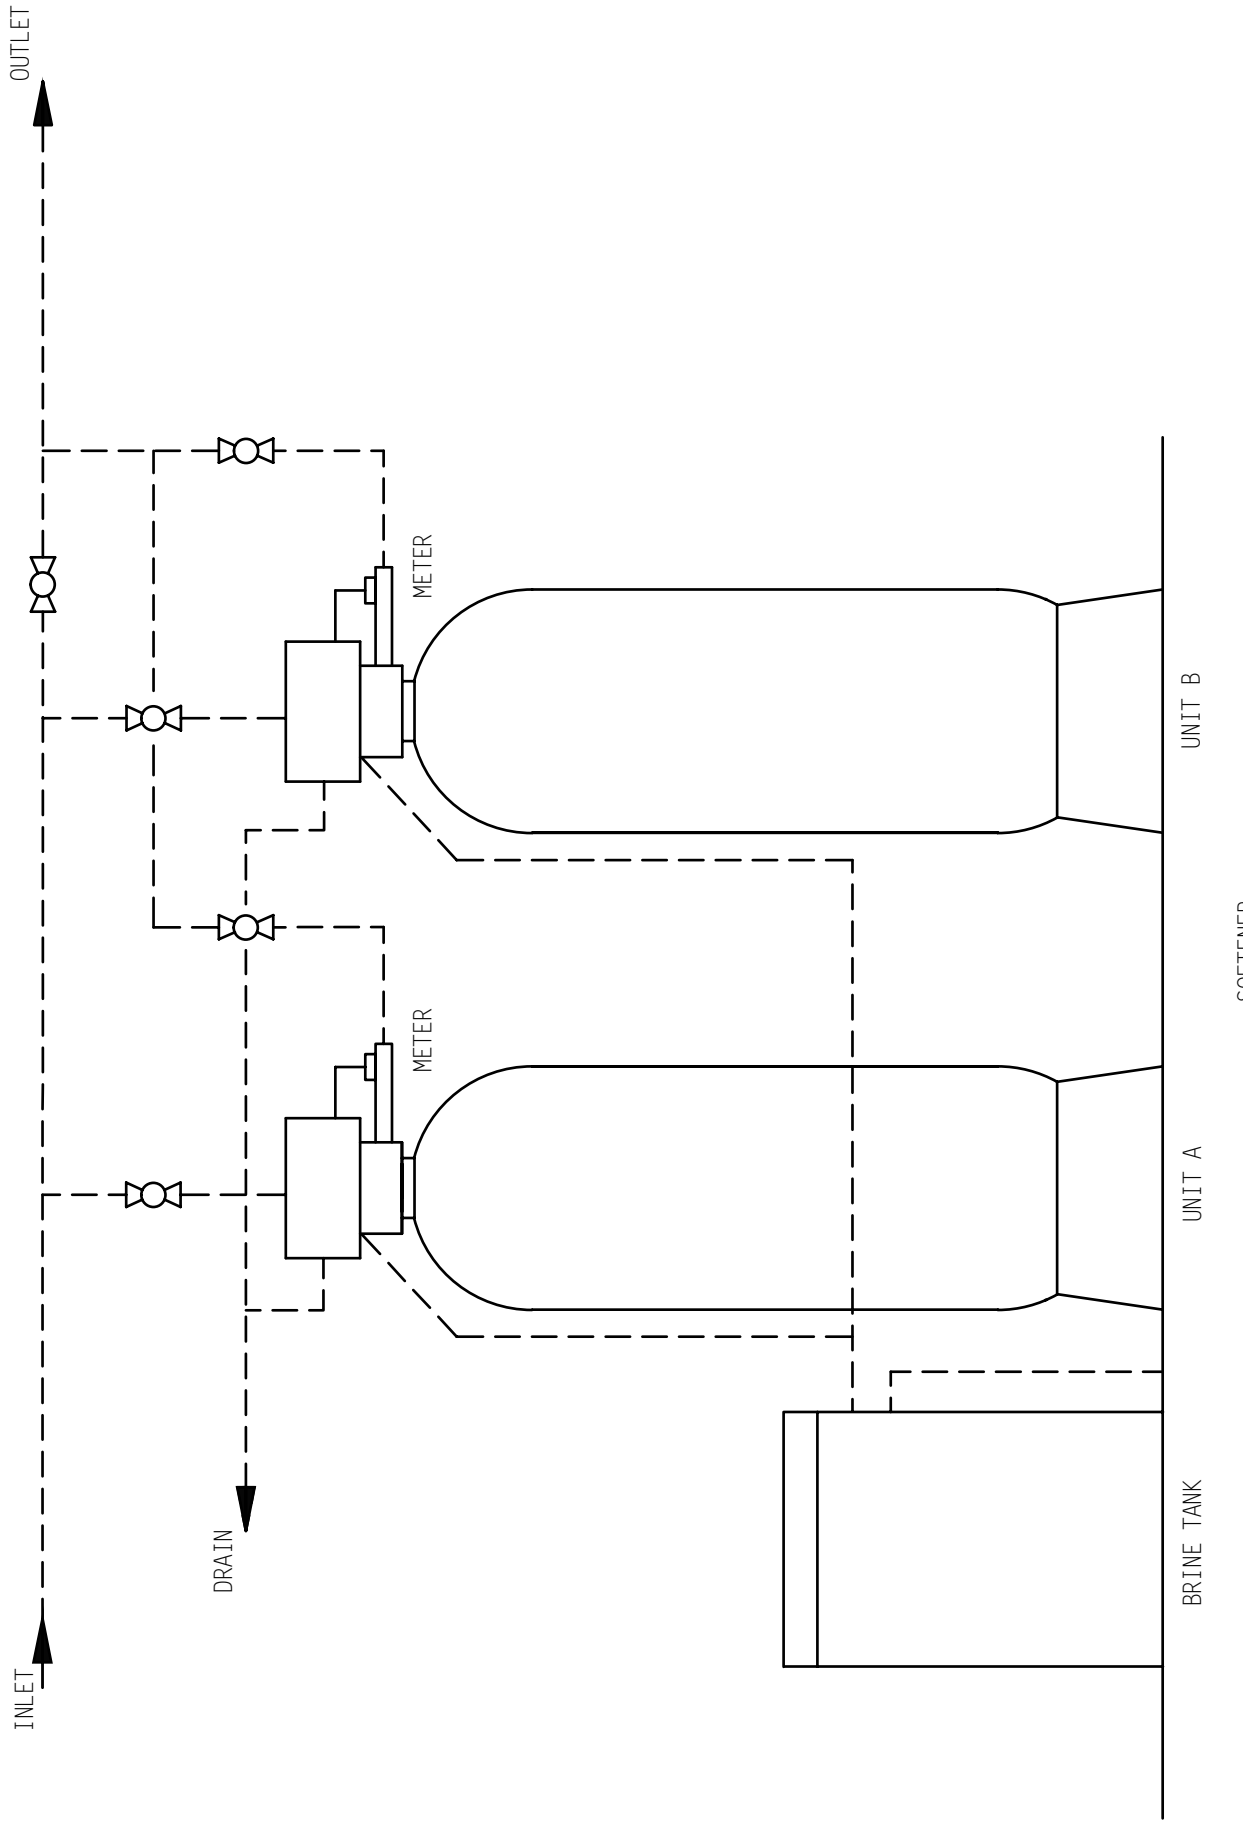

7.6 Specifications

Specifications						
Model	120,000	150,000	210,000	300,000	450,000	600,000
Capacity (1)	120,000	150,000	210,000	300,000	450,000	600,000
Capacity (2)	96,000	120,000	168,000	240,000	360,000	480,000
Media Tank Size	16" x 65"	18" x 65"	21" x 62"	24" x 72"	30" x 72"	36" x 72"
Resin, Cubic Feet	4	5	7	10	15	20
Resin, Pounds	200 #	250 #	350 #	500 #	750 #	1000 #
Gravel Underbed, 1/4" x 1/8"	75 #	100 #	50 #	100 #	100 #	150 #
Gravel Underbed, 1/2" x 1/4"	n/a	n/a	100 #	150 #	250 #	350 #
Max Service Flow Rate, GPM (3)	57	62	77	95	140	140
Min Service Flow Rate, GPM	40	50	55	60	75	100
Backwash Flow Rate, GPM	7	9	12	15	25	35
Backwash, Minutes	10	10	10	10	10	10
Backwash, Pins	5	5	5	5	5	5
Brine Draw and Rinse, Minutes	60	60	60	60	60	60
Brine Draw and Rinse, Holes	30	30	30	30	30	30
Rapid Rinse, Minutes	10	10	10	10	10	10
Rapid Rinse, Pins	5	5	5	5	5	5
Salt Required (1)	60 #	75 #	105 #	150 #	225 #	300 #
Salt Required (2)	40 #	50 #	70 #	90 #	135 #	180 #
Refill Time, Minutes (1)	16	18	18	26	16	18
Refill Time, Holes (1)	8	9	9	13	8	9
Refill Time, Minutes (2)	12	12	12	16	10	14
Refill Time, Holes (2)	6	6	6	8	5	7
Return To Service, Minutes	4	4	4	4	4	4
Return To Service, Pins	2	2	2	2	2	2
Brine Line Flow Control, GPM	1.2	1.5	2	2	5	5
Injector Size	# 3	# 3	# 4	# 4	# 5	# 6
Injector Color	Yellow	Yellow	Green	Green	n/a	n/a

Notes:

(1) - At 15 Pounds Per Cubic Foot yields 30,000 Grains Capacity Per Cubic Foot.

(2) - At 9 Pounds Per Cubic Foot yields 24,000 Grains Capacity Per Cubic Foot.

(3) - At 15 PSI Pressure Drop.

2" Meter Range

Standard Range, 2" - 21,250 Gallons

Extended Range, 2" - 106,250 Gallons

7.7 Brine Float Settings

Tank Size	Cu. Ft.	Brine Tank	Brine Valve ¹	Salt Deck ²		Brine valve set at ³	
				Yes	NO	9lb/cf.	15lb/cf.
16 x 65	4	24 x 41	454-HF	6"		10"	18"
					X	16"	24"
18 x 65	5	24 x 41	454-HF	6"		14"	24"
					X	20"	30"
21 x 62	7	24 x 41	454-HF	9"		19"	33"
		24 x 50			X	28"	—
24 x 72	10	30 x 48	454-HF	9"		17"	29"
					X	25"	38"
30 x 72	15	30 x 48	454-HF	9"		26"	44"
				X	38"	—	
30 x 72	15	39 x 48	454-HF	9"		14"	25"
				X	23"	34"	
36 x 72	20	39 x 48	454-HF	12"		18"	39"
				X	30"	—	
36 x 72	20	42 x 60	454-HF	9"		17"	30"
				X	26"	39"	
48 x 72	40	50 x 60	454-HF	12"		29"	—
				X	37"	—	
48 x 72	40	60 x 60	454-HF	12"		—	26"
				X	26"	38"	

Notes:

- 1 - Brine Valve Clack 454 Hi-Flow – 3/4" connection
- 2 - Salt deck height as noted.
- 3 - Float setting from bottom of brine tank.




454 3/4" High Flow Brine Valve

454 3/4" HIGH FLOW BRINE VALVE — Today's larger commercial brine valves demand higher brine draw and refill rates. Building upon the original 454's design, the 454 3/4" High Flow has improved flow characteristics allowing brine draw up to 10 gallons per minute and refill rates up to four gallons per minute. A flow diffuser and heavier float reduces the potential of premature checking. 36" and 54" Float Rods are available.

Please specify length as listed below:

H7070-36HF - 454 3/4" High Flow Brine Valve
(36" Rod)

H7070-54HF - 454 3/4" High Flow Brine Valve
(54" Rod)

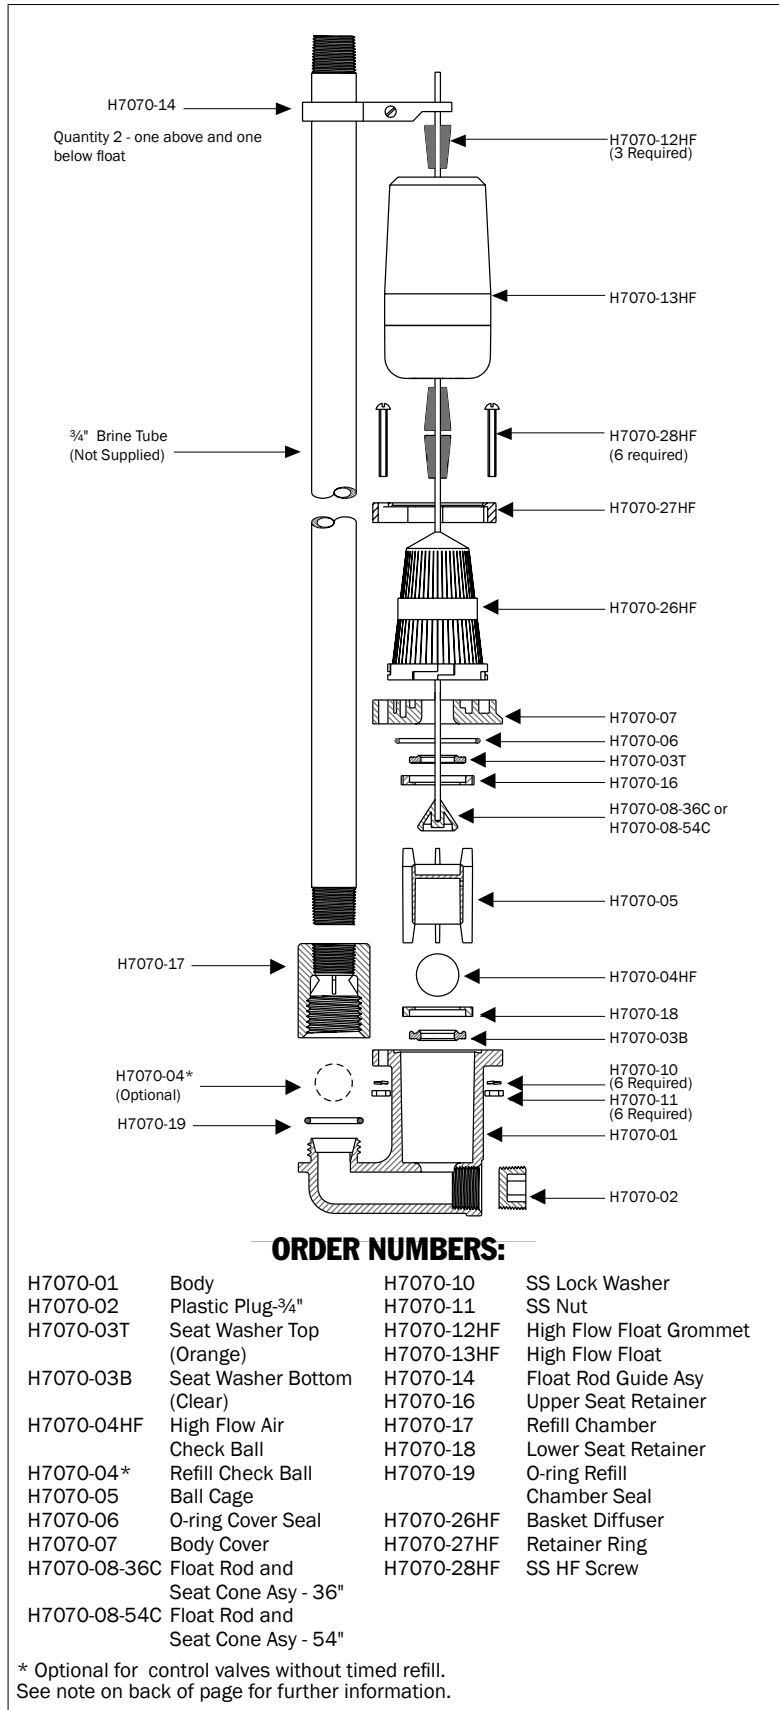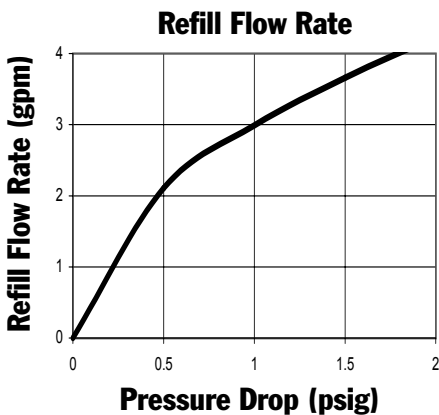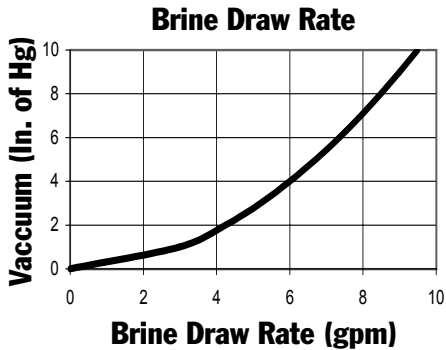

NOTE: The 454 3/4" High Flow Brine Valve is designed for salt brine only. It will also fit inside a brine well that is 5" or larger.

454 High Flow Brine Valve Installation Guide

1. Use Teflon tape only on threaded plastic pipe connections. Many liquid or paste pipe sealing products contain compounds that may cause plastics to crack with time.
2. PVC brine pipe is recommended for use with these valves as it is non-corrosive and threads easily.
3. After the proper float setting has been determined and the height set, place the float rod guides close to the float (but not as to hinder float operation), adjust to position the float directly above the brine valve and tighten securely.
4. Position the assembly securely in the brine well and check to see that there is no interference with the float operation.

NOTE: This brine valve is intended to be used as a safety float only for timed brine systems at refill rates up to 4 gpm. High refill flow rates can cause the brine valve to close prematurely. Repeated float closures at high refill rates can cause “water hammer,” which may damage the plumbing. A refill check ball is available for use with non-timed refill systems. To install the refill check ball, unscrew the refill chamber (H7070-17), insert ball, and thread refill chamber back onto the body of the valve.

Description: 454 Brine Valve Seal Replacement Kit

	Description
H7070-03T	Seat Washer Top (Orange)
H7070-03B	Seat Washer Bottom (Clear)
H7070-06	O-ring Cover Seal
H7070-16	Upper Seat Retainer
H7070-18	Lower Seat Retainer
H7070-19	O-ring Refill Chamber Seal


7.8 Commercial/Industrial Rotationally Molded Brine Tanks

Commercial and industrial water softeners require a large volume of brine during each regeneration. From a capacity of 95 gallons to 500 gallons, our Rotationally Molded Brine Tanks are built to last. Molded out of durable, chemically resistant high density polyethylene, their 1/4" seamless walls won't bulge. All tanks and covers are black. Rotationally Molded Brine Tanks are strong enough to handle your toughest brine requirements.

Also available:

24" Plastic Grids

30" Plastic Grids

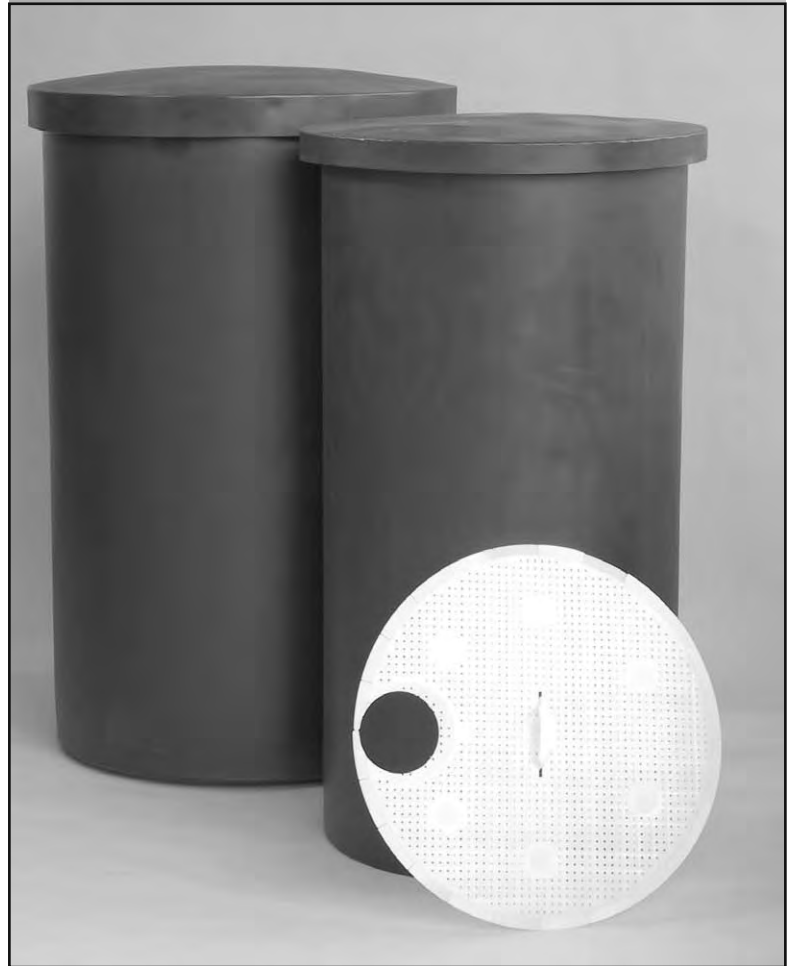

TANK SIZE	ORDER NUMBER	DIAMETER	HEIGHT	SALT CAPACITY	VOLUME	WEIGHT
24 x 48	G22448CB1P00	24"	48"	800 lbs.	95 gal.	30 lbs.
24 x 60	G22460CB1P00	24"	60"	1000 lbs.	115 gal.	32 lbs.
30 x 48	G23048CB1P00	30"	48"	1200 lbs.	145 gal.	48 lbs.
30 x 60	G23060CB1P00	30"	60"	1600 lbs.	180 gal.	56 lbs.
39 x 48	G23948CB1P00	39"	48"	2200 lbs.	250 gal.	67 lbs.
39 x 60	G23960CB1P00	39"	60"	2700 lbs.	300 gal.	80 lbs.
42 x 60	G24260CB1P00	42"	60"	3100 lbs.	350 gal.	84 lbs.
50 x 60	G25060CB1P00	50"	60"	4500 lbs.	500 gal.	107 lbs.



FLECK 2900S

SERVICE MANUAL



TABLE OF CONTENTS

JOB SPECIFICATION SHEET	2
INSTALLATION	3
START-UP INSTRUCTIONS	3
3200 TIMER SETTING PROCEDURE	4
3210 & 3220 TIMER SETTING PROCEDURE	4
3200, 3210, 3220, 3230 REGENERATION CYCLE SETTING PROCEDURE	5
3200 TIME CLOCK TIMER ASSEMBLY	6
3210 METER DELAYED TIMER ASSEMBLY	8
3220 METER IMMEDIATE TIMER ASSEMBLY	10
3230 REMOTE START TIMER ASSEMBLY	12
UPPER ENVIRONMENTAL POWERHEAD ASSEMBLY	14
LOWER ENVIRONMENTAL POWERHEAD ASSEMBLY	16
CONTROL VALVE ASSEMBLY	18
CONTROL VALVE SIDE MOUNT ADAPTER	21
1600 SERIES BRINE SYSTEM	22
1650 BRINE SYSTEM ASSEMBLY	24
1700 BRINE SYSTEM ASSEMBLY	26
1710 BRINE SYSTEM ASSEMBLY	28
2" BRASS METER ASSEMBLY	29
2" PLASTIC METER ASSEMBLY	30
1600 SERVICE VALVE OPERATOR (NEW STYLE)	31
2300 SAFETY BRINE VALVE	32
2310 SAFETY BRINE VALVE	33
2350 SAFETY BRINE VALVE	34
GENERAL SERVICE HINTS FOR METER CONTROL	35
TROUBLESHOOTING	36
WATER CONDITIONER FLOW DIAGRAMS - DOWNFLOW	37
WATER CONDITIONER FLOW DIAGRAMS - UPFLOW	38
FLOW DATA & INJECTOR DRAW RATES - DOWNFLOW	39
ENVIRONMENTAL BACKPLATE DIMENSIONS	40
SYSTEM #4	41
SYSTEM #5 INTERLOCK	41
SYSTEM #6 & #7	42
SYSTEM #4 WIRING	43
SYSTEM #5 WIRING	45
SYSTEM #6 WIRING	46
SYSTEM #7 WIRING	47
1600/1700 SYSTEM NOZZLE & THROAT CHART	49
SERVICE ASSEMBLIES	50

CALIFORNIA PROPOSITION 65 WARNING

⚠ WARNING: This product contains chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.

JOB SPECIFICATION SHEET

Job Number: _____
 Model Number: _____
 Water Hardness: _____ ppm or gpg
 Capacity Per Unit: _____
 Mineral Tank Size: _____ Diameter: _____ Height: _____
 Salt Setting per Regeneration: _____

1. Type of Timer:

- A. 7 Day or 12 Day
- B. Meter Initiated

2. Downflow: Upflow Upflow Variable

3. Meter Size:

- A. 3/4-inch Std Range (125 - 2,100 gallon setting)
- B. 3/4-inch Ext Range (625 - 10,625 gallon setting)
- C. 1-inch Std Range (310 - 5,270 gallon setting)
- D. 1-inch Ext Range (1,150 - 26,350 gallon setting)
- E. 1-1/2 inch Std Range (625 - 10,625 gallon setting)
- F. 1-1/2 inch Ext Range (3,125 - 53,125 gallon setting)
- G. 2-inch Std Range (1,250 - 21,250 gallon setting)
- H. 2-inch Ext Range (6,250 - 106,250 gallon setting)
- I. 3-inch Std Range (3,750 - 63,750 gallon setting)
- J. 3-inch Ext Range (18,750 - 318,750 gallon setting)
- K. Electronic ____ Pulse Count ____ Meter Size _____

4. System Type:

- A. System #4: 1 Tank, 1 Meter, Immediate, or Delayed Regeneration
- B. System #4: Time Clock
- C. System #4: Twin Tank
- D. System #5: 2-5 Tanks, Interlock Mechanical
2-4 Tanks, Interlock Electronic
Meter per unit for Mechanical and Electronic
- E. System #6: 2-5 Tanks, 1 Meter, Series Regeneration, Mechanical
2-4 Tanks, 1 Meter, Series Regeneration, Electronic
- F. System #7: 2-5 Tanks, 1 Meter, Alternating
Regeneration, Mechanical
2 Tanks only, 1 Meter, Alternating
Regeneration, Electronic
- G. System #9: Electronic Only, 2-4 Tanks, Meter per Valve, Alternating
- H. System #14: Electronic Only, 2-4 Tanks, Meter per Valve.
Brings units on and offline based on flow.

5. Timer Program Settings:

- A. Backwash: _____ Minutes
- B. Brine and Slow Rinse: _____ Minutes
- C. Rapid Rinse: _____ Minutes
- D. Brine Tank Refill: _____ Minutes
- E. Pause Time: _____ Minutes
- F. Second Backwash: _____ Minutes

6. Drain Line Flow Control: gpm

7. Brine Line Flow Controller: gpm

8. Injector Size#:

9. Piston Type:

- A. Hard Water Bypass
- B. No Hard Water Bypass

INSTALLATION

Water Pressure

A minimum of 20 pounds (1.4 bar) of water pressure is required for regeneration valve to operate effectively.

Electrical Facilities

An uninterrupted alternating current (A/C) supply is required.

NOTE: Other voltages are available. Please make sure your voltage supply is compatible with your unit before installation.

Existing Plumbing

Condition of existing plumbing should be free from lime and iron buildup. Piping that is built up heavily with lime and/or iron should be replaced. If piping is clogged with iron, a separate iron filter unit should be installed ahead of the water softener.

Location Of Softener And Drain

The softener should be located close to a drain to prevent air breaks and back flow.

Bypass Valves

Always provide for the installation of a bypass valve if unit is not equipped with one.

CAUTION Water pressure is not to exceed 125 psi (8.6 bar), water temperature is not to exceed 110°F (43°C), and the unit cannot be subjected to freezing conditions.

Installation Instructions

1. Place the softener tank where you want to install the unit making sure the unit is level and on a firm base.
2. During cold weather, the installer should warm the valve to room temperature before operating.
3. All plumbing should be done in accordance with local plumbing codes. The pipe size for residential drain line should be a minimum of 1/2-inch (13 mm). Backwash flow rates in excess of 7 gpm (26.5 Lpm) or length in excess of 20 feet (6 m) require 3/4-inch (19 mm) drain line. Commercial drain lines should be the same size as the drain line flow control.
4. Refer to the dimensional drawing for cutting height of the distributor tube. If there is no dimensional drawing, cut the distributor tube flush with the top of the tank.
5. Lubricate the distributor o-ring seal and tank o-ring seal. Place the main control valve on tank.


NOTE: Only use silicone lubricant.

6. **▲ IMPORTANT:** For valves equipped with electromechanical timers and stainless steel meters, refer to the Meter Dome and Union Orientation section.
7. Solder joints near the drain must be done prior to connecting the Drain Line Flow Control fitting (DLFC). Leave at least 6 inches (15 cm) between the DLFC and solder joints when soldering pipes that are connected on the DLFC. Failure to do this could cause interior damage to the DLFC.
8. Plumber tape is the only sealant to be used on the drain fitting. The drain from twin tank units may be run through

a common line.

9. Make sure that the floor is clean beneath the salt storage tank and that it is level.
10. Place approximately 1 inch (25 mm) of water above the grid plate. If a grid is not utilized, fill to the top of the air check (Figure 1) in the salt tank. Do not add salt to the brine tank at this time.
11. On units with a by-pass, place in by-pass position. Turn on the main water supply. Open a cold soft water tap nearby and let run a few minutes or until the system is free from foreign material (usually solder) that may have resulted from the installation. Once clean, close the water tap.
12. Slowly place the by-pass in service position and let water flow into the mineral tank. When water flow stops, slowly open a cold water tap nearby and let run until the air is purged from the unit.
13. Plug unit into an electrical outlet.

NOTE: All electrical connections must be connected according to local codes. Be certain the outlet is uninterrupted.

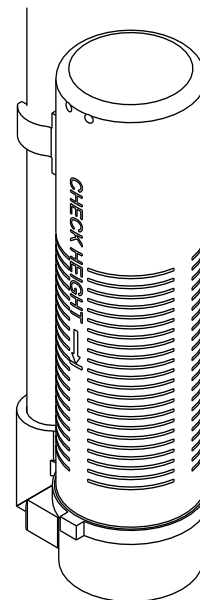

60002 Rev E

Figure 1 Residential Air Check Valve



INSTALLATION *CONTINUED*

Meter Dome and Union Orientation

Control valves outfitted with an electromechanical timer and stainless steel water meter include a special male x female threaded stainless steel union to insure proper installation and operation of the water meter.

⚠ WARNING: The location of this union in relation to the control valve and water meter is critical for proper operation. DO NOT omit or substitute this special union; it positions the meter dome at the correct distance from the control valve and allows re-positioning the water meter dome for proper operation.

1. Apply a suitable thread sealant to the male threads of the union and meter body.
2. Thread the union into the OUTLET port of the control valve, then thread the meter into the union. See illustrations below.
3. Rotate the water meter body so the meter dome is at the 12 o'clock position. Loosen the nut on the union to facilitate this if required. Once in position, tighten the union nut.
4. Connect the meter cable to the open port in the center of the meter dome.
5. Continue with the installation of the control valve.

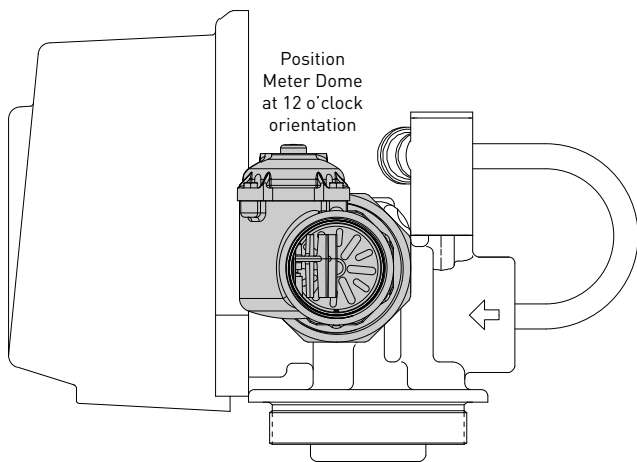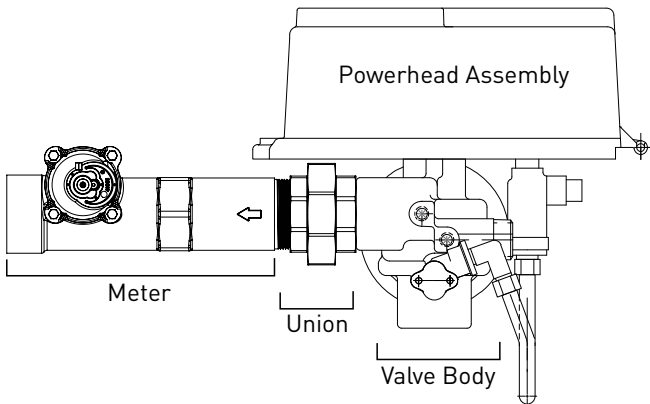

START-UP INSTRUCTIONS

The water softener should be installed with the inlet, outlet, and drain connections made in accordance with the manufacturer's recommendations, and to meet applicable plumbing codes.

1. Turn the manual regeneration knob slowly in a clockwise direction until the program micro switch lifts on top of the first set of pins. Allow the drive motor to move the piston to the first regeneration step and stop. Each time the program switch position changes, the valve will advance to the next regeneration step. Always allow the motor to stop before moving to the next set of pins or spaces.

NOTE: For electronic valves, please refer to the manual regeneration part of the timer operation section. If the valve came with a separate electronic timer service manual, refer to the timer operation section of the electronic timer service manual.

2. Position the valve to backwash. Ensure the drain line flow remains steady for 10 minutes or until the water runs clear (see above).
3. Position the valve to the brine / slow rinse position. Ensure the unit is drawing water from the brine tank (this step may need to be repeated).
4. Position the valve to the rapid rinse position. Check the drain line flow, and run for 5 minutes or until the water runs clear.
5. Position the valve to the start of the brine tank fill cycle. Ensure water goes into the brine tank at the desired rate. The brine valve drive cam will hold the valve in this position to fill the brine tank for the first regeneration.
6. Replace control box cover.
7. Put salt in the brine tank.

NOTE: Do not use granulated or rock salt.

3200 TIMER SETTING PROCEDURE

How To Set Days On Which Water Conditioner Is To Regenerate (Figure 2)

Rotate the skipper wheel until the number "1" is at the red pointer. Set the days that regeneration is to occur by sliding tabs on the skipper wheel outward to expose trip fingers. Each tab is one day. Finger at red pointer is tonight. Moving clockwise from the red pointer, extend or retract fingers to obtain the desired regeneration schedule.

How To Set The Time Of Day



1. Press and hold the red button in to disengage the drive gear.
2. Turn the large gear until the actual time of day is at the time of day pointer.
3. Release the red button to again engage the drive gear.

How To Manually Regenerate Your Water Conditioner At Any Time

1. Turn the manual regeneration knob clockwise.
2. This slight movement of the manual regeneration knob engages the program wheel and starts the regeneration program.
3. The black center knob will make one revolution in the following approximately three hours and stop in the position shown in the drawing.
4. Even though it takes three hours for this center knob to complete one revolution, the regeneration cycle of your unit might be set for only one half of this time.
5. In any event, conditioned water may be drawn after rinse water stops flowing from the water conditioner drain line.

How to Adjust Regeneration Time

1. Disconnect the power source.
2. Locate the three screws behind the manual regeneration knob by pushing the red button in and rotating the 24 hour dial until each screw appears in the cut out portion of the manual regeneration knob.
3. Loosen each screw slightly to release the pressure on the time plate from the 24-hour gear.
4. Locate the regeneration time pointer on the inside of the 24 hour dial in the cut out.
5. Turn the time plate so the desired regeneration time aligns next to the raised arrow.
6. Push the red button in and rotate the 24 hour dial. Tighten each of the three screws.
7. Push the red button and locate the pointer one more time to ensure the desired regeneration time is correct.
8. Reset the time of day and restore power to the unit.

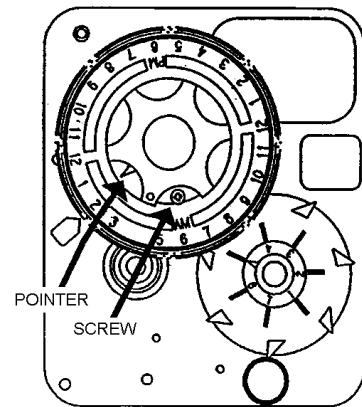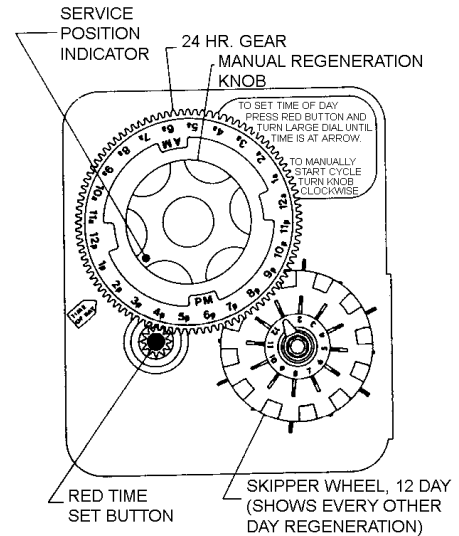

3200 ADJUSTABLE REGENERATION TIMER

IMPORTANT!
SALT LEVEL MUST ALWAYS BE ABOVE
WATER LEVEL IN BRINE TANK

61502-3200 Rev A

Figure 2

3210 & 3220 TIMER SETTING PROCEDURE

Typical Programming Procedure

Calculate the gallon capacity of the system, subtract the necessary reserve requirement and set the gallons available opposite the small white dot on the program wheel gear (Figure 3).

NOTE: Drawing shows 8,750 gallon setting. The capacity (gallons) arrow (15) shows zero gallons remaining. The unit will regenerate tonight at the set regeneration time.

How To Set The Time Of Day

1. Press and hold the red button in to disengage the drive gear.
2. Turn the large gear until the actual time of day is opposite the time of day pointer.
3. Release the red button to again engage the drive gear.

How To Manually Regenerate Your Water Conditioner At Any Time

1. Turn the manual regeneration knob clockwise.
2. This slight movement of the manual regeneration knob engages the program wheel and starts the regeneration program.

3210 & 3220 TIMER SETTING

PROCEDURE *CONTINUED*


- The black center knob will make one revolution in the following approximately three hours and stop in the position shown in the drawing.
- Even though it takes three hours for this center knob to complete one revolution, the regeneration cycle of your unit might be set for only one half of this time.
- In any event, conditioned water may be drawn after rinse water stops flowing from the water conditioner drain line.

Immediate Regeneration Timers

These timers do not have a 24 hour gear. Setting the gallons on the program wheel and manual regeneration procedure are the same as previous instructions. The timer will regenerate as soon as the capacity gallons reaches zero.

NOTE: The program wheel to the left may be different than the program wheel on the product.

NOTE: To set meter capacity rotate manual knob one - 360° revolution to set gallonage.

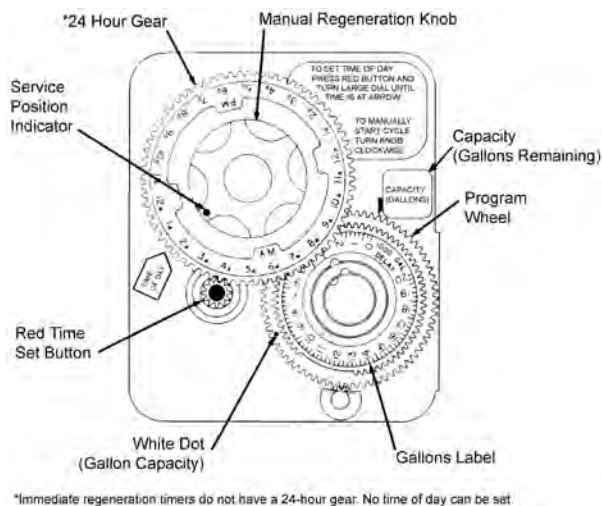

61502-3200 Rev A

Figure 3


3200, 3210, 3220, 3230 REGENERATION CYCLE SETTING PROCEDURE

How To Set The Regeneration Cycle Program

The regeneration cycle program on your water conditioner has been factory preset, however, portions of the cycle or program may be lengthened or shortened in time to suit local conditions.

3200 Series Timers (Figure 4)

- To expose cycle program wheel, grasp timer in upper left-hand corner and pull, releasing snap retainer and swinging timer to the right.
- To change the regeneration cycle program, the program wheel must be removed. Grasp program wheel and squeeze protruding lugs toward center, lift program wheel off timer. Switch arms may require movement to facilitate removal.
- Return timer to closed position engaging snap retainer in back plate. Make certain all electrical wires locate above snap retainer post.

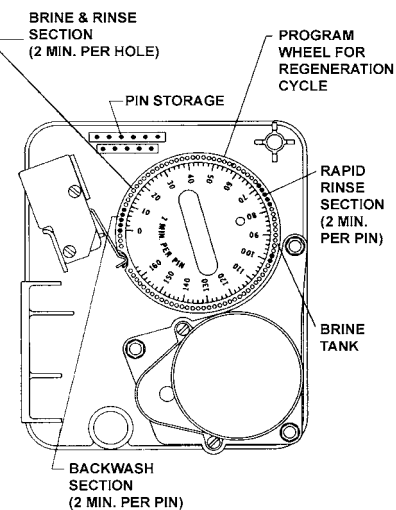

61502-3210 Rev A

Figure 4

Timer Setting Procedure

How To Change The Length Of The Backwash Time

The program wheel as shown in the drawing is in the service position. As you look at the numbered side of the program wheel, the group of pins starting at zero determines the length of time your unit will backwash.

For example, if there are six pins in this section, the time of backwash will be 12 min. (2 min. per pin). To change the length of backwash time, add or remove pins as required. The number of pins times two equals the backwash time in minutes.

How To Change The Length Of Brine And Rinse Time

- The group of holes between the last pin in the backwash section and the second group of pins determines the length of time that your unit will brine and rinse (2 min. per hole).
- To change the length of brine and rinse time, move the rapid rinse group of pins to give more or fewer holes in the brine and rinse section. Number of holes times two equals brine and rinse time in minutes.

How To Change The Length Of Rapid Rinse


- The second group of pins on the program wheel determines the length of time that your water conditioner will rapid rinse (2 min. per pin).
- To change the length of rapid rinse time, add or remove pins at the higher numbered end of this section as required. The number of pins times two equals the rapid rinse time in minutes.

How To Change The Length Of Brine Tank Refill Time

- The second group of holes in the program wheel determines the length of time that your water conditioner will refill the brine tank (2 min. per hole).
- To change the length of refill time, move the two pins at the end of the second group of holes as required.
- The regeneration cycle is complete when the outer microswitch is tripped by the two pin set at end of the brine tank refill section.
- The program wheel, however, will continue to rotate until the inner micro switch drops into the notch on the program wheel.

[THIS PAGE LEFT INTENTIONALLY BLANK]

3200 TIME CLOCK TIMER ASSEMBLY

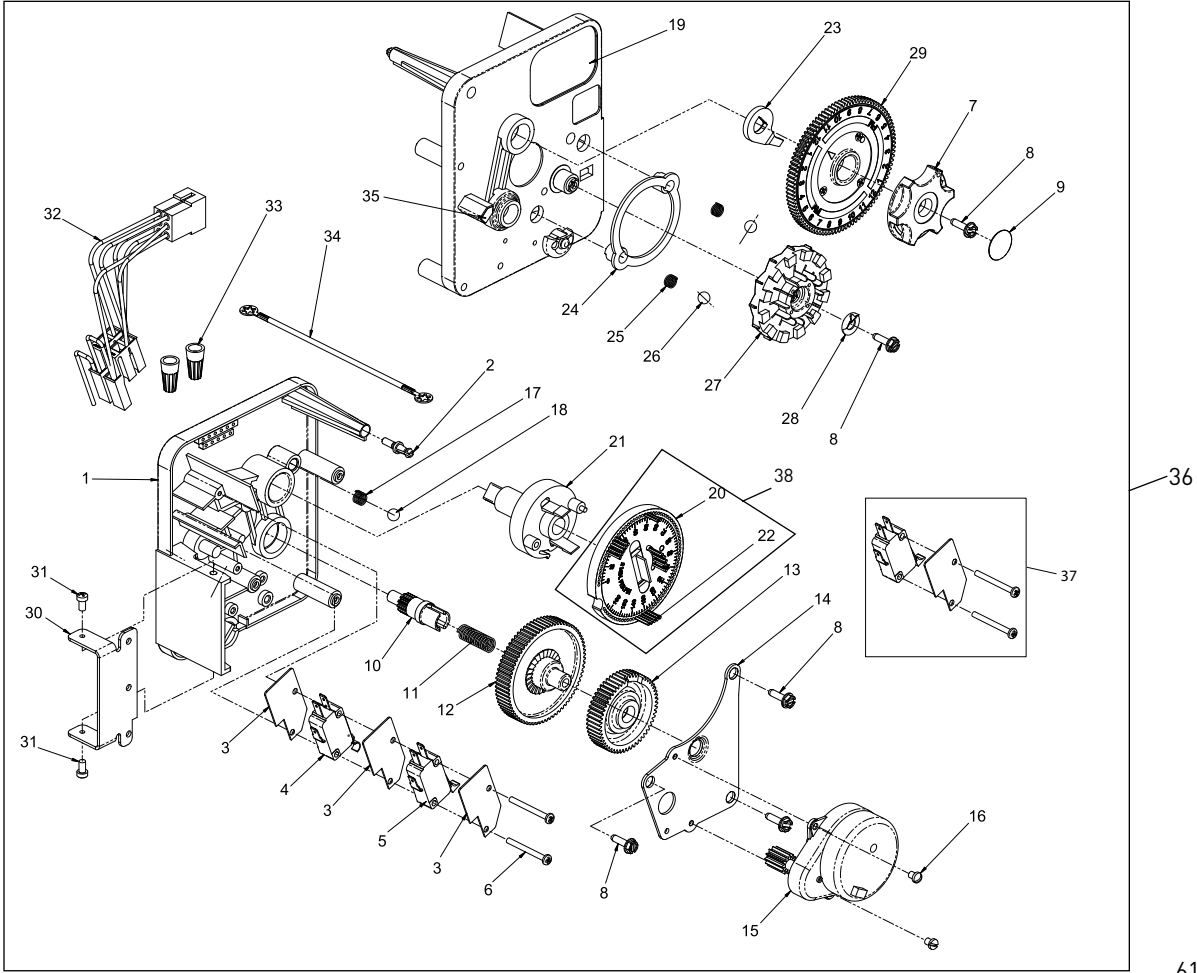

615023200 Rev A


3200 TIME CLOCK TIMER ASSEMBLY

CONTINUED

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	13870	Housing, Timer, 3200	27	1	14381	Skipper Wheel Assy, 12 Day
2	1	14265	Clip, Sping		1	14860	Skipper Wheel Assy, 7 Day
3	3	14087	Insulator	28	1	13014	Pointer, Regeneration
4	1	10896	Switch, Micro	29	1	40096-24	Dial, 12 AM Regen Assy, Black
5	1	15320	Switch, Micro, Timer			40096-02	Dial, 2 AM Regen Assy, Black
6	2	11413	Screw, Pan Hd Mach, 4-40 x 1-1/8	30	1	13881	Bracket, Hinger Timer
7	1	13886	Knob, 3200	31	2	11384	Screw, Phil, 6-32 x 1/4 Zinc
8	5	13296	Screw, Hex Wsh, 6-20 x 1/2	32	1	13902	Harness, 3200
9	1	11999	Label, Button	33	2	40422	Nut, Wire, Tan
10	1	13018	Pinion, Idler	34	1	15354-01	Wire, Ground, 4 inches
11	1	13312	Spring, Idler Shaft	35	1	14007	Label, Time of Day
12	1	13017	Gear, Idler	36	1	*	Complete 3200 Time Clock Timer Assembly
13	1	13164	Gear, Drive	37		60320-02	Switch Kit, 3200/9000 Timer Auxiliary, Optional
14	1	13887	Plate, Motor Mounting	38		61420-03	Program Wheel, Gear Assy, Filter 2 Min Per Pin
15	1	18743-1	Motor, 120V, 60Hz, 1/30 RPM			61420-04	Program Wheel, Gear Assy, Softener, 2 Min Per Pin
		18752-1	Motor, 100V, 50Hz, 1/30 RPM				
		18824-1	Motor, 230V, 50Hz, 1/30 RPM				
		18826-1	Motor, 24V, 50Hz, 1/30 RPM				
		19659-1	Motor, 24V, 60Hz, 1/30 RPM				
		19660-1	Motor, 230V, 60Hz, 1/30 RPM				
16	2	13278	Screw, Sltd Fillister Hd 6-32 x .156				
17	1	15424	Spring, Detent, Timer				
18	1	15066	Ball, 1/4-inch, Delrin				
19	1	15465	Label, Caution				
20	1	19210	Program Wheel Assy				
21	1	13911	Gear, Main Drive, Timer				
22	17	41754	Pin, Spring, 1/16 x 5/8 SS, Timer				
23	1	13011	Arm, Cycle Actuator				
24	1	13864	Ring, Skipper Wheel				
25	2	13311	Spring, Detent, Timer				
26	2	13300	Ball, 1/4-inch, SS				

*Call your distributor for Part Number

3210 METER DELAYED TIMER ASSEMBLY

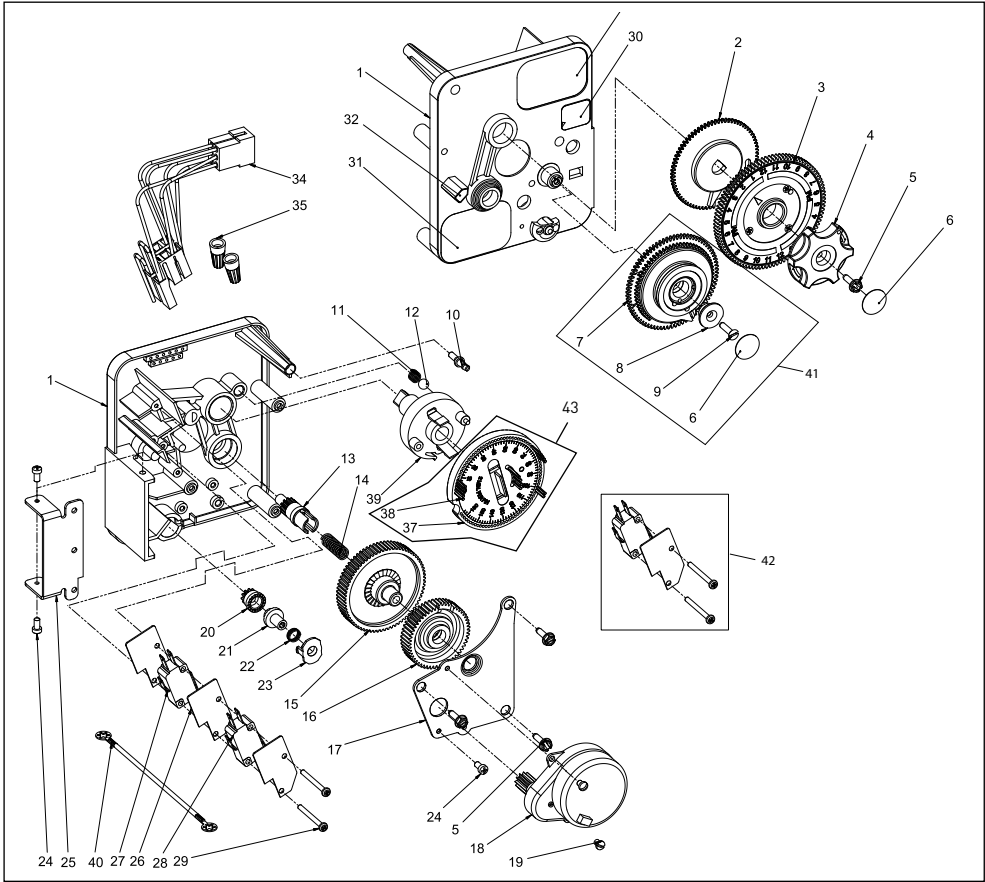


61502-3210 Rev A

3210 METER DELAYED TIMER ASSEMBLY

CONTINUED

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	13870	Housing, Timer, 3200	30	1	14198	Label, Indicator
2	1	13802	Gear, Cycle Actuator	31	1	15465	Label, Caution
3	1	40096-02	Dial 2 AM Regen Assy, Black	32	1	14007	Label, Time of Day
4	1	13886	Knob, 3200	33	1	14045	Label, Instruction
5	4	13296	Screw, Hex Wsh, 6-20 x 1/2	34	1	13902	Harness, 3200
6	2	11999	Label, Button	35	2	40422	Nut, Wire, Tan
7	1	13803	Gear, Program Drive Wheel	36	1	15354-01	Wire, Ground, 4 inches
8	1	13806	Retainer, Program Wheel	37	1	19210	Program Wheel Assy
9	1	13748	Screw, Flat Head St, 6-20 x 1/2	38	17	41754	Pin, Spring, 1/16 x 5/8 SS, Timer
10	1	14265	Clip, Spring	39	1	13911	Gear, Main Drive, Timer
11	1	15424	Spring, Detent, Timer	40	1	*	Complete 3210 Meter Delayed Timer Assembly
12	1	15066	Ball, 1/4-inch Delrin	41		60405-50	Program Wheel, w/2-inch STD Label 0-21,000 gal
13	1	13018	Pinion, Idler			60405-60	Program Wheel, w/2-inch EXT Label 0-100,000 gal
14	1	13312	Spring, Idler Shaft			60405-61	Program Wheel, w/2-inch EXT Range 375 m3
15	1	13017	Gear, Idler	42		60320-02	Switch Kit, 3200/9000 Timer Auxiliary, Optional
16	1	13164	Gear, Drive	43		61420-03	Program Wheel, Gear Assy, Filter 2 Min Per Pin
17	1	13887	Plate, Motor Mounting			61420-04	Program Wheel, Gear Assy, Softener, 2 Min Per Pin
18	1	18743-1	Motor, 120V, 60Hz 1/30 RPM	*Call your distributor for Part Number			
		18752-1	Motor, 100V, 50Hz, 1/30 RPM				
		18824-1	Motor, 230V, 50Hz, 1/30 RPM				
		18826-1	Motor, 24V, 50Hz, 1/30 RPM				
		19659-1	Motor, 24V, 60Hz, 1/30 RPM				
		19660-1	Motor, 230V, 60Hz, 1/30 RPM				
19	1	13278	Screw, Fillister Hd, 6-32 x .156				
20	1	13830	Pinion, Program Wheel Drive				
21	1	13831	Clutch, Drive Pinion				
22	1	14276	Spring, Meter, Clutch				
23	1	14253	Retainer, Clutch Spring				
24	3	11384	Screw, Phil, 6-32 x 1/4				
25	1	13881	Bracket, Hinge Timer				
26	3	14087	Insulator				
27	1	10896	Switch, Micro				
28	1	15320	Switch, Micro, Timer				
29	2	11413	Screw, Pan Hd Mach, 4-40 x 1 1/8				

3220 METER IMMEDIATE TIMER ASSEMBLY

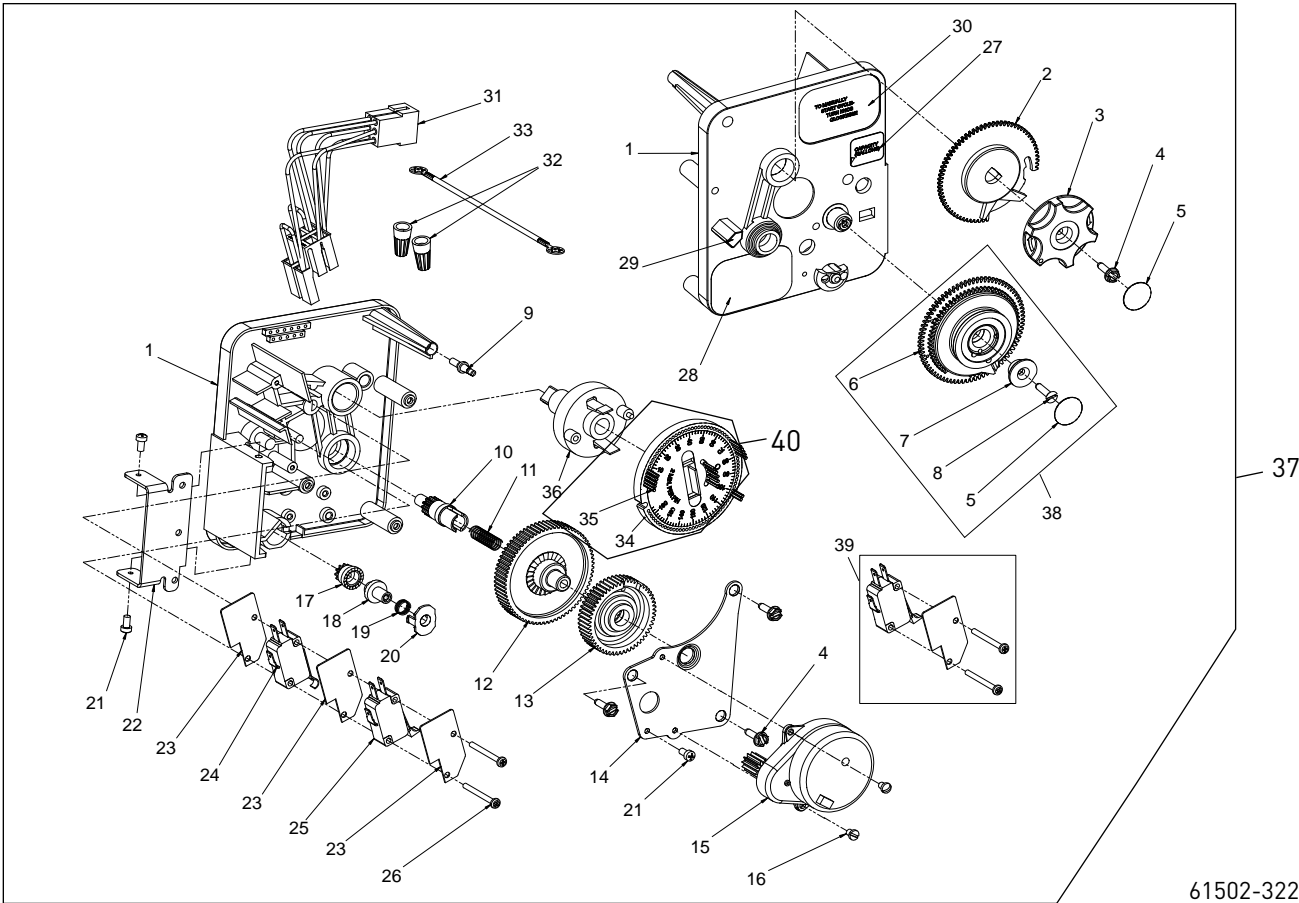

61502-3220 Rev B

3220 METER IMMEDIATE TIMER


ASSEMBLY *CONTINUED*

Item No.	QTY	Part No.	Description
1	1	13870	Housing, Timer
2	1	15431	Gear, Cycle Actuator, System #5
3	1	13886	Knob, 3200
4	4	13296	Screw, Hex Wsh, 6-20 x 1/2
5	2	11999	Label, Button
6	1	13807	Gear, Program Drive Wheel
7	1	13806	Retainer, Program Wheel
8	1	13748	Screw, Flt Hd St, 6-20 x 1/2
9	1	14265	Spring Clip
10	1	13018	Pinion, Idler
11	1	18563	Idler Shaft Spring
12	1	13017	Gear, Idler
13	1	13164	Drive Gear
14	1	13887	Plate, Motor Mounting
15	1	18743-1	Motor, 120V, 60 Hz, 1/30 RPM
		18752-1	Motor, 100V, 50Hz, 1/30 RPM
		18824-1	Motor, 230V, 50Hz, 1/30 RPM
		18826-1	Motor, 24V, 50Hz, 1/30 RPM
		19659-1	Motor, 24V, 60Hz, 1/30 RPM
		19660-1	Motor, 230V, 60Hz, 1/30 RPM
16	2	13278	Screw, Sltd Fillister Hd
17	1	14502	Pinion, Program Wheel
18	1	14501	Clutch, Drive Pinion
19	1	14276	Meter Clutch Spring
20	1	14253	Retainer, Clutch Spring
21	3	11384	Screw, Phil, 6-32 x 1/4 Zinc
22	1	13881	Bracket, Hinge Timer
23	3	14087	Insulator
24	1	15414-00	Micro Switch
25	1	15320	Switch, Micro, Timer
26	2	11413	Screw, Pan Hd Mach, 4-40 x 1-1/8
27	1	14198	Label, Indicator
28	1	15465	Label, Caution
29	1	14007	Label, Time of Day
30	1	15148	Label, Instruction

Item No.	QTY	Part No.	Description
31	1	40617	Harness, 3220
32	2	40422	Nut, Wire, Tan
33	1	15354-01	Wire, Ground, 4 inches
34	1	19210-05	Program Wheel Assembly, 9000/3230
35	17	41754	Pin, Spring, 1/16 x 5/8 Stainless Steel, Timer
36	1	15055	Gear, Main Drive
37	1	*	Complete 3220 Meter Immediate Timer Assy
38		60405-50	Program Wheel, w/2-inch STD Label 0-21,000 gal
		60405-60	Program Wheel, w/2-inch EXT Label 0-100,000 gal
		60405-61	Program Wheel, w/2-inch EXT Range 375 m3
39		60320-02	Switch Kit, 3200/9000 Timer Auxiliary, Optional
40		61420-06	Program Wheel, Gear Assy, Softener Immediate 2 Min Per Pin
		61420-42	Program Wheel, Gear Assy, Filter Immediate 2 Min Per Pin

*Call your distributor for Part Number

3230 REMOTE START TIMER ASSEMBLY

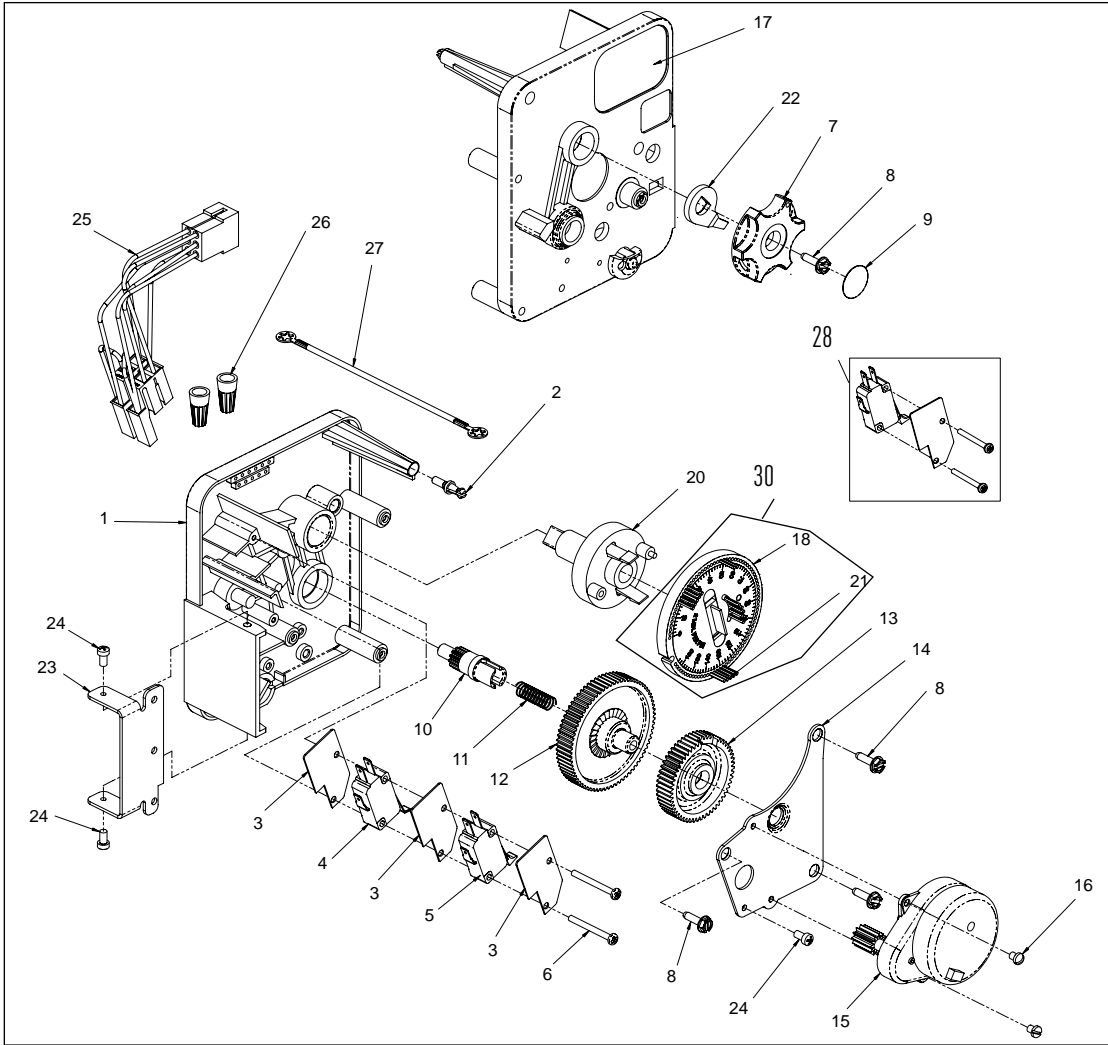

61502-3230R REV A


3230 REMOTE START TIMER ASSEMBLY

CONTINUED

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	13870	Housing, Timer	18	1	19210-05	Program Wheel Assembly, 3200
2	1	14265	Spring Clip	20	1	15055	Main Drive Gear
3	3	14087	Insulator	21	17	41754	Pin, Spring, 1/16 x 5/8 Stainless Steel, Timer
4	1	15314	Micro Switch	22	1	13011	Cycle Actuator Arm
5	1	15320	Switch, Micro, Timer	23	1	13881	Bracket, Hinge Timer
6	2	11413	Screw, Pan Hd Mach, 4-40 x 1-1/8	24	3	11384	Screw, Phil, 6-32 x 1/4 Zinc
7	1	13886	Knob, 3200	25	1	16336	Harness, 3230R
8	4	13296	Screw, Hex Wsh, 6-20 x 1/2	26	2	40422	Nut, Wire, Tan
9	1	11999	Label, Button	27	1	15354-01	Wire, Ground, 4 inches
10	1	13018	Pinion, Idler	28		60320-02	Switch Kit, 3200/9000 Timer Auxiliary, Optional
11	1	18563	Idler Shaft Spring	29	*		3230 Timer Assy
12	1	13017	Gear, Idler	30		61420-06	Program Wheel, Gear Assy, Softener Immediate 2 Min Per Pin
13	1	15055	Drive Gear			61420-42	Program Wheel, Gear Assy, Filter Immediate 2 Min Per Pin
14	1	13887	Plate, Motor Mounting				
15	1	18743-1	Motor, 120V, 60 Hz, 1/30 RPM				
		18752-1	Motor, 100V, 50Hz, 1/30 RPM				
		18824-1	Motor, 23V, 50Hz, 1/30 RPM				
		18826-1	Motor, 24V, 50Hz, 1/30 RPM				
		19659-1	Motor, 24V, 60Hz, 1/30 RPM				
		19660-1	Motor, 230V, 60Hz, 1/30 RPM				
16	2	13278	Screw, Slted Fillister Hd				
17	1	15313	Label, Caution				

*Call your distributor for Part Number

UPPER ENVIRONMENTAL POWERHEAD ASSEMBLY

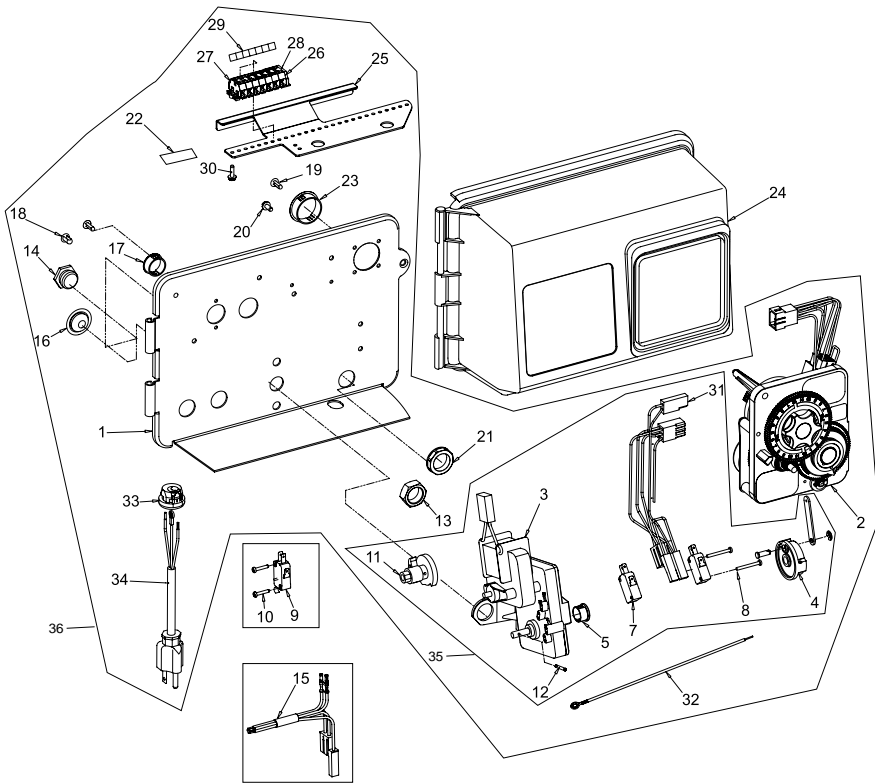


61501-2900 Rev G

UPPER ENVIRONMENTAL POWERHEAD

ASSEMBLY *CONTINUED*

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	18697-15	Backplate, Hinged	25	1	19772	Bracket, Terminal Block
2	1		3200 Clock Timer Assembly	26	1	40174	Terminal Block, Green/ Yellow Commercial, 809- 260/141
			3200 Meter Timer Assembly	27	6	41084	Terminal Block, Segment, Gray
3	1	41543	Motor, Drive, 115V, 50/60 Hz	28	1	41085	Endplate, Terminal Block, Gray
		42579	Motor, Drive, 24VAC/DC, 50/60 Hz	29	2	15250	Label, Terminal Strip
		41545	Motor, Drive, 230V, 50/60 Hz	30	2	13296	Screw, Hex Wsh, 6-20 6-20 x 1/2 Type 25 Steel Zinc
4	1	60160-15	Drive Cam Assembly, STF, Blue, 2900	31	1	40400	Harness, Drive, Designer/ Environmental
		60160-30*	Drive Cam Assembly, Upflow	32	1	40175-01	Wire, Ground, Commercial Valves
		60160-31*	Drive Cam Assembly, Upflow, Variable	33	1	13547	Strain Relief, Flat Cord Heyco #30-1
5	1	17904	Bushing, Heyco 1/2, Heyco #2073			13547-01	Strain Relief, Euro Round Cord
7	2	10218	Switch, Micro			13547-02	Strain Relief, U.S. Round
8	2	14923	Screw, Pan Hd Mach, 4-40 X 1 MS Steel Zinc	34	1	11545	Powercord, 4-foot European, Black
9	1	10896	Switch, Micro			19303	Powercord, 8-foot, Australian
10	2	11805	Screw, Rd Hd, 4-40 X 5/8 TYPE 1 Steel Zinc			40084-12	Powercord, 12-foot US, Round, 120V, Sys 5,6,7&2900/3150/3900
11	1	12472	Cam Assy, Tri-Stack, After RR			40085-12	Powercord, 12-foot US, Round, 240V
		12777	Cam, Shut-Off Valve	35		60050-23	Drive Assy, 2750, STF, 24V 50/60 Hz, Downflow Less Lower Drive Brine Cam Switch, Item 9 & 10
		15770	Cam Assy, Special Tri- Stack, After Brine Fill			60050-22	Drive Assy, 2750, STF, 220V 50/60 Hz, Downflow Less Lower Drive Brine Cam Switch, Item 9 & 10
		15805	Cam, SVO			60052-21	Upper Drive Assy, 2900, STF 120V, Downflow
		19887*	Cam, Brine, 2750 U/F, Std			60052-217	Upper Drive Assy, 2900, STF 120V, System 7, Downflow
12	2	10338	Pin, Roll 3/32 x 7/8	36		**	Upper Powerhead Assembly
13	1	10269	Nut, Jam, 3/4-16	Not Shown:			
14	1	43560	Fitting, Brine Valve	1		15216	Meter Cable Assembly, 15.25 inch long, 2 inch Brass Meter
15	1	14822	Harness, 2900	1		15513	Meter Cable Assembly, 17.5 inch long 2 inch Stainless Steel Meter
16	2	19691	Plug, .750 Dia Recessed, Black	1		15879	Cable Guide Assembly, 2900
17	1	15806	Plug, Hole, Heyco #2693	*Upflow Only			
18	1	19801	Plug, .190 Dia, White Heyco 0307	**Call your distributor for Part Number			
19	7	19800	Plug, .140 Dia, White Heyco 0304				
20	4	10300	Screw, Slot Hex Wsh, 8-18 X 3/8 Type "B" RC 44-47				
21	1	18691-02	Nut, Conduit Fitting 1/2- inch				
22	1	40038-03	Label, Voltage, 120V, 3200ET				
23	1	17421	Plug, 1.20 Hole Heyco #2733				
24	1	60219-02	Cover Assembly, Environmental, Black w/ Clear Window				

LOWER ENVIRONMENTAL POWERHEAD ASSEMBLY

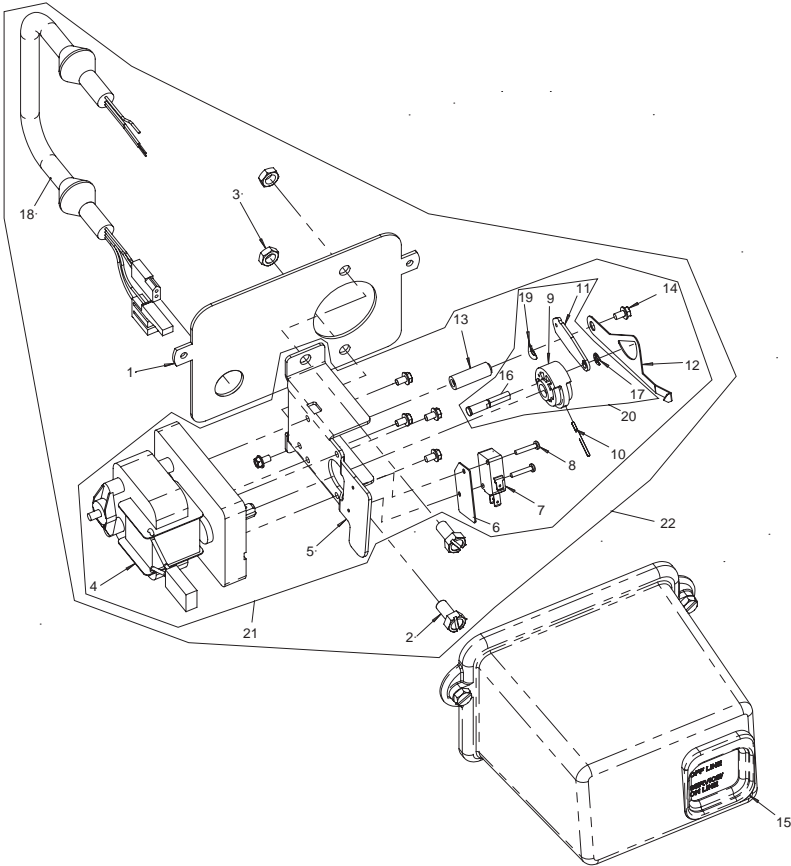


61501-2900 Rev G

LOWER ENVIRONMENTAL POWERHEAD

ASSEMBLY *CONTINUED*

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	18709	Backplate, Lower			40408	Harness, Lower Drive, Syst 7, Duplex, Lag, Enviromental
2	2	11224	Screw, Slotted Hex Head			40398	Harness, Lower Drive, Syst #7, Multiple, Enviromental
3	2	16346	Nut, Hex, Jam, 5/16-18, 18-8-SS (only used for shipping)	19	1	18727	Washer, Curved Spring, /265 ID
4	1	40387	Motor, Drive, 115V, 60 Hz, SP FAM	20		60160-22	Drive Cam Assy, Link, Enviromental, 2900 Lower Drive
		42580	Motor, Drive, 24 Vac/Dc, 50-60 Hz, Fam 2	21		60055-53	Lower Drive Assy, 2900, 24/60, System #4
		40389	Motor, Drive, 220V, 50/60 Hz, SP			60055-51	Lower Drive Assy, 2900, 120, System #4
5	1	14769	Bracket, Motor, 2900			60055-52	Lower Drive Assy, 2900, 220, System #4
6	1	10302	Insulator, Limit Switch			60255-51	Lower Drive Assy, 2900, 120, System #5 and #6, Lead/Lag
7	1	10218	Switch, Micro			60056-51	Lower Drive Assy, 2900, 120, System #7, Lead
8	2	19849	Screw, Pan HD, 4-40 x 5/8			60056-61	Lower Drive Assy, 2900, 120, System #7, Lag
9	1	14775	Cam, Main Drive, 2900 Lower	22	*		2900 Lower Powerhead Assembly
10	1	41022	Pin, Roll 2900 Lower	Not Shown:			
11	1	14759	Link, Piston Rod	1		14044	Tie, Cable, HeyCo VNT # 4-18
12	1	18725	Indicator, Service/Standby	1		43062	Grease, Lubriplate, 630-2
13	1	18726	Spacer, Indicator			60320-11	Switch Kit, 2900 Lower Drive, Adding Second Switch
14	6	10872	Screw, Hex WSH, 8-32 x 5/16			60320-08	Switch Kit, 2900 Lower Drive, Adding Third Switch
15	1	60217-02	Cover Assy, 2900, Lower, Black	*Call your distributor for Part Number			
16	1	42979	Bearing, Connecting Rod				
17	1	42980	Ring, Retaining				
18	1	42446	Harness, Lower Drive SYS4, ENV				
		40405	Harness, Lower Drive, Sys 4 Remote Start				
		40406	Harness, Lower Drive, Sys 5 & 6, Duplex, Enviromental				
		40405	Harness, Lower Drive Syst 5 Multiple, Enviromental				
		40405	Harness, Lower Drive Syst 6 Multiple, Lead, Enviromental				
		40406	Harness, Lower Drive, Sys 6, Multiple, Middle/Lag, Enviromental				
		40407	Harness, Lower Drive, Syst #7, Duplex, Lead, Enviromental				

CONTROL VALVE ASSEMBLY

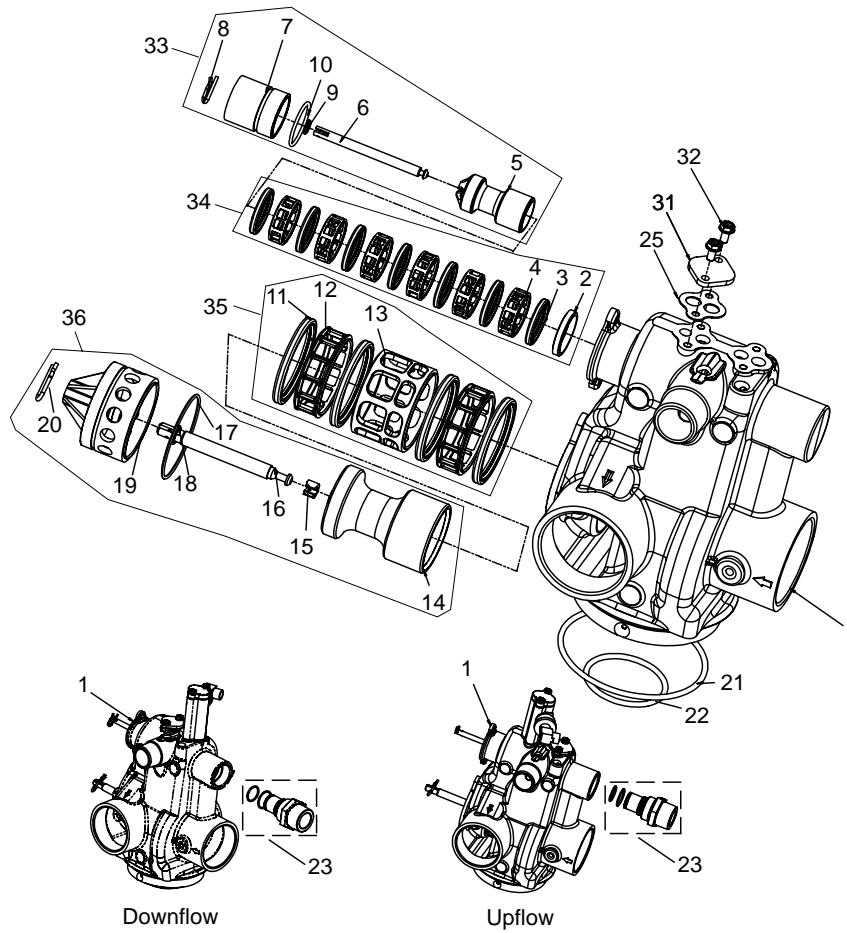

61500-2900 Rev F

Item No.	QTY	Part No.	Description
1	1	41428-01	Valve Body, 2900s, Machd, NPT U.S. Tap
		41428-09	Valve Body, 2900s, Machined, w/Soft Water Adapter
		41428-01NP	Valve Body, 2900s, MCHD, NPT, NP, U.S. Tap, Top Coll
		41428-03	Valve Body, 2900s, MACHD, NPT, U.S. Tap, Aux Tap, Top Coll
		41428-03NP	Valve Body, 2900s, MCHD, NPT, NP, U.S. Tap, Aux Tap, Top Coll
		41428-05	Valve Body, 2900s, NPT, U.S. Tap, SVO, Top Coll
		41428-07	Valve Body, 2900s, MACHD, NPT, U.S. Tap, Aux Tap, SVO, Top Coll
		41428-09	Valve Body, 2900s, MACHD, NPT, U.S. Tap, Soft ADAPT, Top Coll

Item No.	QTY	Part No.	Description
		41428-09NP	Valve Body, 2900S, MCHD, NPT, NP, U.S. Tap, Soft ADAPT, Top Coll
		41428-11	Valve Body, 2900S, NPT, U.S. Tap, Aux Tap, SFT ADPT, Top Coll
		41428-13	Valve Body, 2900S, MACHD, NPT, U.S. Tap, SVO, Soft ADAPT, Top Coll
		41428-15	Valve Body, 2900S, MACHD, NPT, U.S. Tap, SVO, SFT ADPT, AX TP Top
		41428-21	Valve Body, 2900S, MACHD, BSP, Metric Tap, Top Coll
		41428-21NP	Valve Body, 2900S, MCHD, BSP, NP, Metric Tap, Top Coll
2	1	10757	Spacer, End
		10757B	Spacer, End, Brass, HW
3	7	10545	Seal, Piston
		10545-01	Seal, Piston, Viton
		10545-02	Seal, Piston, Silicone

CONTROL VALVE ASSEMBLY *CONTINUED*


Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
4	6	11451	Spacer, 12 Hole			61545	Piston Assy, 2900S, Upflow, Upper
		16589	Spacer, Hot Water			61545-01	Piston Assy, 2900S, Upflow, Upper, Hot Water
5	1	14451	Piston, 2750				
		19454*	Piston, 2750, Upflow				
6	1	41424	Rod, Piston, 2900S, Upper	34		61530	Seal & Spacer Kit, 2900S, Upper
7	1	41131	Plug, End			61530-01	Seal & Spacer Kit, 2900S, Upper, Hot Water
	1	10212	Plug, End, 1500/2750, Brass			61530-02	Seal & Spacer Kit, 2900S, Upper, VITON, Chemical Resistant
8	1	10909	Pin, Link				
9	1	10209	Quad Ring, -010				
10	1	40078	O-ring, 28mm X 2mm	35		60128	Seal & Spacer Kit, 2900, Lower
		10234-01	O-ring, -024, Hot Water			60128-01	Seal & Spacer Kit, 2900, Lower, Hot Water
11	4	11720	Seal, Piston, 2900/3150			60128-10	Seal & Spacer Kit, 2900, Lower, Silicone
		10545-02	Seal, Piston, Silicone				
12	2	10369	Spacer, 2-inch, 2900/3150	36		61550	Piston Assy, 2900S, HWBP, Lower
		14241-01	Spacer, Hot Water			61550-03	Piston Assy, 2900S, HWBP, Lower, Hot Water
13	1	14753	Spacer, 2900			61555	Piston Assy, 2900S, NHWBP, Lower
		16589	Spacer, Hot Water			61555-03	Piston Assy, 2900S, NHWBP, Lower, Hot Water
14	1	14757	Piston, HWBP				
		14752	Piston, 2900, NHWBP				
15	1	14818	Ring, Piston Rod, Snap				
16	1	14758	Rod, Piston, 2900				
17	1	14922	O-ring, -035, Piston				
18	1	14926	Quad Ring, -012				
19	1	14754-00	End Plug Assy, 2900	Not Shown:		60366-00	DLFC, 1-inch F x 3/4-inch F, NPT, No Button
		14754-01	Plug, End, White, Machined			60366-06	DLFC, 1-inch F x 3/4-inch F, NPT, 0.6 gpm
		14754-10	End Plug Assembly, 2900/2930, NHWBP			60366-08	DLFC, 1-inch F x 3/4-inch F, NPT, 0.8 gpm
		19276-01	End Plug Assembly, 2900S, Brass, HW			60366-10	DLFC, 1-inch F x 3/4-inch F, NPT, 1.0 gpm
		41427-01	Plug, End, 2900S, Lower, White			60366-12	DLFC, 1-inch F x 3/4-inch F, NPT, 1.2 gpm
		41427-11	Plug, End, 2900S, Lower, Black			60366-13	DLFC, 1-inch F x 3/4-inch F, NPT, 1.3 gpm
20	1	14813	Pin, Spring, Connecting Rod			60366-15	DLFC, 1-inch F x 3/4-inch F, NPT, 1.5 gpm
21	1	13575	O-ring, -240			60366-17	DLFC, 1-inch F x 3/4-inch F, NPT, 1.7 gpm
		15210	O-ring, -343, Park Tank			60366-20	DLFC, 1-inch F x 3/4-inch F, NPT, 2.0 gpm
22	1	13577	O-ring, -226			60366-24	DLFC, 1-inch F x 3/4-inch F, NPT, 2.4 gpm
23	1	61525	Softwater Adapter Kit, 2900S			60366-30	DLFC, 1-inch F x 3/4-inch F, NPT, 3.0 gpm
25	2	19925	Gasket, Injector Body, 1700			60366-35	DLFC, 1-inch F x 3/4-inch F, NPT, 3.5 gpm
31	1	11893	Cap, Injector, Stainless Steel			60366-40	DLFC, 1-inch F x 3/4-inch F, NPT, 4.0 gpm
32	2	15137	Screw, Hex Wsh Mach, 10 - 24 x 3/8				
33		61540	Piston Assy, 2900S Downflow, Upper				
		61540-01	Piston Assy, 2900S, Downflow, Upper, Hot Water				

CONTROL VALVE ASSEMBLY *CONTINUED*

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
						60721-30	DLFC, 1-inch F x 1-inch F, NPTF, 3.0 gpm
		60366-45	DLFC, 1-inch F x 3/4-inch F, NPT, 4.5 gpm			60721-35	DLFC, 1-inch F x 1-inch F, NPTF, 3.5 gpm
		60366-50	DLFC, 1-inch F x 3/4-inch F, NPT, 5.0 gpm			60721-40	DLFC, 1-inch F x 1-inch F, NPTF, 4.0 gpm
		60366-60	DLFC, 1-inch F x 3/4-inch F, NPT, 6.0 gpm			60721-45	DLFC, 1-inch F x 1-inch F, NPTF, 4.5 gpm
		60366-70	DLFC, 1-inch F x 3/4-inch F, NPT, 7.0 gpm			60721-50	DLFC, 1-inch F x 1-inch F, NPTF, 5.0 gpm
		60708-00	DLFC, 1-inch F x 3/4-inch F, NPT, No Button			60721-60	DLFC, 1-inch F x 1-inch F, NPTF, 6.0 gpm
		60708-8.0	DLFC, 1-inch F x 3/4-inch F, NPT, 8.0 gpm			60721-70	DLFC, 1-inch F x 1-inch F, NPTF, 7.0 gpm
		60708-9.0	DLFC, 1-inch F x 3/4-inch F, NPT, 9.0 gpm			60702-00	DLFC, 1-inch M x 1-inch F, NPT, Brass, No Button
		60708-10	DLFC, 1-inch F x 3/4-inch F, NPT, 10.0 gpm			60702-8.0	DLFC, 1-inch M x 1-inch F, NPT, 8.0 gpm
		60708-12	DLFC, 1-inch F x 3/4-inch F, NPT, 12.0 gpm			60702-9.0	DLFC, 1-inch M x 1-inch F, NPT, 9.0 gpm
		60708-15	DLFC, 1-inch F x 3/4-inch F, NPT, 15.0 gpm			60702-10	DLFC, 1-inch M x 1-inch F, NPT, 10 gpm
		60708-20	DLFC, 1-inch F x 3/4-inch F, NPT, 20.0 gpm			60702-12	DLFC, 1-inch M x 1-inch F, NPT, 12 gpm
		60708-25	DLFC, 1-inch F x 3/4-inch F, NPT, 25.0 gpm			60702-15	DLFC, 1-inch M x 1-inch F, NPT, 15 gpm
		60721-00	DLFC, 1-inch F x 1-inch F, NPT, No Button			60702-20	DLFC, 1-inch M x 1-inch F, NPT, 20 gpm
		60721-06	DLFC, 1-inch F x 1-inch F, NPT, 0.06 gpm			60702-25	DLFC, 1-inch M x 1-inch F, NPT, 25 gpm
		60721-08	DLFC, 1-inch F x 1-inch F, NPT, 0.08 gpm			13640	Flow Control, Dole, 30 gpm
		60721-10	DLFC, 1-inch F x 1-inch F, NPT, 1.0 gpm			60711-35	DLFC, 2-inch NPT, 35 gpm
		60721-12	DLFC, 1-inch F x 1-inch F, NPT, 1.2 gpm				
		60721-13	DLFC, 1-inch F x 1-inch F, NPT, 1.3 gpm				
		60721-15	DLFC, 1-inch F x 1-inch F, NPT, 1.5 gpm				
		60721-00	DLFC, 1-inch F x 1-inch F, NPTF, No Button				
		60721-17	DLFC, 1-inch F x 1-inch F, NPTF, 1.7 gpm				
		60721-20	DLFC, 1-inch F x 1-inch F, NPTF, 2.0 gpm				
		60721-24	DLFC, 1-inch F x 1-inch F, NPTF, 2.4 gpm				

*Upflow Only



CONTROL VALVE SIDE MOUNT ADAPTER

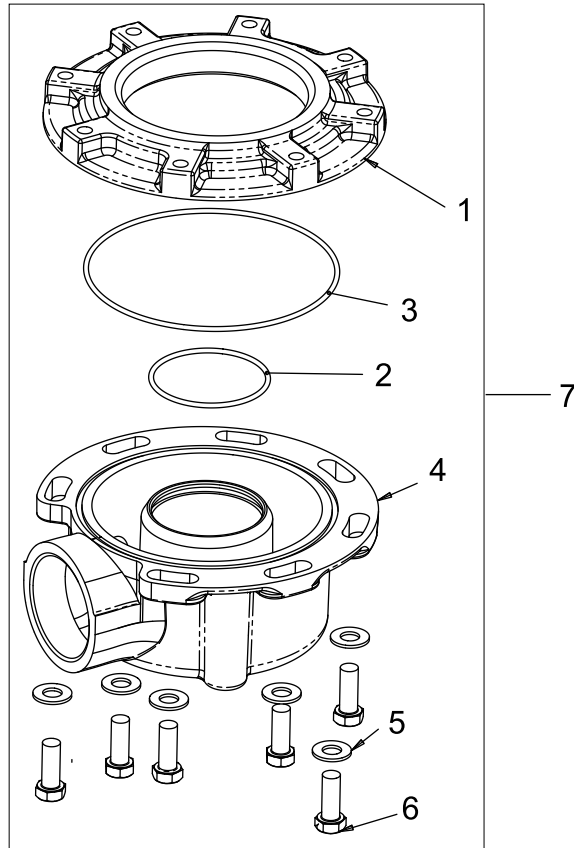

61415 Rev B

Item No.	QTY	Part No.	Description
1	1	40316	Adapter, Sidemount
2	1	40372	O-ring - 142
3	1	40368	O-ring - 160, Sidemount, Flange
4	1	40310	Base, 2850/2900/3930, Rotating
5	7	40375	Washer, Flat, 3/8, Type A, N-SERS
6	7	19768	Screw, Hex Hd, 3/8 - 16 x 1, Cap 18-8
7	1	61415	Adapter Assy, Sidemount 2850/2900/2930
		61415NP	Adapter Assy, Sidemount, NP 2850/2900/2930
		61415-20	Adapter Assy, Sidemount, BSP/MTC 2850/2900/2930
		61415-20NP	Adapter Assy, Sidemount, BSP/NP 2850/2900/2930

1600 SERIES BRINE SYSTEM

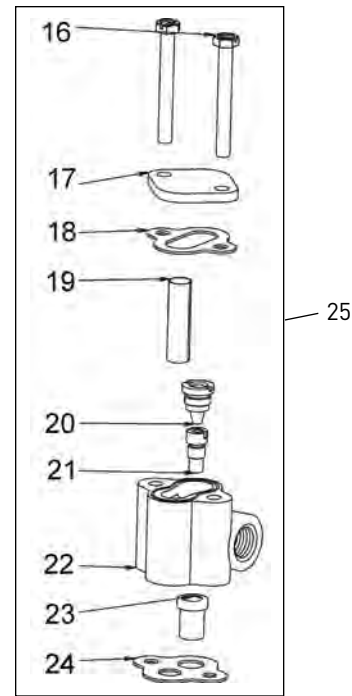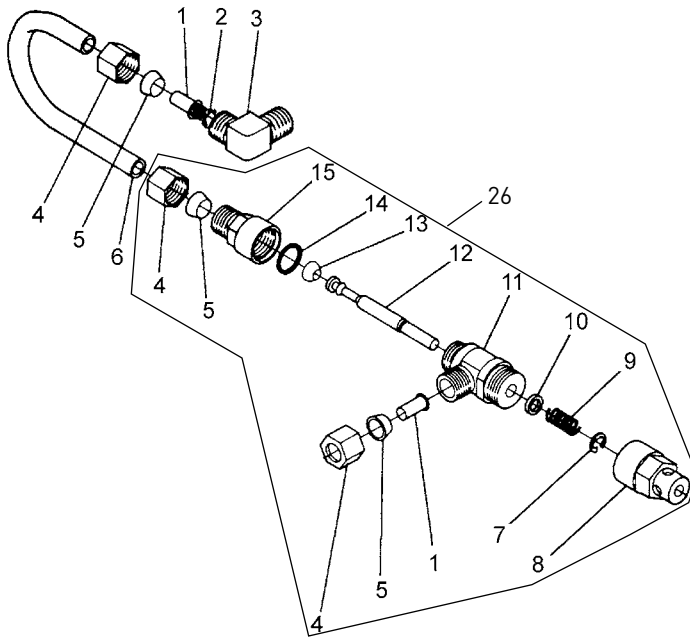

60029 Rev C


Item No.	QTY	Part No.	Description
1	2	10332	Fitting, Insert, 3/8
2	1	12767	Screen, Brine
3	1	10328	Fitting, Elbow, 90 Deg. 1/4 PT x 3/8 Tube
4	3	10329	Fitting, Tube, 3/8 Nut, Brass
5	3	10330	Fitting, Sleeve, 3/8 Celcon
6	1	16508	Tube, Brine, 1600, PVC
	1	16508-01	Tube, Brine Valve, 2850/2900s
	1	12774	Tube, Brine Valve, 1500
	1	40027	Tube, Brine Valve, 2510
	1	15221	Tube, Brine Valve, 2750/2900
	1	42184	Tube, Brine Valve, 2850s
	1	41683*	Tube, Brine Valve, UF, 1600/1650
7	1	10250	Ring, Retaining
8	1	11749	Guide, Brine Valve Stem
9	1	10249	Spring, Brine Valve
10	1	12550	Quad Ring, -009
11	1	12748	Brine Valve Body Assy, 1600 w/Quad Ring
12	1	12552-02	Brine Valve Stem, 1600, with Seat
13	1	12626	Seat, Brine Valve
14	1	11982	O-ring, -016
15	1	60020-25	BLFC, .25 GPM, 1600
	1	60020-50	BLFC, .50 GPM, 1600
	1	60020-100	BLFC, 1.0 GPM, 1600
16	2	10692	Screw, Slot Hex Hd, 10 - 24X 18-8 Stainless Steel

Item No.	QTY	Part No.	Description
17	1	11893	Cap, Injector, SS
18	1	10229	Gasket, Injector Cap, 1600
19	1	10227	Screen, Injector
20	1	10913-000	Nozzle, Injector #000, Brown
		10913-00	Nozzle, Injector #00, Violet
		10913-0	Nozzle, Injector #0, Red
		10913-1	Nozzle, Injector #1, White
		10913-2	Nozzle, Injector #2, Blue
		10913-3	Nozzle, Injector #3, Yellow
		10913-4	Nozzle, Injector #4, Green
		12973-0	Nozzle, Injector #0, PVC, Grey
		12973-1	Nozzle, Injector #1, PVC, Grey
		12973-2	Nozzle, Injector #2, PVC, Grey
		12973-3	Nozzle, Injector #3, PVC, Grey
		12973-4	Nozzle, Injector #4, PVC, Grey
		10225-0	Nozzle, Injector #0, Stainless Steel
		10225-1	Nozzle, Injector #1, Stainless Steel
		10225-2	Nozzle, Injector #2, Stainless Steel
		10225-3	Nozzle, Injector #3, Stainless Steel
		10225-4	Nozzle, Injector #4, Stainless Steel

1600 SERIES BRINE SYSTEM *CONTINUED*

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
21	1	10914-000	Throat, Injector #000, Brown	25	1	60480-01	Injector Assy, 1600, #1, Plastic
		10914-00	Throat, Injector #00, Violet			60480-02	Injector Assy, 1600, #2, Plastic
		10914-0	Throat, Injector #0, Red			60480-03	Injector Assy, 1600, #3, Plastic
		10914-1	Throat, Injector #1, White			60480-04	Injector Assy, 1600, #4, Plastic
		10914-2	Throat, Injector #2, Blue			60481-21	Injector Assy, 1600, #1, S.S. Brass
		10914-3	Throat, Injector #3, Yellow			60481-22	Injector Assy, 1600, #2, S.S. Brass
		10914-4	Throat, Injector #4, Green			60481-23	Injector Assy, 1600, #3, S.S. Brass
		12974-0	Throat, Injector #0, PVC, Grey			60080-11	Injector Assy, 1600, #1, PVC
		12974-1	Throat, Injector #1, PVC, Grey			60080-12	Injector Assy, 1600, #2, PVC
		12974-2	Throat, Injector #2, PVC, Grey			60080-14	Injector Assy, 1600, #4, PVC
		12974-3	Throat, Injector #3, PVC, Grey			60485-003	Injector Assy, 2900/1600, Upflow, #0, w/Reg Cap, 20 psi
		12974-4	Throat, Injector #4, PVC, Grey			60485-012	Injector Assy, 2900/1600, Upflow, #1, w/Reg Cap, 20 psi
		10226-0	Throat, Injector #0, Stainless Steel			60485-022	Injector Assy, 2900/1600, Upflow, #2, w/Reg Cap, 20 psi
		10226-1	Throat, Injector #1, Stainless Steel			60485-032	Injector Assy, 2900/1600, Upflow, #3, w/Reg Cap, 20 psi
		10226-2	Throat, Injector #2, Stainless Steel			60485-043	Injector Assy, 2900/1600, Upflow, #4, w/Reg Cap, 20 psi
		10226-3	Throat, Injector #3, Stainless Steel	26	1	60029-010	Brine Valve, 1600, 0.25 gpm
		10226-4	Throat, Injector #4, Stainless Steel			60029-020	Brine Valve, 1600, 0.50 gpm
22	1	17776	Body, Injector, 1600			60029-030	Brine Valve, 1600, 1.0 gpm
	1	17776-02*	Body, Injector, 1600 Upflow	*Upflow Only			
23	1	16221	Dispenser, Air				
24	1	14805	Gasket, Injector Body, 1600/1700				

1650 BRINE SYSTEM ASSEMBLY

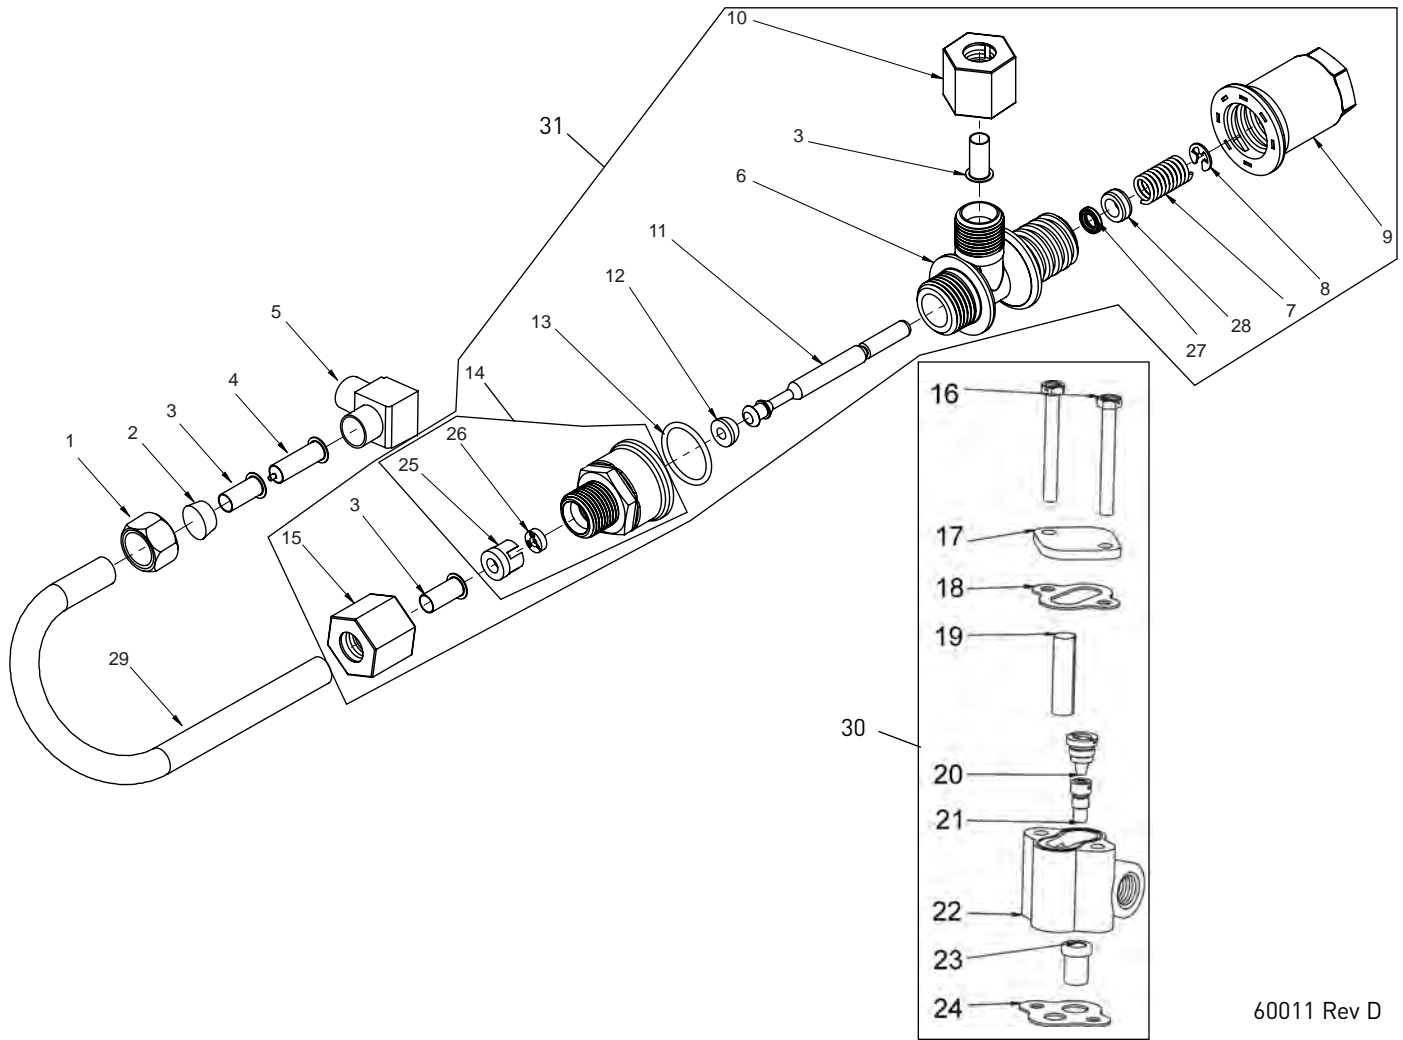

60011 Rev D


Item No.	QTY	Part No.	Description
1	1	10329	Fitting, Tube, 3/8 Nut, Brass
2	1	10330	Fitting, Sleeve, 3/8 Celcon
3	3	10332	Fitting, Insert, 3/8
4	1	12767	Screen, Brine
5	1	10328	Fitting, Elbow, 90 Deg 1/4 NPT x 3/8T
6	1	17884	Brine Valve Body Assy, 1650
7	1	10249	Spring, Brine Valve
8	1	10250	Ring, Retaining
9	1	17906	Guide, Brine Valve Stem
10	1	19625	Nut Assy, 3/8-inch, Plastic
11	1	12552-02	Brine Valve Stem, 1600
12	1	12626	Seat, Brine Valve
13	1	16924	O-ring, -018
14	1	60010-25	BLFC, 1650, .25 GPM, Plastic (Includes items 25 and 26)
1	1	60010-50	BLFC, 1650, .50 GPM,

Item No.	QTY	Part No.	Description
1	1	60010-100	BLFC, 1650, 1.0 GPM, Plastic
15	1	19625	Nut Assy, 3/8-inch, Plastic
16	2	10692	Screw, Slot Hex Hd, 10 - 24X 18-8 Stainless Steel
17	1	11893	Cap, Injector, Stainless Steel
18	1	10229	Gasket, Injector Cap, 1600
19	1	10227	Screen, Injector
20	1	10913-000	Nozzle, Injector #000, Brown
		10913-00	Nozzle, Injector #00, Violet
		10913-0	Nozzle, Injector #0, Red
		10913-1	Nozzle, Injector #1, White
		10913-2	Nozzle, Injector #2, Blue
		10913-3	Nozzle, Injector #3, Yellow
		10913-4	Nozzle, Injector #4, Green
		12973-0	Nozzle, Injector #0, PVC, Grey
		12973-1	Nozzle, Injector #1, PVC, Grey
		12973-2	Nozzle, Injector #2, PVC, Grey

1650 BRINE SYSTEM ASSEMBLY *CONTINUED*

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
		12973-3	Nozzle, Injector #3, PVC, Grey	27	1	12550	Quad Ring -009
		12973-4	Nozzle, Injector #4, PVC, Grey		1	12550-01	Quad Ring -009 560CD
		10225-0	Nozzle, Injector #0, Stainless Steel	28	1	17908	Sleeve, Brine Valve Stem
		10225-1	Nozzle, Injector #1, Stainless Steel	29	1	16508-01	Tube, Brine Valve, 2850/1600
		10225-2	Nozzle, Injector #2, Stainless Steel		1	40027	Tube, Brine Valve, 2510
		10225-3	Nozzle, Injector #3, Stainless Steel		1	42184	Tube, Brine Valve, 2850s
		10225-4	Nozzle, Injector #4, Stainless Steel		1	12774	Tube, Brine Valve, 1500
21	1	10914-000	Throat, Injector #000, Brown		1	15221	Tube, Brine Valve, 2750
		10914-00	Throat, Injector #00, Violet		1	41683*	Tube, Brine Valve, UF, 1600/1650
		10914-0	Throat, Injector #0, Red	30		60480-01	Injector Assy, 1600, #1, Plastic
		10914-1	Throat, Injector #1, White			60480-02	Injector Assy, 1600, #2, Plastic
		10914-2	Throat, Injector #2, Blue			60480-03	Injector Assy, 1600, #3, Plastic
		10914-3	Throat, Injector #3, Yellow			60480-04	Injector Assy, 1600, #4, Plastic
		10914-4	Throat, Injector #4, Green			60481-21	Injector Assy, 1600, #1, S.S. Brass
		12974-0	Throat, Injector #0, PVC, Grey			60481-22	Injector Assy, 1600, #2, S.S. Brass
		12974-1	Throat, Injector #1, PVC, Grey			60481-23	Injector Assy, 1600, #3, S.S. Brass
		12974-2	Throat, Injector #2, PVC, Grey			60080-11	Injector Assy, 1600, #1, PVC
		12974-3	Throat, Injector #3, PVC, Grey			60080-12	Injector Assy, 1600, #2, PVC
		12974-4	Throat, Injector #4, PVC, Grey			60080-14	Injector Assy, 1600, #4, PVC
		10226-0	Throat, Injector #0, Stainless Steel			60485-003	Injector Assy, 2900/1600, Upflow, #0, w/Reg Cap, 20 psi
		10226-1	Throat, Injector #1, Stainless Steel			60485-012	Injector Assy, 2900/1600, Upflow, #1, w/Reg Cap, 20 psi
		10226-2	Throat, Injector #2, Stainless Steel			60485-022	Injector Assy, 2900/1600, Upflow, #2, w/Reg Cap, 20 psi
		10226-3	Throat, Injector #3, Stainless Steel			60485-032	Injector Assy, 2900/1600, Upflow, #3, w/Reg Cap, 20 psi
		10226-4	Throat, Injector #4, Stainless Steel			60485-043	Injector Assy, 2900/1600, Upflow, #4, w/Reg Cap, 20 psi
22	1	17776	Body, Injector, 1600	31		60011-010	Brine Valve, 1650, 0.25 gpm
	1	17776-02*	Body, Injector, 1600 Upflow			60011-020	Brine Valve, 1650, 0.50 gpm
23	1	16221	Dispenser, Air			60011-030	Brine Valve, 1650, 1.0 gpm
24	1	14805	Gasket, Injector Body, 1600/1700	*Upflow Only			
25	1	12098	Retainer, Flow Control				
26	1	12095	Washer, Flow Control .50 GPM				
	1	12094	Washer, Flow Control .25 GPM				
	1	12097	Washer, Flow Control 1.0 GPM				

1700 BRINE SYSTEM ASSEMBLY

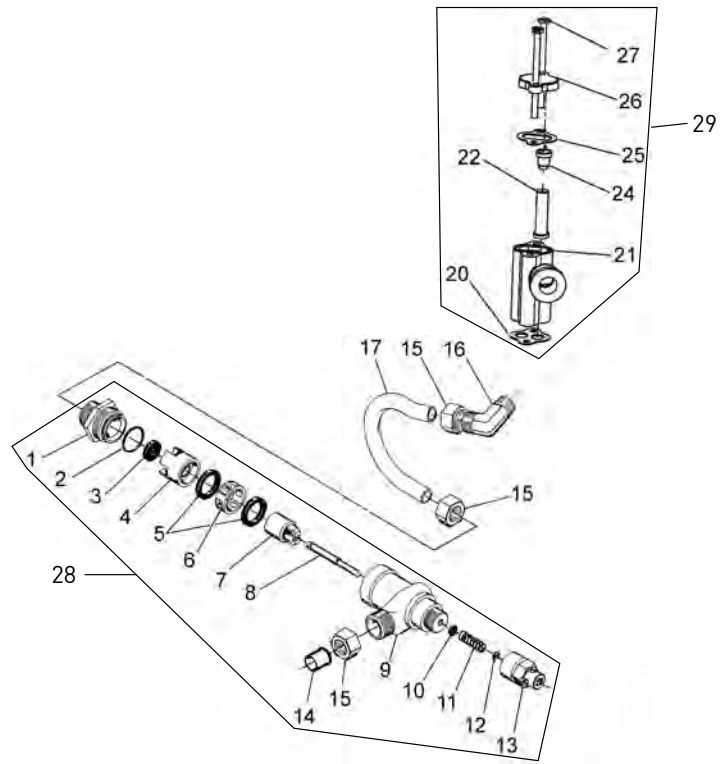

60034 Rev D

1700 BRINE SYSTEM ASSEMBLY *CONTINUED*

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	14792	Plug, End, Brine Valve			14801-05c	Nozzle, Injector, #5c, White
2	1	13201	Quad Ring, -020			14801-06c	Nozzle, Injector, #6c, Red
3	1	12085	Washer, Flow, 1.2 GPM	25	1	10229	Gasket, Injector Cap, 1600
	1	12086	Washer, Flow, 1.5 GPM	26	1	11893	Cap, Injector, Stainless Steel
	1	12087	Washer, Flow, 2.0 GPM		1	10228	Cap, Injector
	1	12088	Washer, Flow, 2.4 GPM	27	2	14804	Screw, Hex Hd Mach, 10 - 24 x 2-3/4-inch 18-8 Stainless Steel
	1	12089	Washer, Flow, 3.0 GPM				
	1	12090	Washer, Flow, 3.5 GPM	28	1	60034-00	Brine Valve, 1700, Blank
	1	12091	Washer, Flow, 4.0 GPM			60034-10	Brine Valve, 1700, 1.0 gpm
	1	12092	Washer, Flow, 5.0 GPM			60034-12	Brine Valve, 1700, 1.2 gpm
4	1	14785	Retainer, Flow Control			60034-15	Brine Valve, 1700, 1.5 gpm
5	3	14811	O-ring, -210, 560CD, Brine			60034-20	Brine Valve, 1700, 2.0 gpm
6	1	14798	Spacer, 1700, Brine			60034-24	Brine Valve, 1700, 2.4 gpm
7	1	14795	Piston, Brine Valve			60034-30	Brine Valve, 1700, 3.0 gpm
8	1	14797	Brine Valve Stem			60034-40	Brine Valve, 1700, 4.0 gpm
9	1	14790	Brine Valve Body			60034-50	Brine Valve, 1700, 5.0 gpm
10	1	12550	Quad Ring, -009	29	1	60381-03	Injector Assy, 1700, #3c, Complete
11	1	15310	Spring, Brine Valve			60381-04	Injector Assy, 1700, #4c, Complete
12	1	10250	Retaining Ring			60381-05	Injector Assy, 1700, #5c, Complete
13	1	15517	Guide, Stem			60381-06	Injector Assy, 1700, #6c, Complete
14	1	15415	Fitting, Insert, 1/2-inch, Tube				
15	3	15414	Nut, 2900, w/Sleeve				
16	1	15413	Fitting, Elbow, Male, 1/2T x 3/8 NPT				
17	1	15416	Tube, Brine, 2900/2750				
	1	16460	Tube, Brine, 2850/2900s				
	1	41447*	Tube, Brine, 2900s, U/F				
	1	42183	Tube, Brine, 1700, 2850s				
20	1	14805	Gasket, Injector Body 1600/1700				
21	1	17777	Body, Injector, 1700				
	1	17777-02*	Body, Injector, 1700 U/F				
22	1	14802-03c	Throat, Injector, #3c, Yellow				
		14802-04c	Throat, Injector, #4c, Green				
		14802-05c	Throat, Injector, #5c, White				
		14802-06c	Throat, Injector, #6c, Red				
24		14801-03c	Nozzle, Injector, #3c, Yellow				
		14801-04c	Nozzle, Injector, #4c, Green				

Not Shown:


1 16974 Fitting, Plastic, Female,
3/4 x 3/4 Slip

1 17996 Disperser, Air, Injector

*Upflow Only

NOTE: Item number 26 (11893) is used on injector sizes 2 through 5C. Part number 10228 is used on injector sizes 6C.

1710 BRINE SYSTEM ASSEMBLY

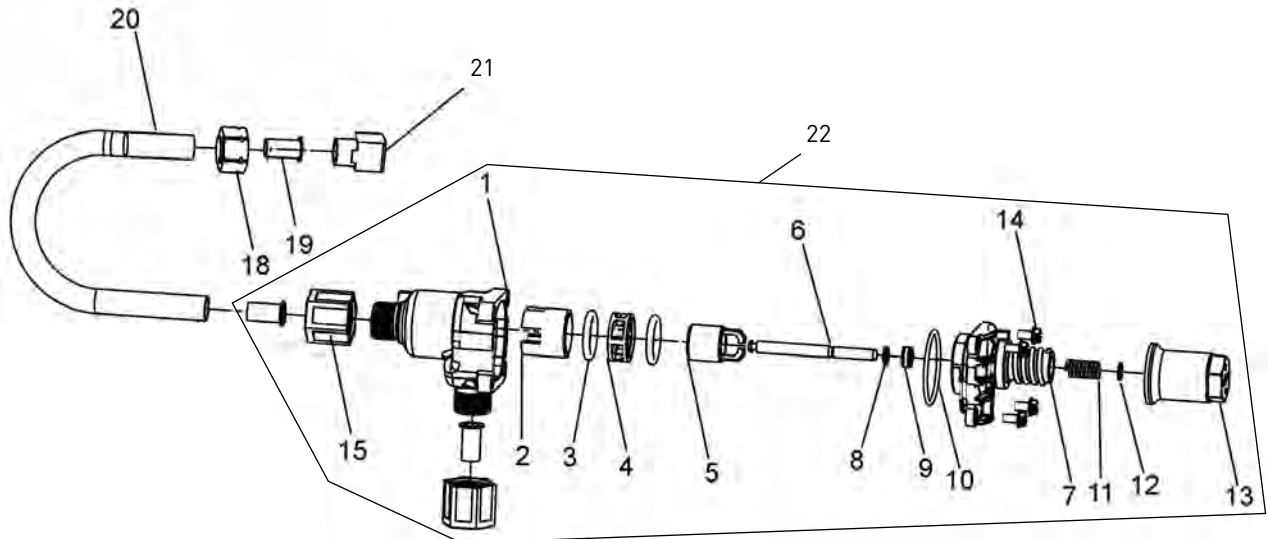

60604 Rev F


Item No.	QTY	Part No.	Description
1	1	41202	Brine Valve, 1700, Plastic, Top
2	1	14785-01	Retainer, Flow Control
3	1	14811	O-Ring, -210, 560CD, Brine
4	1	14798	Spacer, 1700, Brine
5	1	14795	Piston, Brine Valve
6	1	41203	Stem, Brine, 1710, Plastic, 2900
7	1	41201	Brine Valve, 1700, Plastic, Bottom
8	5	17908	Sleeve, Brine Valve Stem
9	1	12550	Quad Ring, -009
10	3	41547	O-Ring, 2mmx35mm
11	2	15310	Spring, Brine Valve
12	2	10250	Ring, Retaining
13	1	17906	Guide, Brine Valve Stem
14	2	14202-01	Screw, Hex Wsh Mach, 8-32 X 5/16
15	2	41056	Nut Assembly, 1/2-inch Plastic
18	1	15414	Nut, 2900, w/Sleeve
19	1	15415	Fitting, Insert, 1/2-inch, Tube
20	1	16460	Tube, Brine, 2850, 2900s
	1	42183	Tube, Brine, 1700/2850s
	1	15416	Tube, Brine, 2900/2750
	1	41447*	Tube, Brine, 2900s U/F
21	1	15413	Fitting, Elbow, Male, 1/2T X 3/8NPT

Item No.	QTY	Part No.	Description
22		60605-00	Brine Valve, 1710, 2750, Blank
		60605-10	Brine Valve, 1710, 2750, 1.0 gpm
		60605-12	Brine Valve, 1710, 2750, 1.2 gpm
		60605-15	Brine Valve, 1710, 2750, 1.5 gpm
		60605-20	Brine Valve, 1710, 2750, 2.0 gpm
		60605-24	Brine Valve, 1710, 2750, 2.4 gpm
		60605-30	Brine Valve, 1710, 2750, 3.0 gpm
		60605-40	Brine Valve, 1710, 2750, 4.0 gpm
		60605-50	Brine Valve, 1710, 2750, 5.0 gpm

Not Shown

1		19151	Washer, Flow, 1.0 gpm
1		17996	Dispenser, Air, Injector
1		414193-00	Label, Blank, BLFC, 1710


2-INCH BRASS METER ASSEMBLY

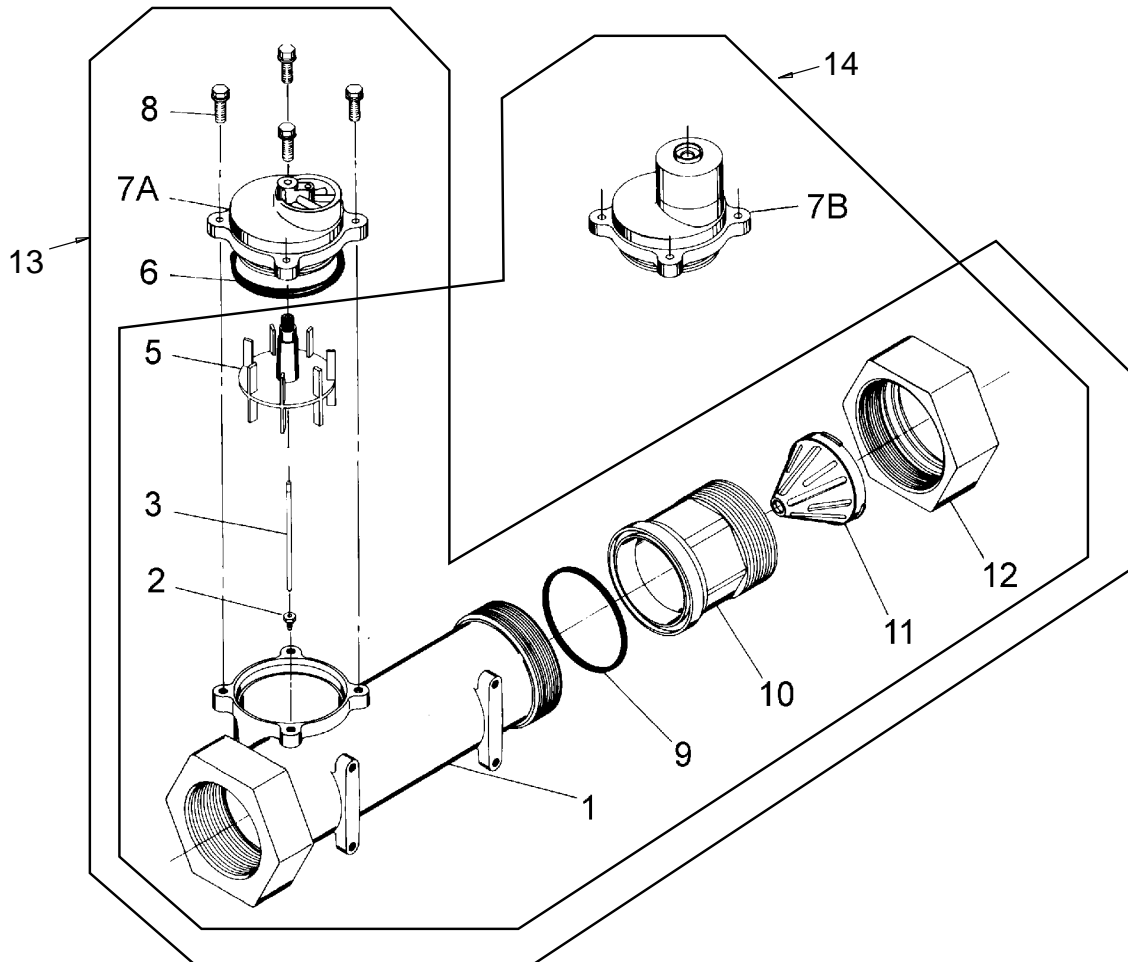

Item No.	QTY	Part No.	Description
1	1	14456	Body, Meter, 2-inch
		14456-20	Body, Meter, 2-inch, BSP, Metric
2	1	15532	Seat, Impeller Shaft, Hex
3	1	15432	Shaft
5	1	15374	Impeller Assy, 2-inch Meter
6	1	13847	O-ring, -137, Std/560CD, Meter
7A	1	14038	Meter Cap Assembly, Std, Plastic
7B	1	15150	Meter Cap Assembly, 3/4-inch to 2-inch, Ext Plastic, Pdl
8	4	12112	Screw, Hex Hd Mach, 10-24 x 1/2 18-8 Stainless Steel
		15886	Screw, Hex Hd, M5 x 12 SS, Metric
9	1	14679	O-ring, -227, Meter
10	1	14568	Fitting, Nipple, 2-inch
		14568-10	Fitting, Nipple, 2-inch BSP, Brass

Item No.	QTY	Part No.	Description
11	1	14680	Flow Straightener
12	1	14569	Nut, 2900 Meter
13			Meter Assy, 2-inch Inline, NPT, STD, Brass, Paddlewheel
			Meter Assy, 2-inch Inline, BSP, STD, Brass, Paddlewheel
14			Meter Assy, 2-inch Inline, NPT, EXT, Brass Paddlewheel
			Meter Assy, 2-inch Inline, BSP, EXT, Brass, Paddlewheel
Not Shown			
		61439	Meter Sleeve w/O-rings, 1-1/2 inch

2-INCH STAINLESS STEEL METER ASSEMBLY

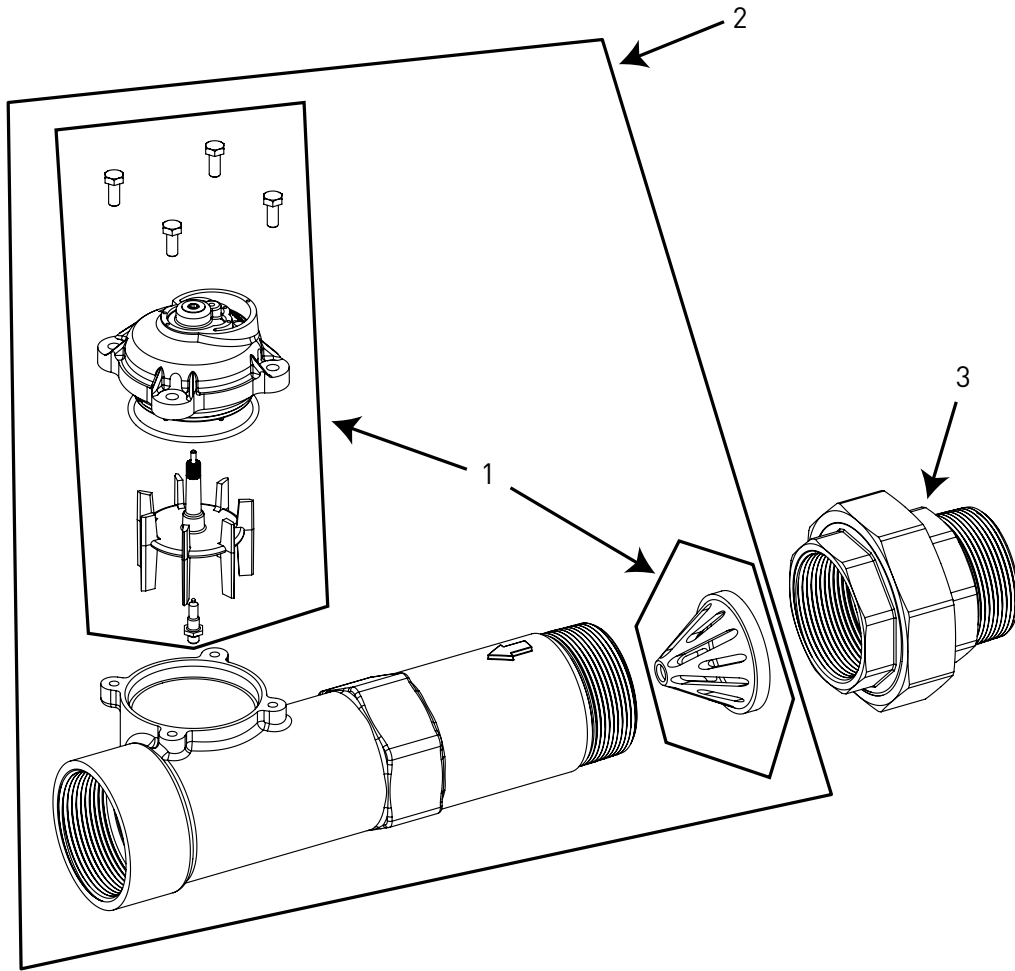


⚠ IMPORTANT: For valves equipped with electromechanical timers and stainless steel meters, refer to the Meter Dome and Union Orientation section.

Item No.	QTY	Part No.	Description
1	1	62048-01	Service Kit, 2 inch Meter, Standard Range
1	1	62048-02	Service Kit, 2 inch Meter, Extended Range
2	1	61934-10	Meter Assy, 2 inch, Inline, Stainless Steel, NPT Standard Range
1	1	61934-11	Meter Assy, 2 inch, Inline, Stainless Steel, NPT Extended Range
1	1	61934-20	Meter Assy, 2 inch, Inline, Stainless Steel, BSP Standard Range
1	1	61934-21	Meter Assy, 2 inch, Inline, Stainless Steel, BSP Extended Range
3	1	44026	Union, 2 inch, NPT (Optional on models with electronic controls)
1	1	44027	Union, 2 inch, BSP (Optional on models with electronic controls)

Item No.	QTY	Part No.	Description
Not Shown (optional)			
1	1	62073	Meter Sleeve, 2 inch to 1-1/2 inch (optional)


2-INCH PLASTIC METER ASSEMBLY

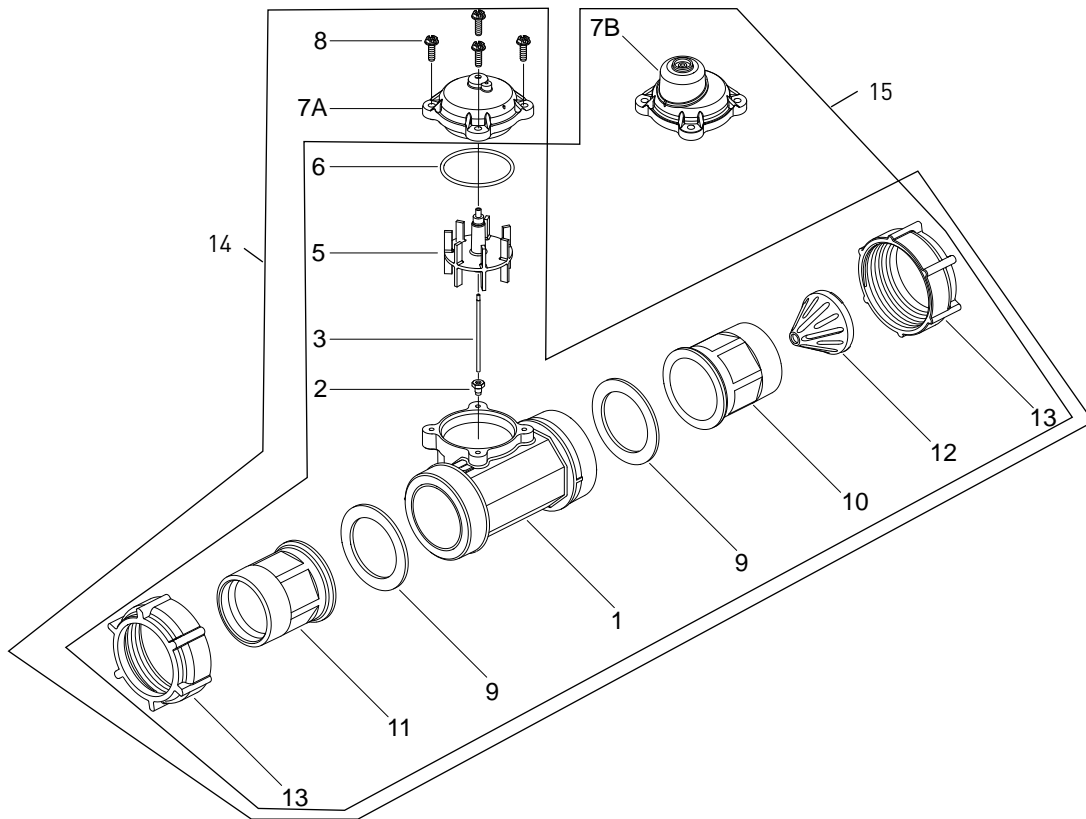

60621 Rev D

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	17689	Body, Meter, 2-inch Plastic w/Impeller Shaft Seat	12	1	14680	Flow Straightener
2	1	15532	Seat, Impeller Shaft, Hex	13	2	17988	Nut, 2-inch Meter
3	1	15432	Shaft, Impeller, Stainless Steel	14		60620	Meter Assy, 2-inch, Inline, NPT, STD, Plastic, w/Plastic Nipples, Paddlewheel
5	1	15374	Impeller Assy, 2-inch Meter			60620-01	Meter Assy, 2-inch, Inline, NPT, STD, Plastic, w/Brass Nipples, Paddlewheel
6	1	13847	O-ring, -137, Std/560CD, Meter			60620-10	Meter Assy, 2-inch Inline, BSP, STD, Plastic, Plastic Nipples, Paddlewheel
7A	1	14038	Meter Cap Assembly			60620-11	Meter Assy, 2-inch, Inline, BSP, STD, Plastic, Brass Nipples, Paddlewheel
7B		15150	Meter Cap Assembly, EXT	15		60621	Meter Assy, 2-inch, Inline, NPT, EXT, Plastic, w/Plastic Nipples, Paddlewheel
8	4	12473	Screw, Hex Wsh, 10-24 x 5/8 18-8 Stainless Steel			60621-01	Meter Assy, 2-inch, Inline, NPT, EXT, Plastic, w/Brass Nipples, Paddlewheel
9	2	40666	Seal, Face, 2-inch, Plastic Meter			60621-10	Meter Assy, 2-inch Inline, BSP, EXT, Plastic, Plastic Nipples, Paddlewheel
10A	1	17987-001	Fitting, Nipple, 2-inch, Plastic, NPT, Machined, Flow Straightener			60621-11	Meter Assy, 2-inch, Inline, BSP, EXT, Plastic, Brass Nipples, Paddlewheel
10B	1	17987-101	Fitting, Nipple, 2-inch, Plastic, BSP, Machined, Flow Straightener				
11A	1	17987-000	Fitting, Nipple, 2-inch, Plastic, NPT				
11B	1	17987-100	Fitting, Nipple, 2-inch, Plastic, BSP				


1600 SERVICE VALVE OPERATOR (NEW STYLE)

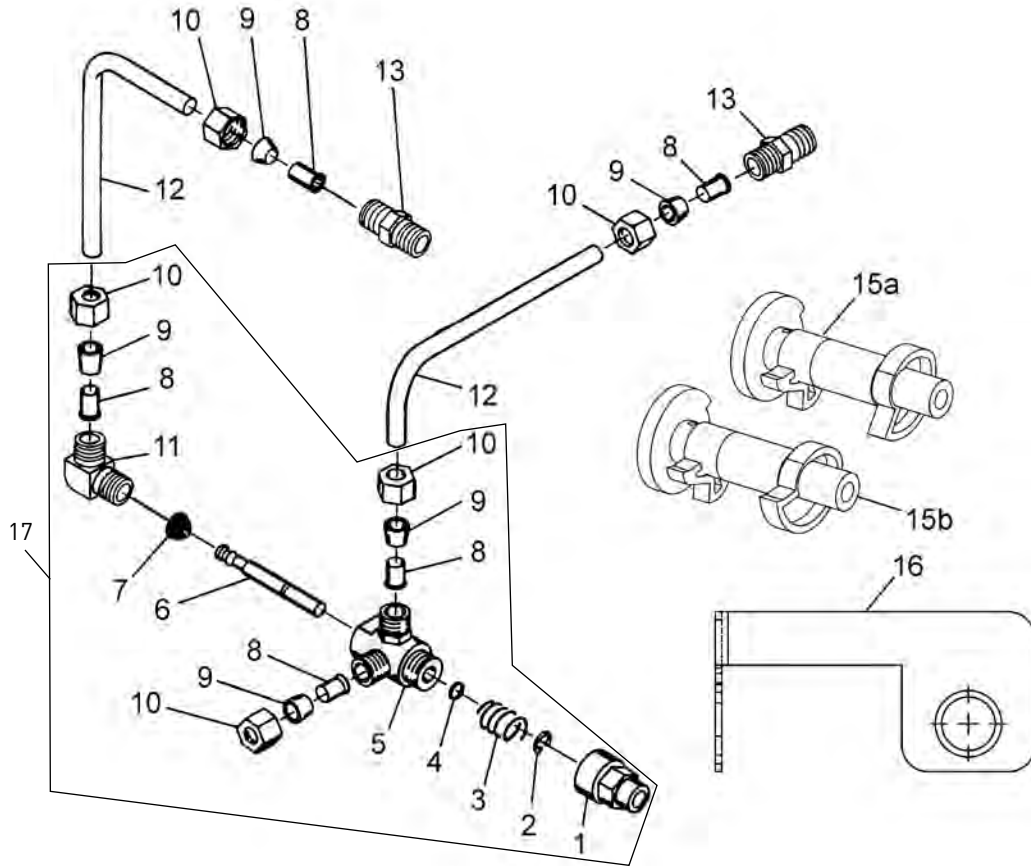

60150 Rev A

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	11749	Guide, Brine Valve Stem	14	2	15415	Fitting, Insert, 1/2-inch Tube
2	1	10250	Ring, Retaining	15a	1	12472	Cam Assembly, Tri-Stack, After RR
3	1	10249	Spring, Brine Valve	15b	1	15770	Cam Assembly, Special Tri-Stack After Brine Fill
4	1	12550	Quad Ring, -009	16	1	12114	Bracket, Motor Outboard, Coated
5	2	10785	SVO Body Assy Brass Valves	17	1	60150-01	Service Valve Operator Assembly, 1600, New Style, Item No's 1-11
6	1	12552	Brine Valve Stem, 1600				
7	1	12626	Seat, Brine Valve				
8	5	10332	Fitting, Insert, 3/8-inch				
9	5	10330	Fitting, Sleeve, 3/8-inch Celcon				
10	5	10329	Fitting, Tube, 3/8 Nut, Brass				
11	1	10328	Fitting, Elbow, 90 Deg 1/4 NPT x 3/8 Tube				
12	2	12897	Tube, Fitting, 3/8 x 9 3/4				
13	1	16730	Fitting, Male, 1/4 x 1				


2300 SAFETY BRINE VALVE

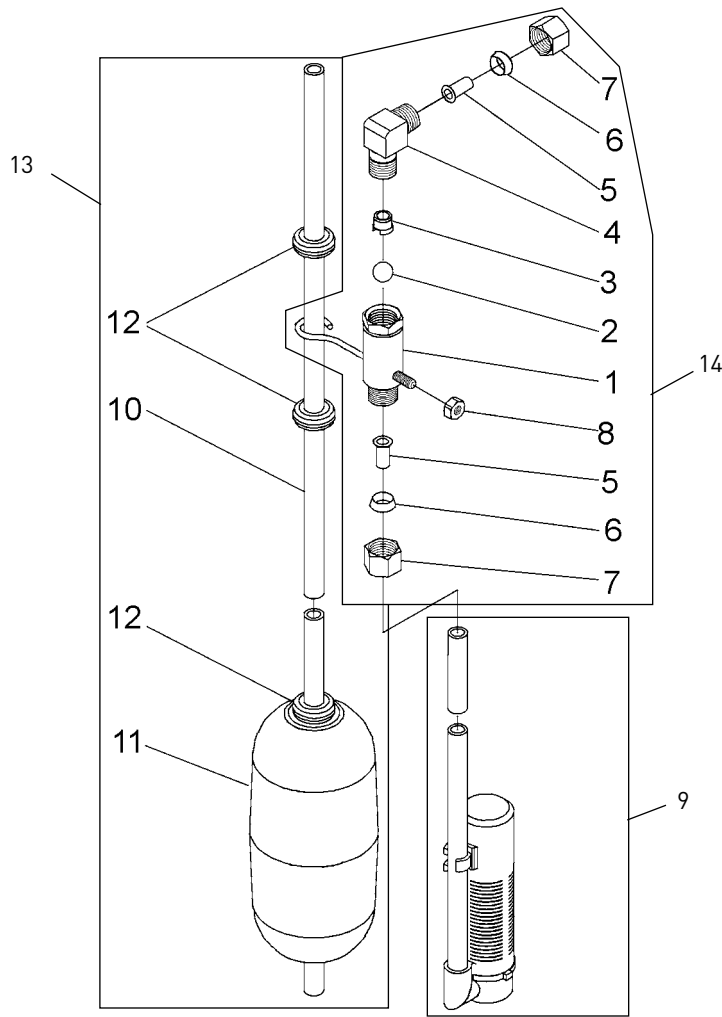

60027 Rev D

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	60027-00	Safety Brine Valve, 2300, Less Elbow			60002-36	Air Check, #500, 36 inches Long
2	1	10138	Ball, 3/8-inch, Brass			60002-48	Air Check, #500, 48 inches Long
3	1	11566	Ball Stop, Slow Fill			60002-26.25	Air Check, #500, 26.25 inches Long
4	1	10328	Fitting, Elbow, 90 Deg. 1/4 NPT x 3/8 Tube			60002-33.25	Air Check, #500, 33.25 inches Long
5	1	10332	Fitting, Insert, 3/8				
6	1	10330	Fitting, Sleeve, 3/8 Celcon	10	1	10149	Rod, Float, 30-inch
7	1	10329	Fitting, Tube, 3/8 Nut, Brass	11	1	10700	Float Assy, White
8	1	10186	Nut, Hex, 10-32	12	3	10150	Grommet, .30 Dia
9	1	60002-10	Air Check, #500, American Hydro	13	1	60028-30	Float Assy, 2300, 30-inch White
		60002-11.38	Air Check, #500, 11.38 inches Long	14	1	60027-FFA	Safety Brine Valve, 2300, Fitting Facing Arm
		60002-24	Air Check, #500, 24 inches Long			60027-FFS	Safety Brine Valve, 2300 Fitting Facing Stud
		60002-27	Air Check, #500, 27 inches Long				
		60002-32	Air Check, #500, 32 inches Long				
		60002-34	Air Check, #500, 34 inches Long				


2310 SAFETY BRINE VALVE

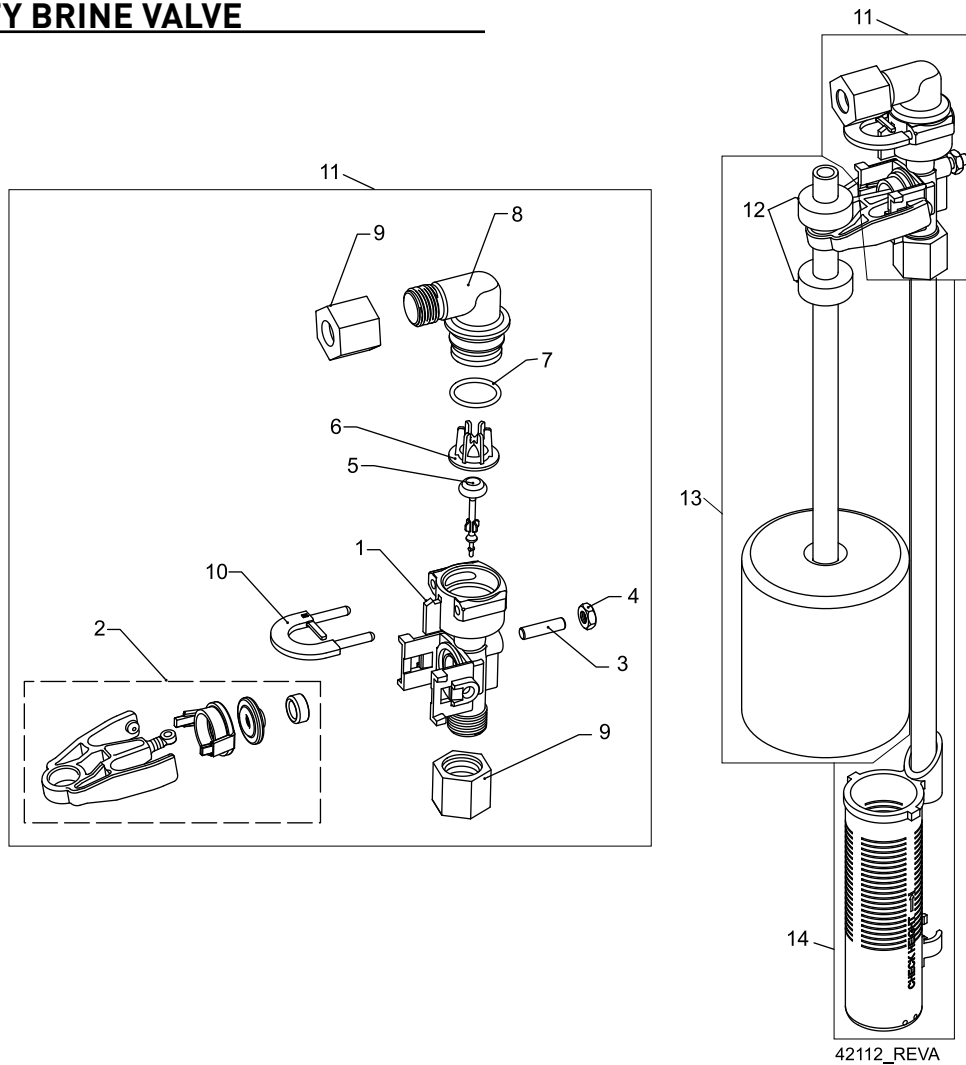

42112_REVA

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	19645	Body, Safety Brine Valve, 2310			60068-30	Float Assy, 2310, w/30-inch Rod
2	1	19803	Safety Brine Valve Assy	14	1	60002-10	Air Check, #500, American Hydro
3	1	19804	Screw, Sckt Hd, Set, 10-24 x .75			60002-11.38	Air Check, #500, 11.38-inch Long
4	1	19805	Nut, Hex, 10-24, Nylon Black			60002-24	Air Check, #500, 24-inch Long
5	1	19652-01	Poppet Assy, SBV w/O-ring			60002-27	Air Check, #500, 27-inch Long
6	1	19649	Flow Dispenser			60002-32	Air Check, #500, 32-inch Long
7	1	11183	O-ring, -017			60002-34	Air Check, #500, 34-inch Long
8	1	19647	Elbow, Safety Brine Valve			60002-36	Air Check, #500, 36-inch Long
9	2	19625	Nut Assy, 3/8-inch Plastic			60002-48	Air Check, #500, 48-inch Long
10	1	18312	Retainer, Drain			60002-26.25	Air Check, #500, 26.25-inch Long
11	1	60014	Safety Brine Valve Assy, 2310			60002-33.25	Air Check, #500, 33.25-inch Long
12	2	10150	Grommet, .30 Dia				
13	1	60068-8.06	Float Assy, 2310, w/8.06-inch Rod				
		60068-10.5	Float Assy, 2310, w/10.5-inch Rod				
		60068-11.5	Float Assy, 2310, w/11.5-inch Rod				
		60068-20	Float Assy, 2310, w/20-inch Rod				

2350 SAFETY BRINE VALVE

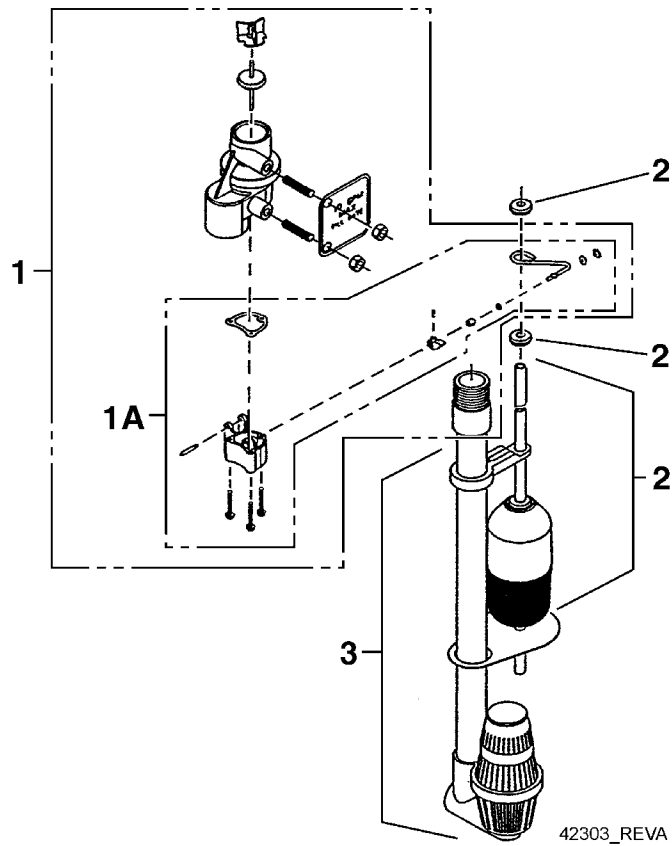

Item No.	QTY	Part No.	Description
1	1	60038	Safety Brine Valve, 2350
1A	1	61024	Actuator Assy, 2350 Brine
2	1	60028-30	Float Assy, 2350, 30-inch Wht
	1	60026-30SAN	Float Assy, 2350, 30-inch Hot Water
3	1	60009-00	Air Check, #900, Commercial Less Fittings
	1	60009-01	Air Check, #900, Commercial, Hot Water Less Fittings

Not Shown

.....	1	18603	Fitting Assy, 900 Air Check 2350
.....	1	18602	Fitting Assy, 900 Air Check

GENERAL SERVICE HINTS FOR METER CONTROL

Problem: Softener delivers hard water

Reason: Reserve capacity has been exceeded.

Correction: Check salt dosage requirements and reset program wheel to provide additional reserve.

Reason: Program wheel is not rotating with meter output.

Correction: Pull cable out of meter cover and rotate manually. Program wheel must move without binding and clutch must give positive clicks when program wheel strikes regeneration stop. If it does not, replace timer.

Reason: Meter is not measuring flow.


Correction: Check meter with meter checker.

TROUBLESHOOTING


Problem	Cause	Correction
Water conditioner fails to regenerate.	Electrical service to unit has been interrupted	Assure permanent electrical service (check fuse, plug, pull chain, or switch)
	Timer is defective.	Replace timer.
	Power failure.	Reset time of day.
Hard water.	By-pass valve is open.	Close by-pass valve.
	No salt is in brine tank.	Add salt to brine tank and maintain salt level above water level.
	Injector screen plugged.	Clean injector screen.
	Insufficient water flowing into brine tank.	Check brine tank fill time and clean brine line flow control if plugged.
	Hot water tank hardness.	Repeated flushings of the hot water tank is required.
	Leak at distributor tube.	Make sure distributor tube is not cracked. Check o-ring and tube pilot.
	Internal valve leak.	Replace seals and spacers and/or piston.
Unit used too much salt.	Improper salt setting.	Check salt usage and salt setting.
	Excessive water in brine tank.	See "Excessive water in brine tank".
Loss of water pressure.	Iron buildup in line to water conditioner.	Clean line to water conditioner.
	Iron buildup in water conditioner.	Clean control and add mineral cleaner to mineral bed. Increase frequency of regeneration.
	Inlet of control plugged due to foreign material broken loose from pipes by recent work done on plumbing system.	Remove piston and clean control.
Loss of mineral through drain line.	Air in water system.	Assure that well system has proper air eliminator control. Check for dry well condition.
	Improperly sized drain line flow control.	Check for proper drain rate.
Iron in conditioned water.	Fouled mineral bed.	Check backwash, brine draw, and brine tank fill. Increase frequency of regeneration. Increase backwash time.
Excessive water in brine tank.	Plugged drain line flow control.	Clean flow control.
	Plugged injector system.	Clean injector and screen.
	Timer not cycling.	Replace timer.
	Foreign material in brine valve.	Replace brine valve seat and clean valve.
	Foreign material in brine line flow control.	Clean brine line flow control.
Softener fails to draw brine.	Drain line flow control is plugged.	Clean drain line flow control.
	Injector is plugged.	Clean injector
	Injector screen plugged.	Clean screen.
	Line pressure is too low.	Increase line pressure to 20 psi
	Internal control leak	Change seals, spacers, and piston assembly.
	Service adapter did not cycle.	Check drive motor and switches.
Control cycles continuously.	Misadjusted, broken, or shorted switch.	Determine if switch or timer is faulty and replace it, or replace complete power head.
Drain flows continuously.	Valve is not programming correctly.	Check timer program and positioning of control. Replace power head assembly if not positioning properly.
	Foreign material in control.	Remove power head assembly and inspect bore. Remove foreign material and check control in various regeneration positions.
	Internal control leak.	Replace seals and piston assembly.

WATER CONDITIONER FLOW DIAGRAMS - DOWNFLOW


1 Service Position

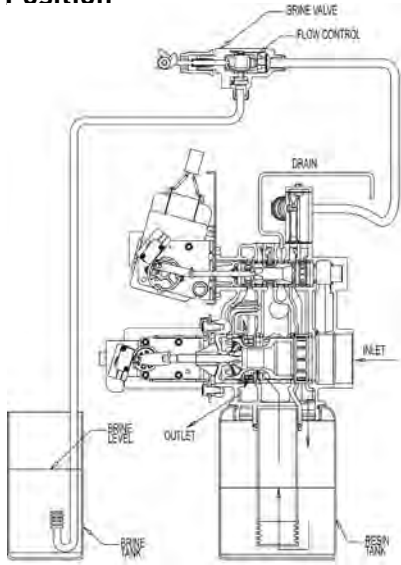


4 Slow Rinse Position

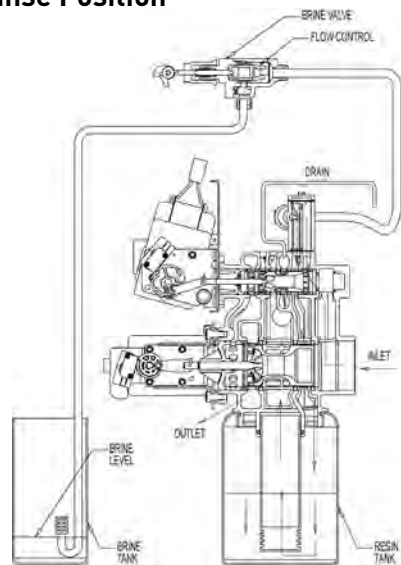


2 Backwash Position

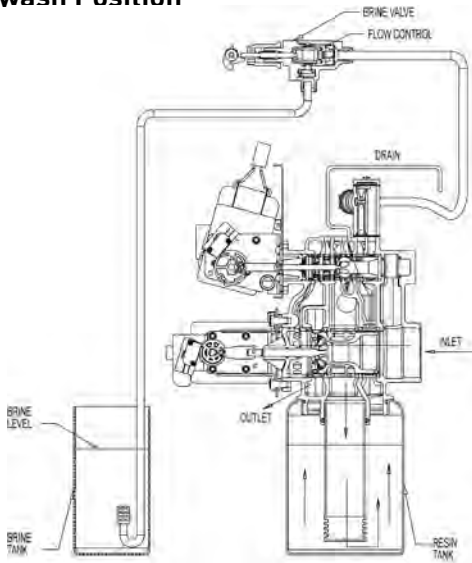


5 Rapid Rinse

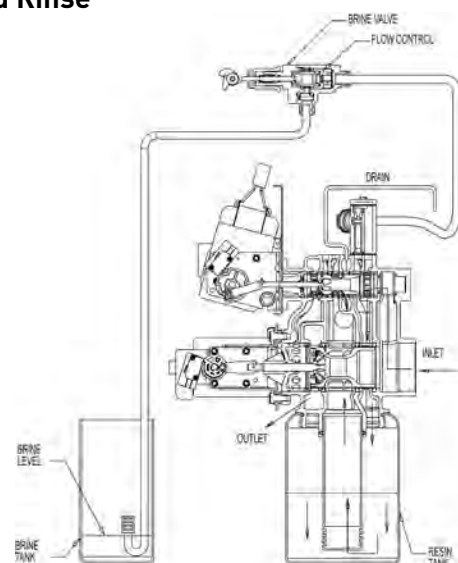

3 Brine Position

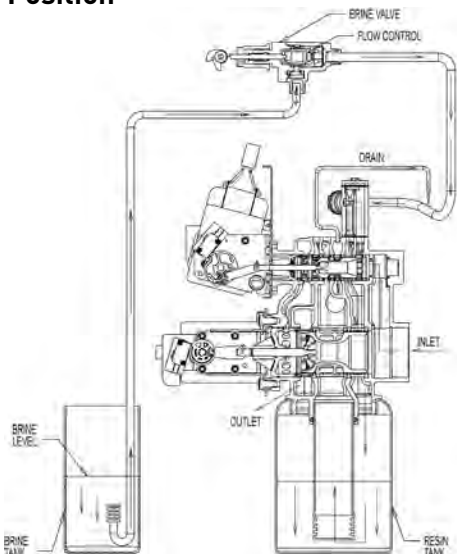


6 Brine Tank Refill Position

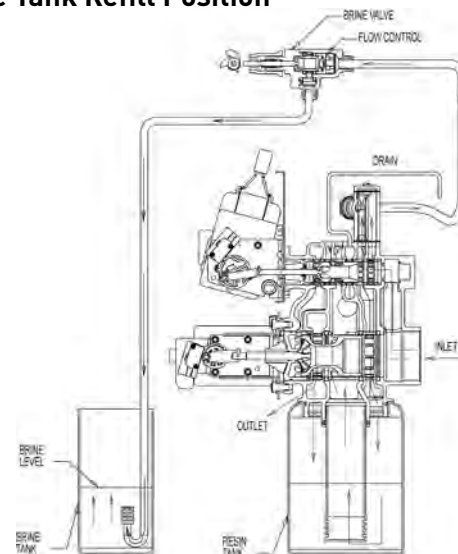


WATER CONDITIONER FLOW DIAGRAMS - UPFLOW


1 Service Position

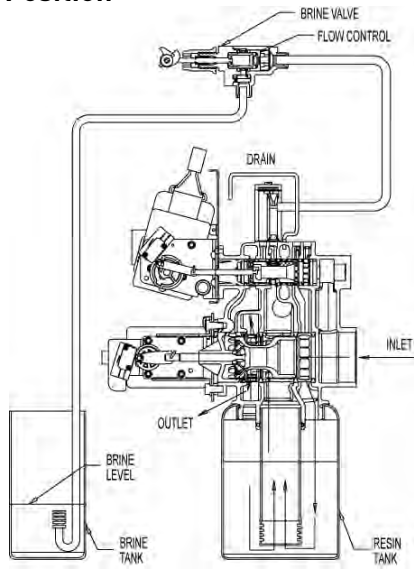


4 Back Wash Position

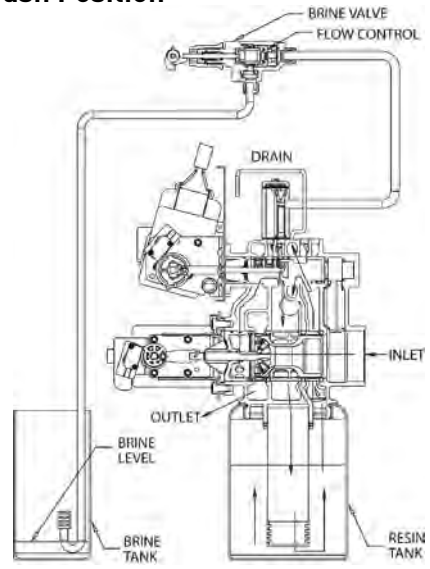


2 Brine Position

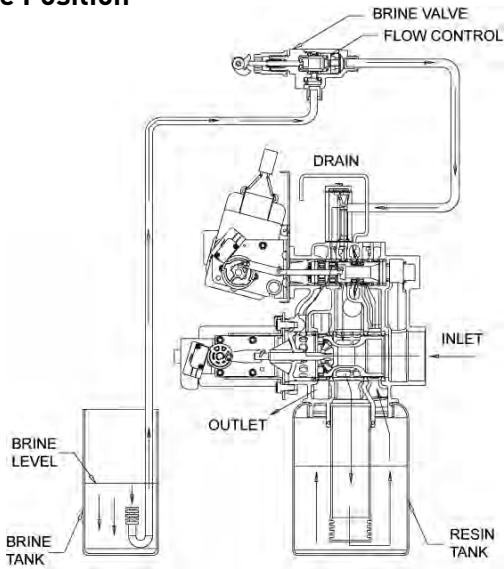


5 Rapid Rinse Position

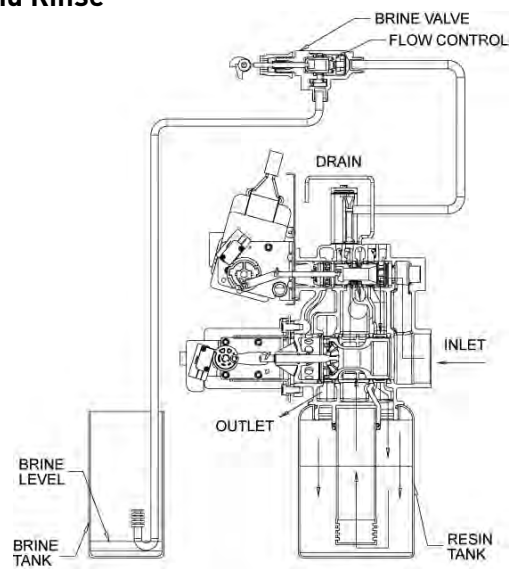


3 Slow Rinse Position

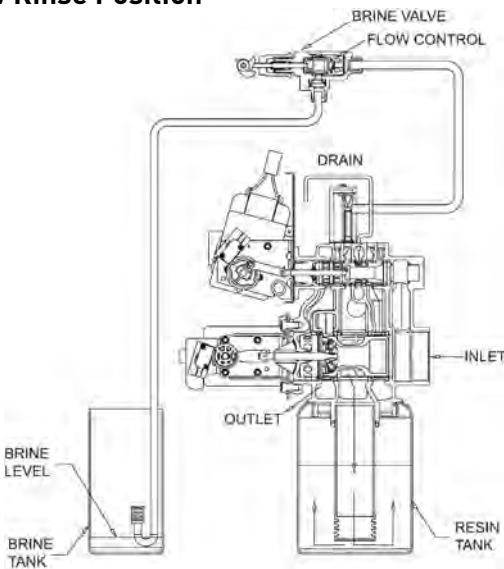

6 Brine Tank Fill Position

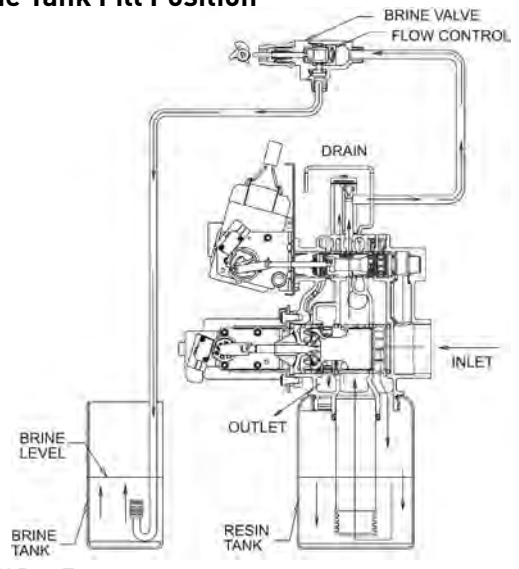


FLOW DATA & INJECTOR DRAW RATES - DOWNFLOW

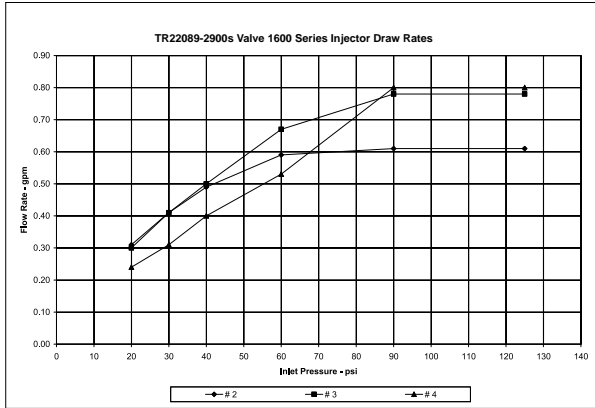


1600 series injectors	Draw Rate - gpm		
pressure	# 2	# 3	# 4
20	0.31	0.30	0.24
30	0.41	0.41	0.31
40	0.49	0.50	0.40
60	0.59	0.67	0.53
90	0.61	0.78	0.80
125	0.61	0.78	0.80

all injectors used the steel cap and an air disperser

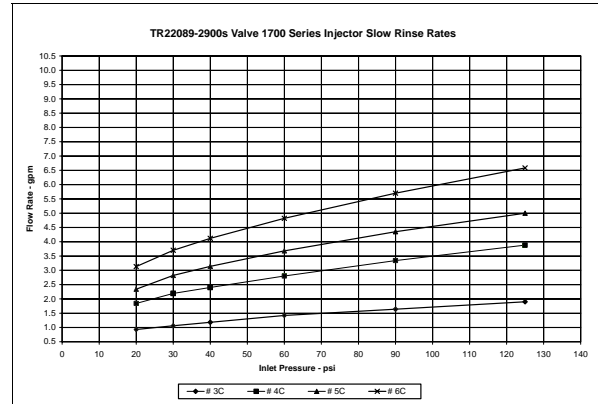


1700 series injectors	Slow Rinse - gpm			
pressure	# 3C	# 4C	# 5C	# 6C
20	0.93	1.84	2.34	3.13
30	1.06	2.19	2.82	3.70
40	1.18	2.40	3.14	4.12
60	1.42	2.80	3.68	4.82
90	1.64	3.34	4.35	5.70
125	1.90	3.88	5.00	6.58

3C - steel cap, no o-ring, air disperser
 # 4C & 5C - steel cap, o-ring, air disperser
 # 6C & 7C - brass cap, o-ring, no air disperser

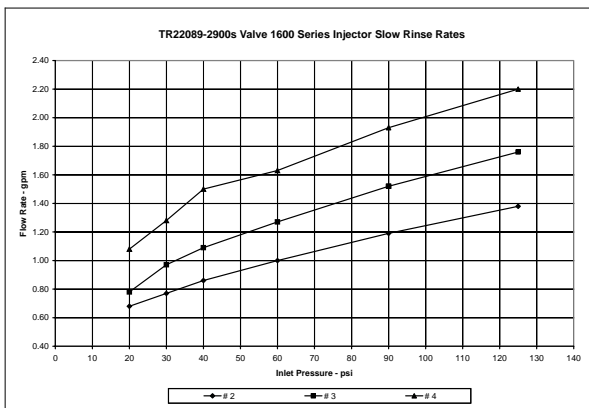



1600 series injectors	Slow Rinse Rates - gpm		
pressure	# 2	# 3	# 4
20	0.68	0.78	1.08
30	0.77	0.97	1.28
40	0.86	1.09	1.50
60	1.00	1.27	1.63
90	1.19	1.52	1.93
125	1.38	1.76	2.20

all injectors used the steel cap and an air disperser

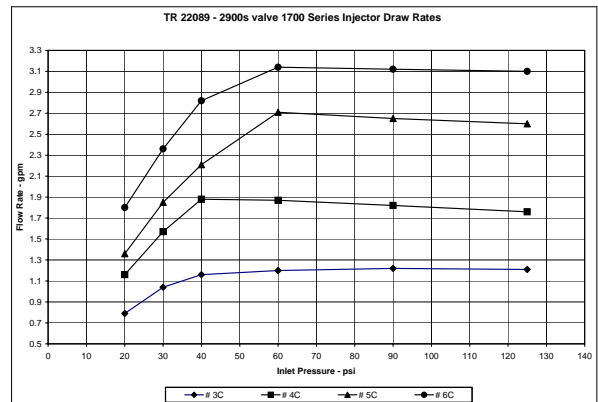





1700 series injectors	Draw Rate - gpm			
pressure	# 3C	# 4C	# 5C	# 6C
20	0.79	1.16	1.36	1.80
30	1.04	1.57	1.85	2.36
40	1.16	1.88	2.21	2.82
60	1.20	1.87	2.71	3.14
90	1.22	1.82	2.65	3.12
125	1.21	1.76	2.60	3.10

3C - steel cap, no o-ring, air disperser
 # 4C & 5C - steel cap, o-ring, air disperser
 # 6C - brass cap, o-ring, no air disperser

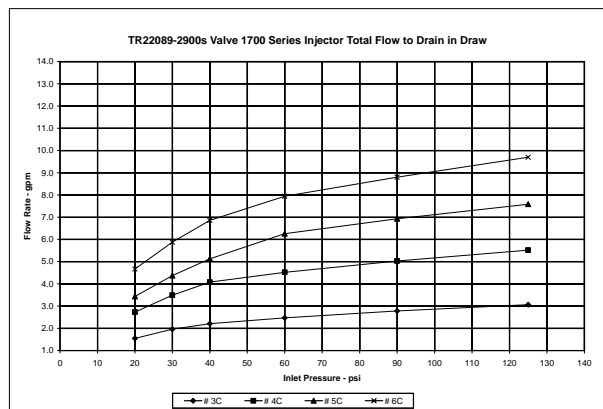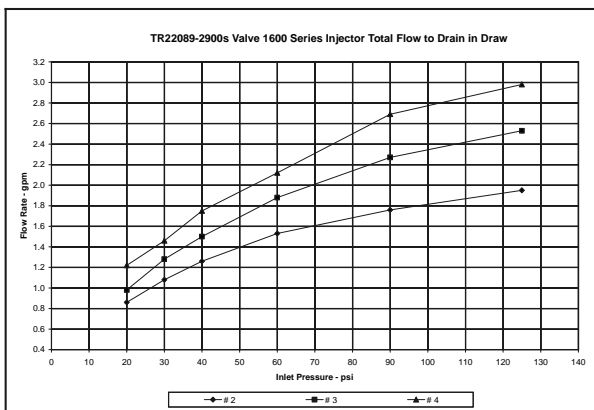

TR22089 Rev A


ENVIRONMENTAL BACKPLATE DIMENSIONS

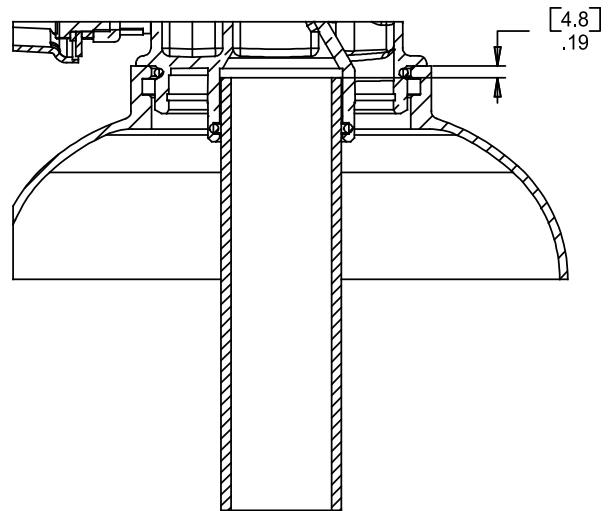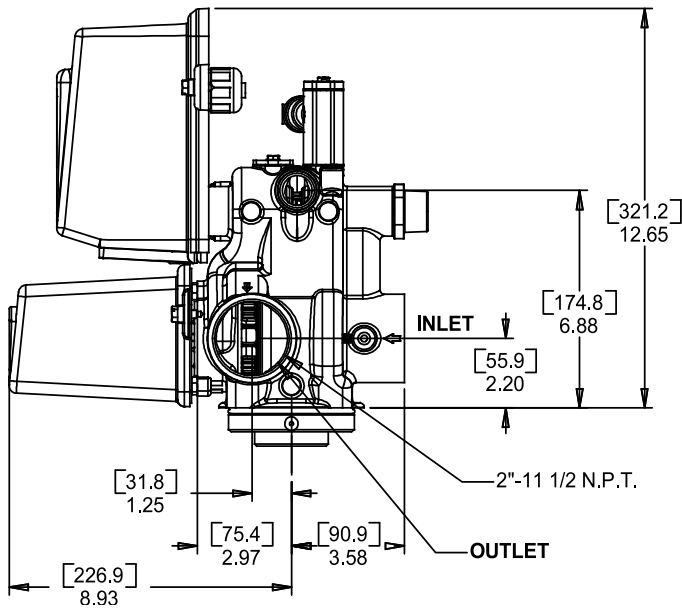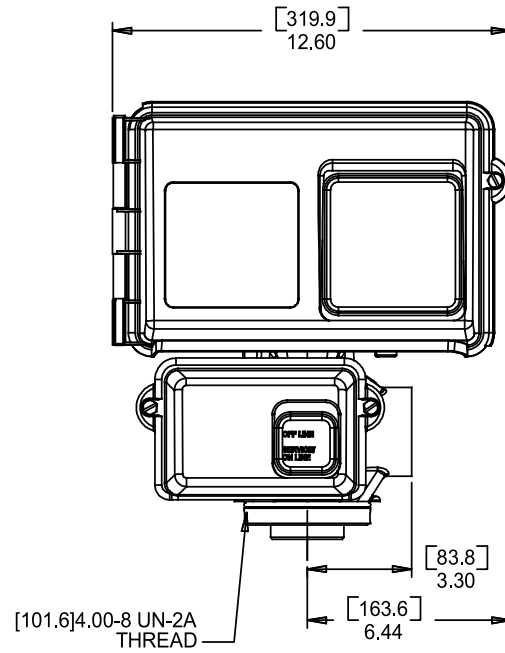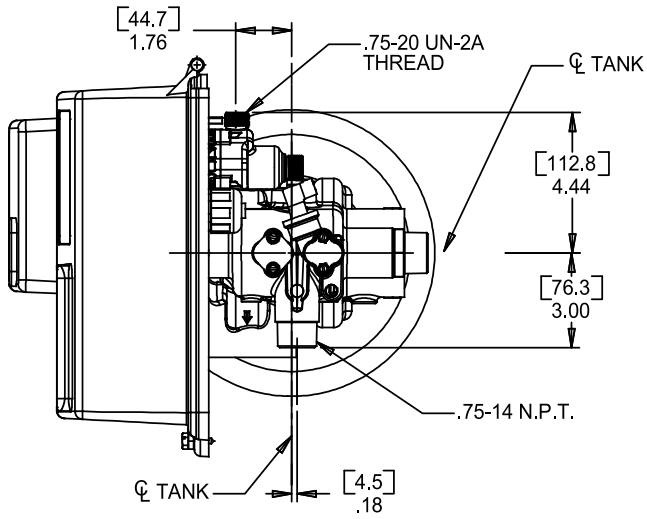

61500-2900LNE Rev B


SYSTEM #4

Typical Single Tank Installation with Optional Meter

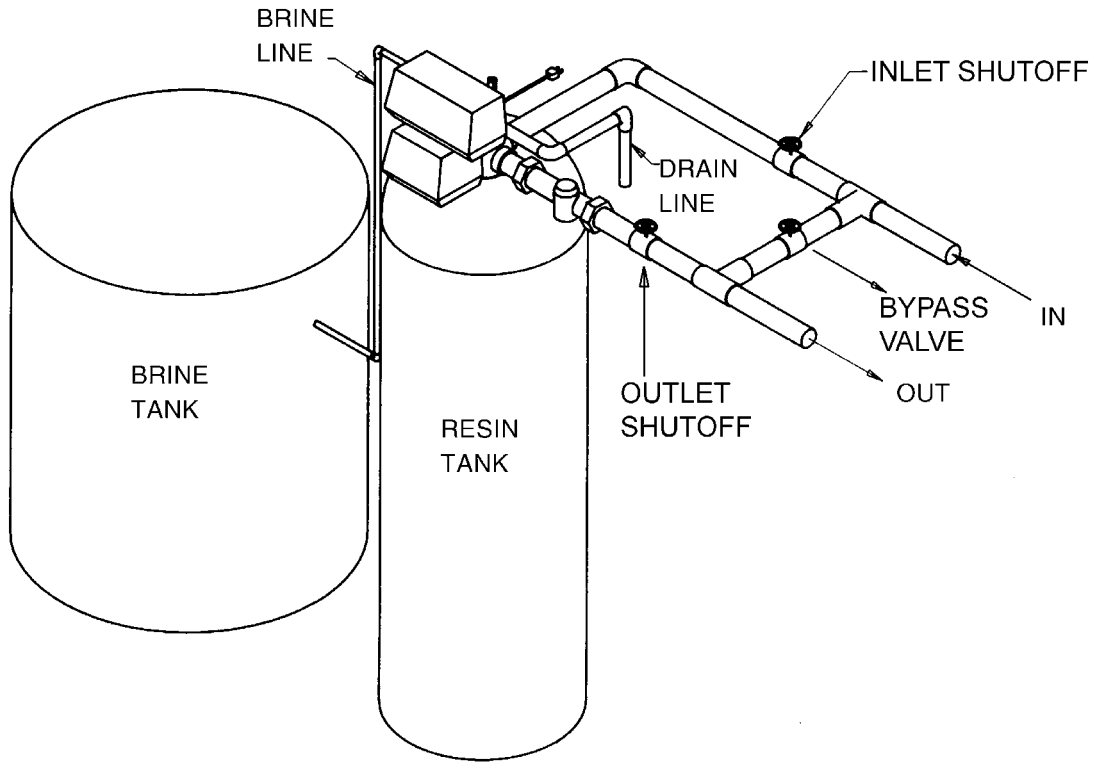

SYSTEM #5 INTERLOCK


Typical Twin Tank Installation with Optional Meter Interlock and No Hard Water Bypass

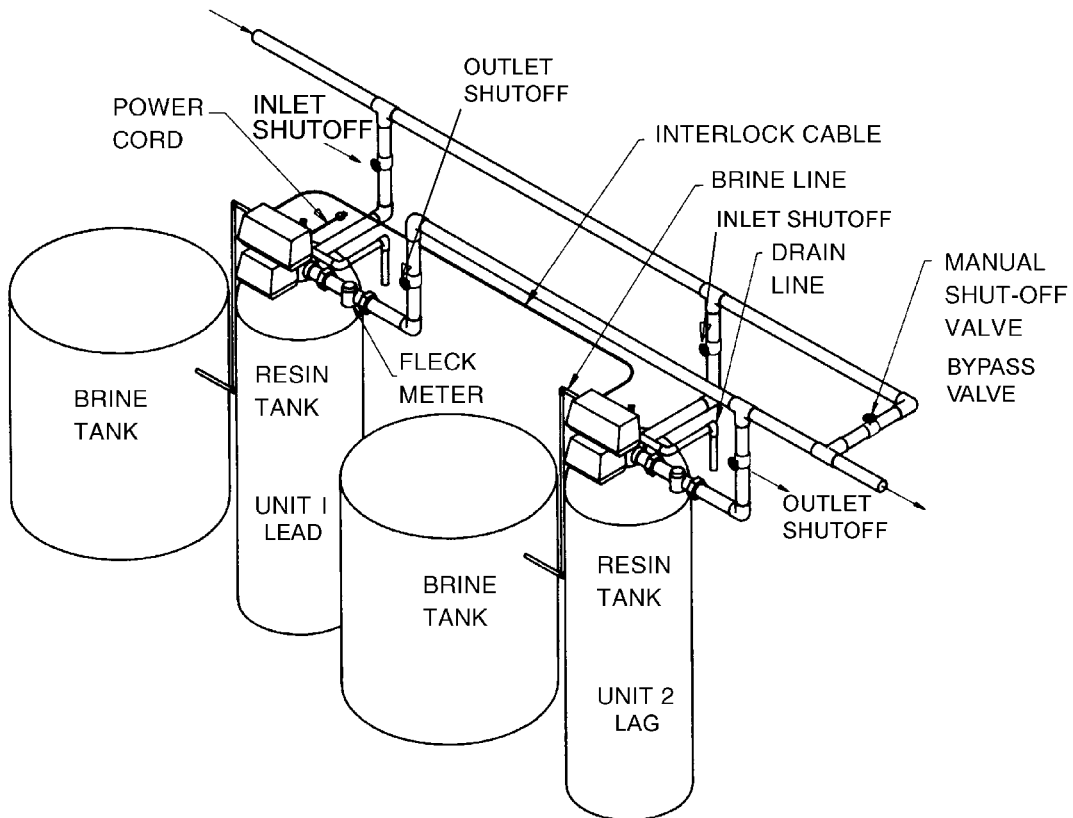

SYSTEM #6 & #7

Twin Series Regeneration Installation with a Remote Meter

Twin Alternator Installation

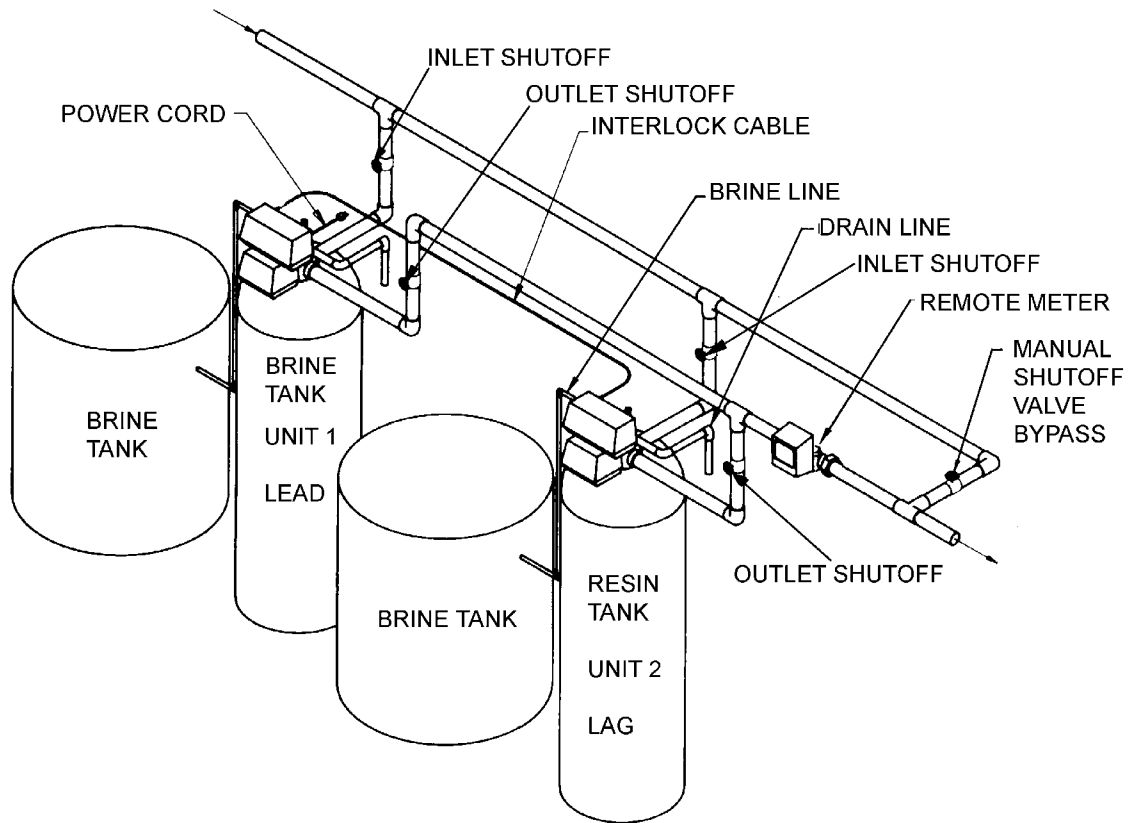


NOTE: On System 7, the power cord is on Unit 2.

NOTE: System 7 can run with either one or two brine tanks. Two brine tanks should be used if regeneration is less than 4 hours.

SYSTEM #4 WIRING

Single Valve Regeneration Immediate and Delayed Valve Wiring


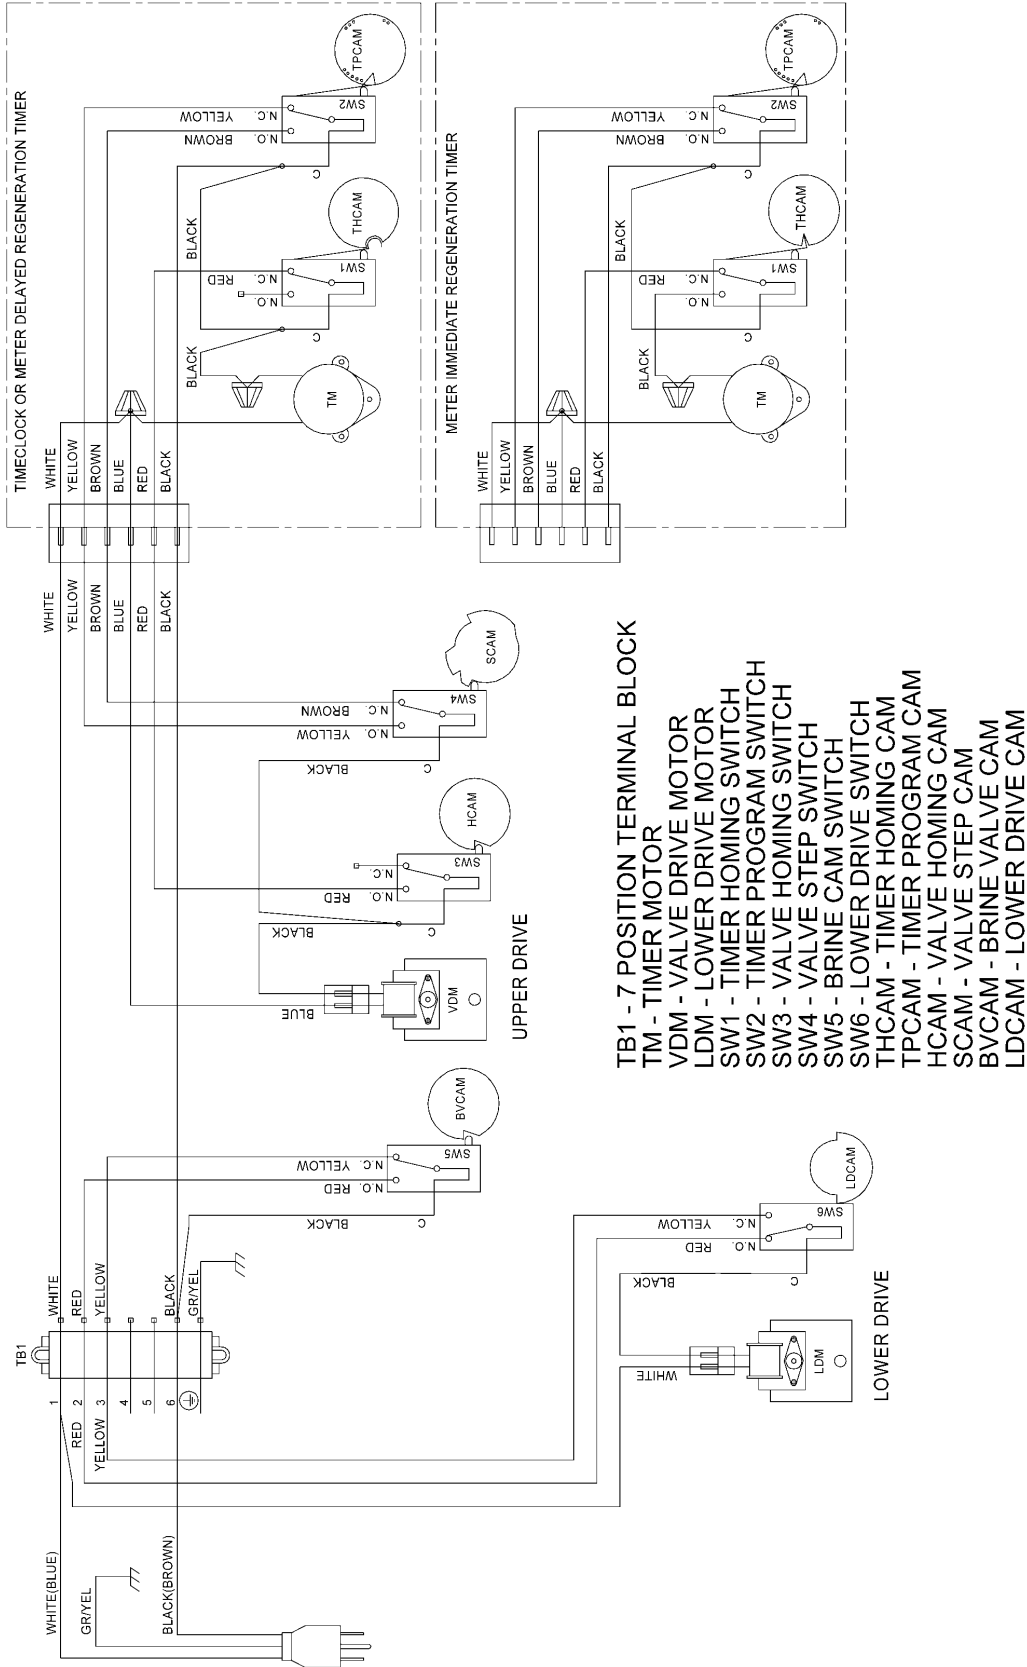


NOTE:
 1. SINGLE TANK TIMECLOCK, METER DELAYED, OR METER IMMEDIATE REGENERATION.
 2. VALVE SHOWN IN SERVICE.

SYSTEM #4 WIRING *CONTINUED*

With Remote Starter Valve Wiring

REMOTE METER WIRING

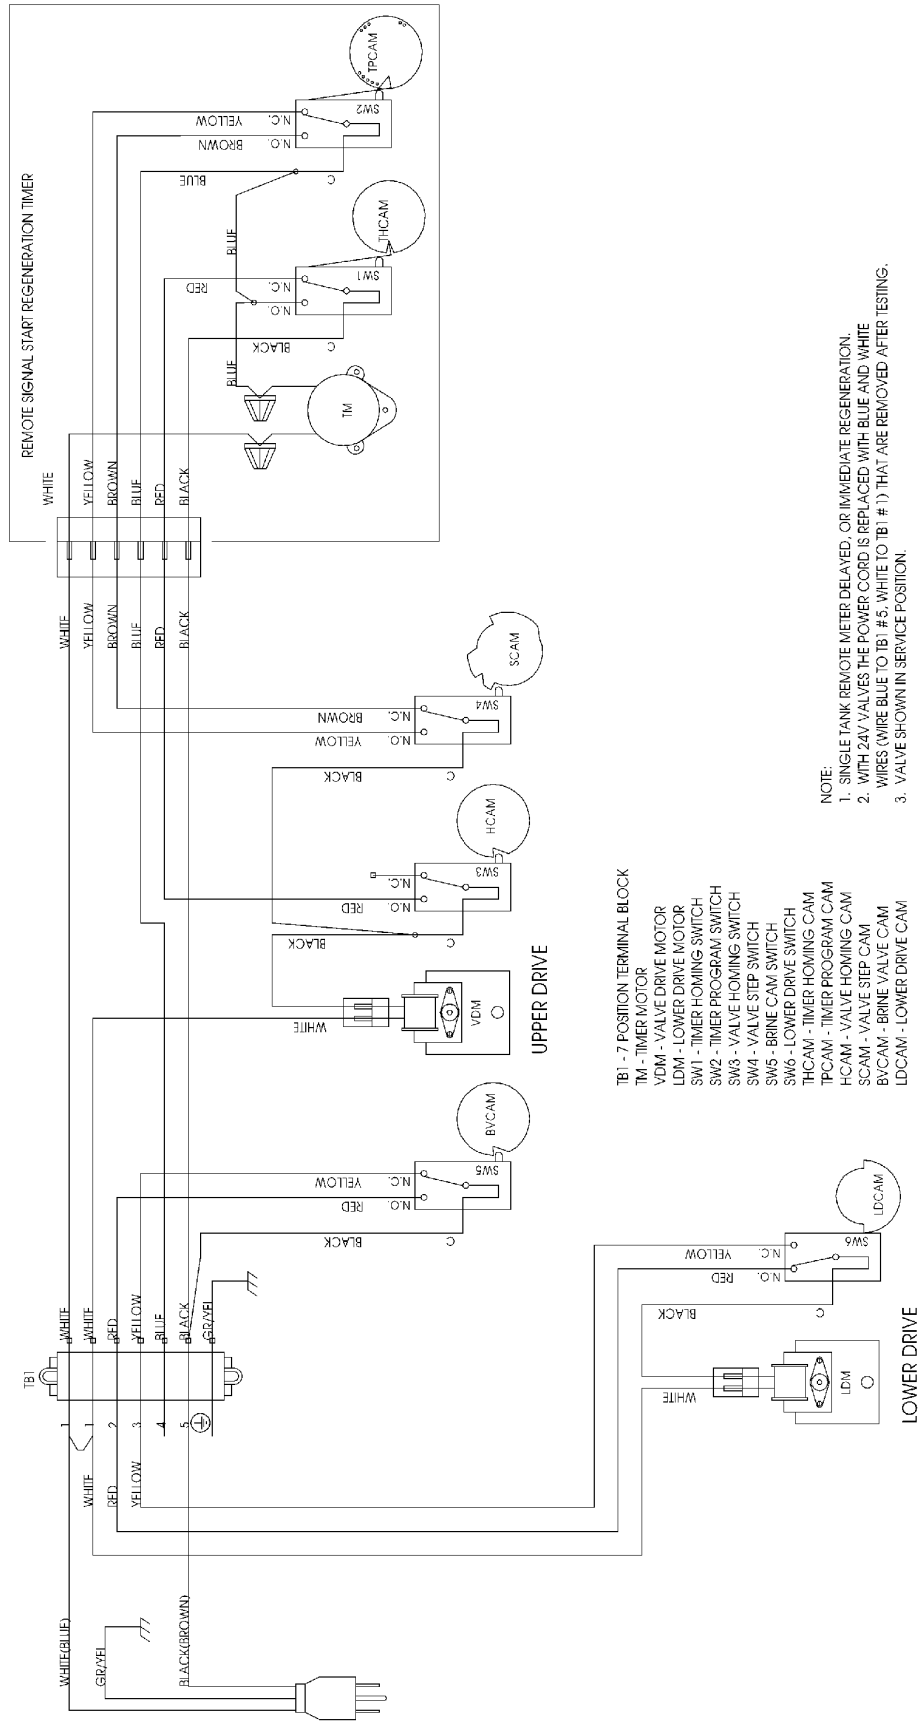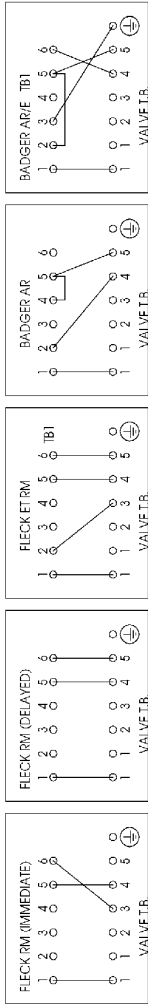


NOTE:
 1. SINGLE TANK REMOTE METER DELAYED, OR IMMEDIATE REGENERATION.
 2. WITH 24V VALVES THE POWER CORD IS REPLACED WITH BLUE AND WHITE WIRES (WIRE BLUE TO TB1 #5, WHITE TO TB1 #1) THAT ARE REMOVED AFTER TESTING.
 3. VALVE SHOWN IN SERVICE POSITION.

TB1 - 7 POSITION TERMINAL BLOCK
 TM - TIMER MOTOR
 VDM - VALVE DRIVE MOTOR
 LDM - LOWER DRIVE MOTOR
 SW1 - TIMER HOMING SWITCH
 SW2 - VALVE HOMING SWITCH
 SW3 - VALVE STEP SWITCH
 SW4 - VALVE STEP SWITCH
 SW5 - BRINE CAM SWITCH
 SW6 - LOWER DRIVE SWITCH
 THCAM - TIMER HOMING CAM
 IPCAM - TIMER PROGRAM CAM
 HCCAM - VALVE HOMING CAM
 SCAM - VALVE STEP CAM
 BVCAM - BRINE VALVE CAM
 LDCAM - LOWER DRIVE CAM


SYSTEM #5 WIRING

Interlocked Regeneration Valve Wiring

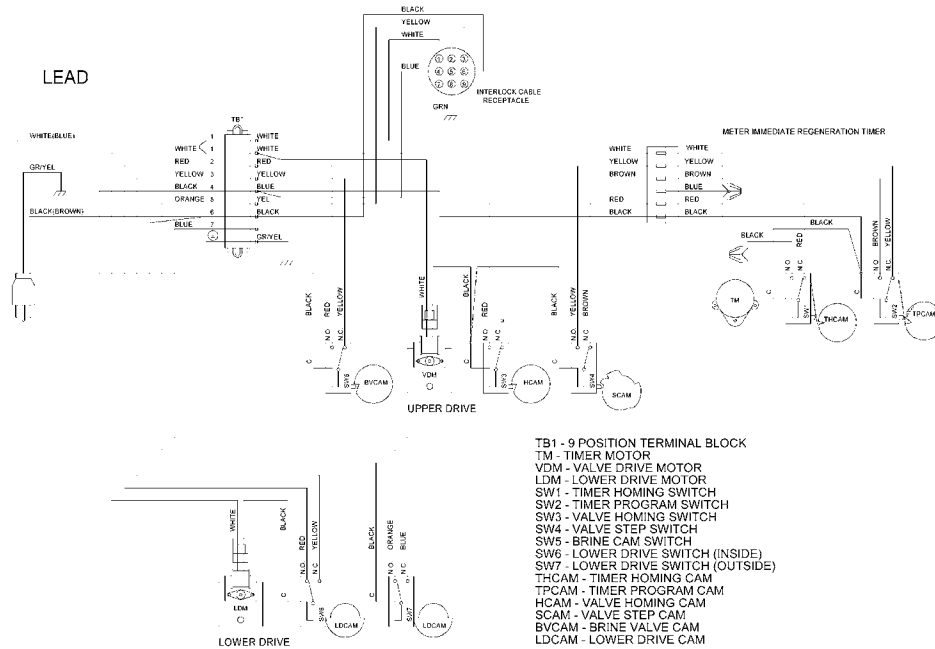

NOTE:
 1. TWO TANK INTERLOCKED, INDIVIDUAL METER, IMMEDIATE REGENERATION.
 2. BOTH TANKS NORMALLY IN SERVICE. ONLY ONE TANK IN REGENERATION, THE OTHER REMAINS IN SERVICE.
 3. VALVE SHOWN IN SERVICE.

18685-01 Rev D

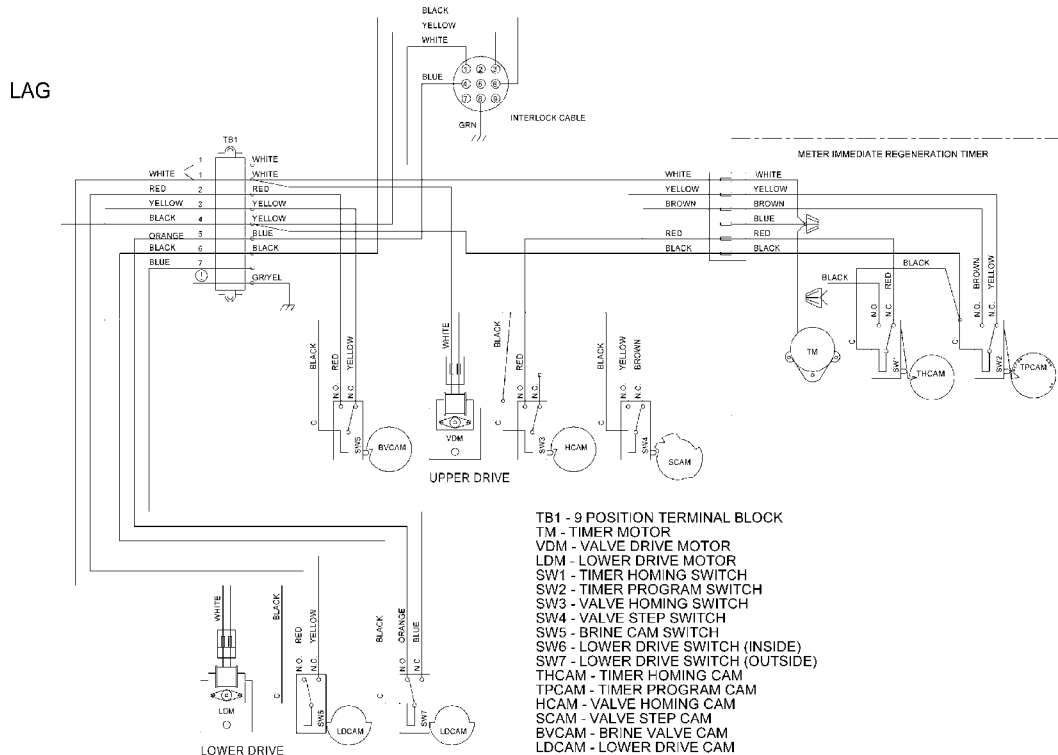


NOTE:
 1. TWO TANK INTERLOCKED, INDIVIDUAL METER, IMMEDIATE REGENERATION.
 2. BOTH TANKS NORMALLY IN SERVICE. ONLY ONE TANK IN REGENERATION, THE OTHER REMAINS IN SERVICE.
 3. VALVE SHOWN IN SERVICE.

18685-02 Rev D


SYSTEM #6 WIRING

Series Regeneration Valve Wiring

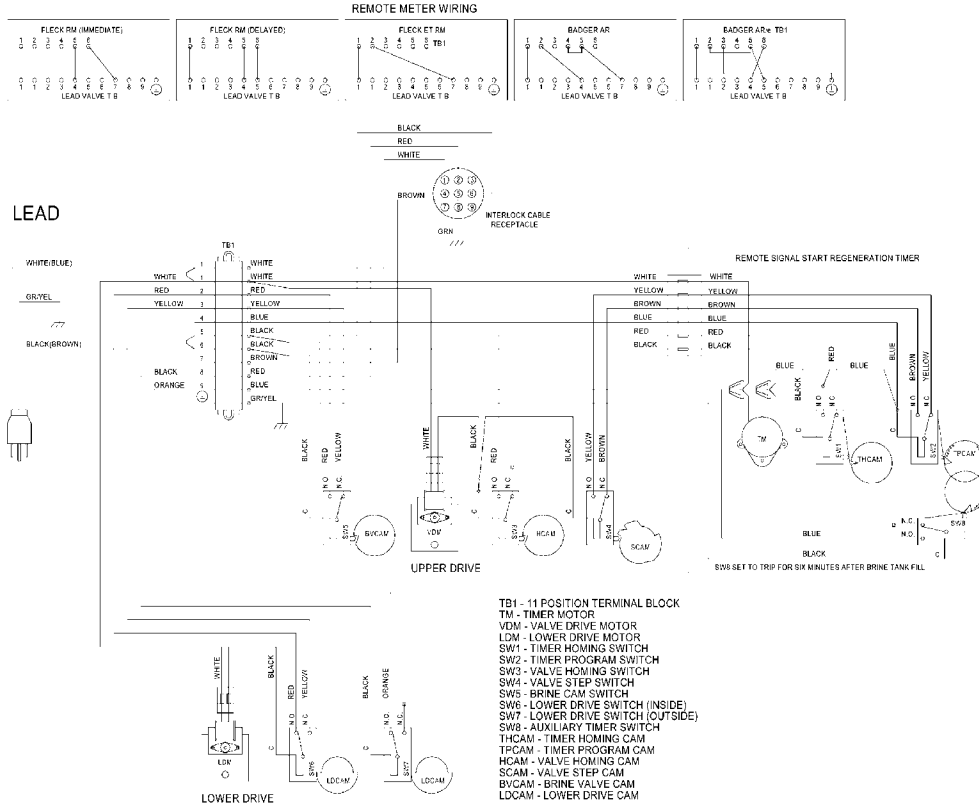

- NOTE:**
1. TWO TANK INTERLOCKED, SINGLE REMOTE METER, SERIES REGENERATION.
 2. BOTH TANKS NORMALLY IN SERVICE.
 3. ONLY ONE TANK IN REGENERATION, THE OTHER REMAINS IN SERVICE.
 4. LEAD VALVE REGENERATES FIRST, FOLLOWED IMMEDIATELY BY LAG VALVE.

18686-01 Rev E

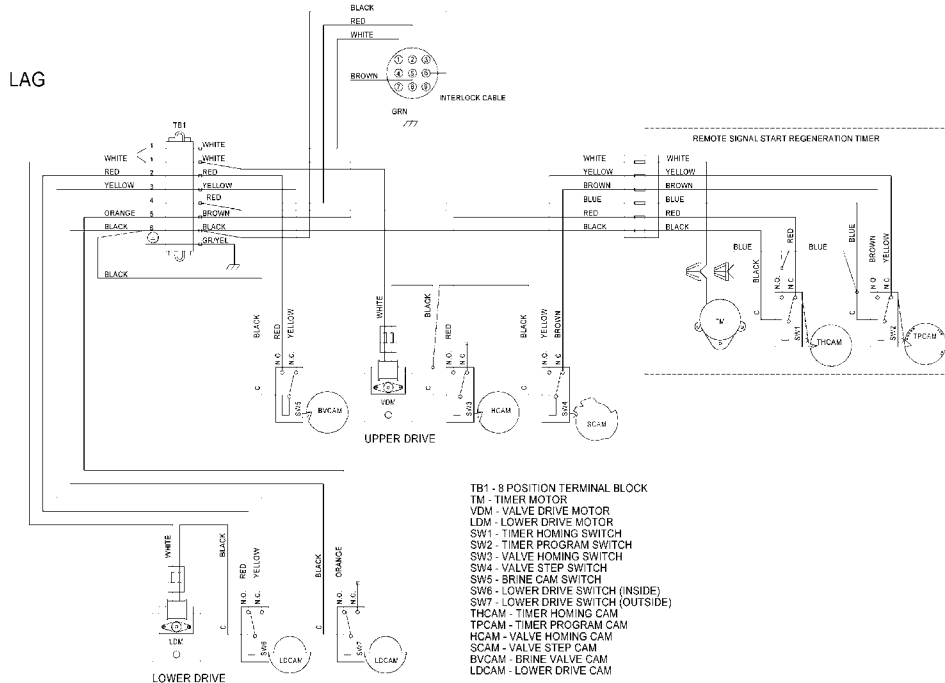


- NOTE:**
1. TWO TANK INTERLOCKED, SINGLE REMOTE METER, SERIES REGENERATION.
 2. BOTH TANKS NORMALLY IN SERVICE.
 3. ONLY ONE TANK IN REGENERATION, THE OTHER REMAINS IN SERVICE.
 4. LEAD VALVE REGENERATES FIRST, FOLLOWED IMMEDIATELY BY LAG VALVE.


18686-02 Rev E

SYSTEM #7 WIRING

Alternating Regeneration Valve Wiring

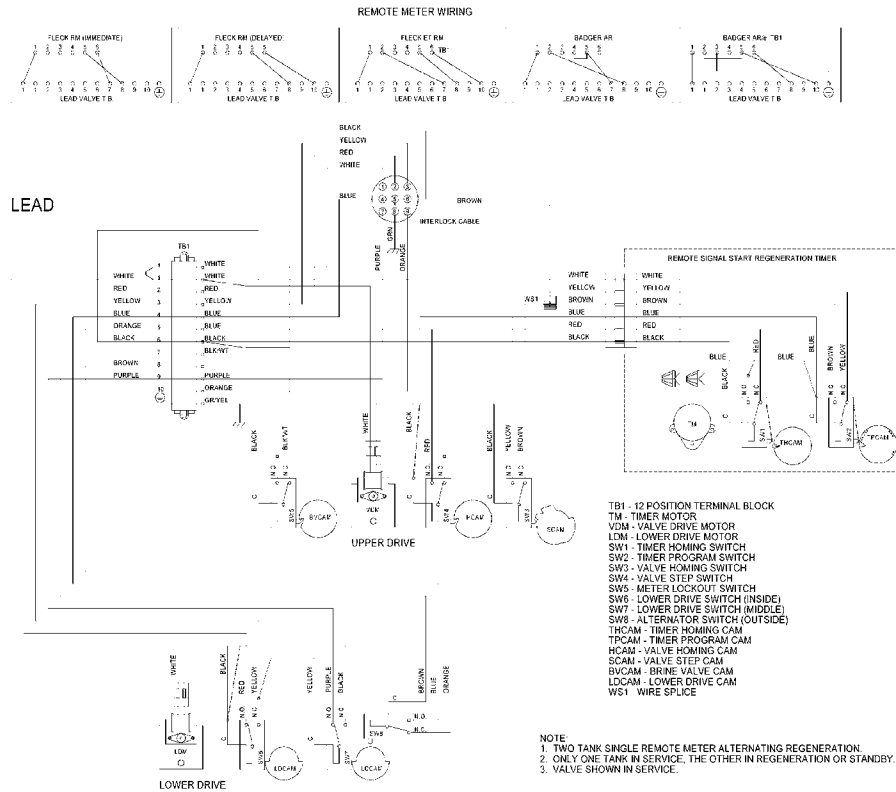



18687-01 Rev E

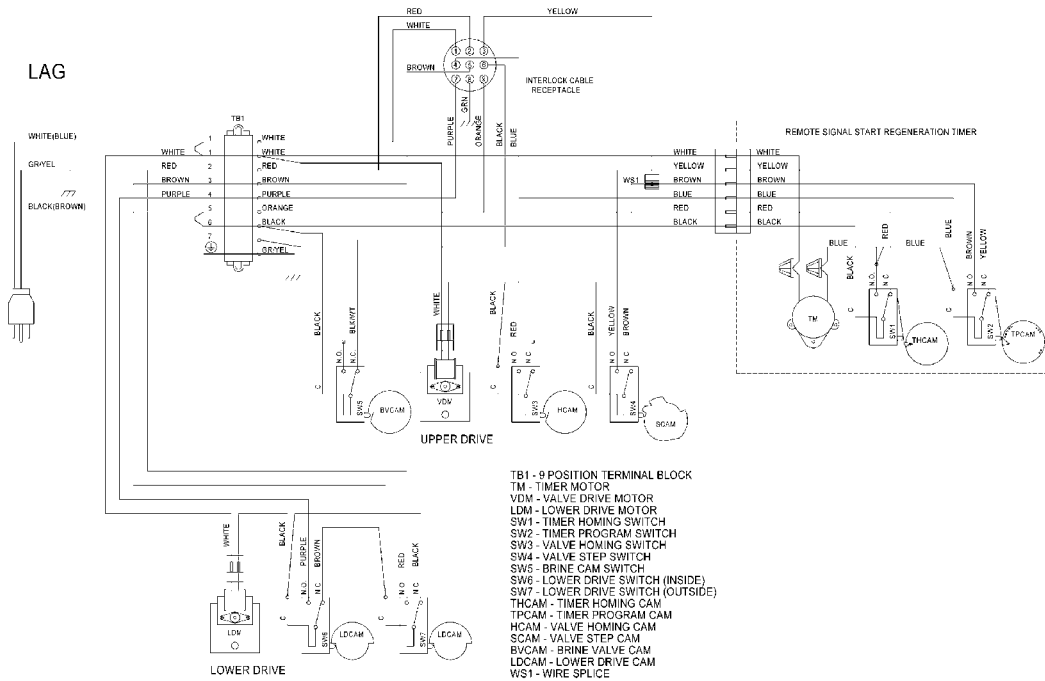

18687-02 Rev E


SYSTEM #7 WIRING CONTINUED

JUMPER PLUG WIRING
JUMPER PLUG PLACED ON LAST VALVE IN SYSTEM

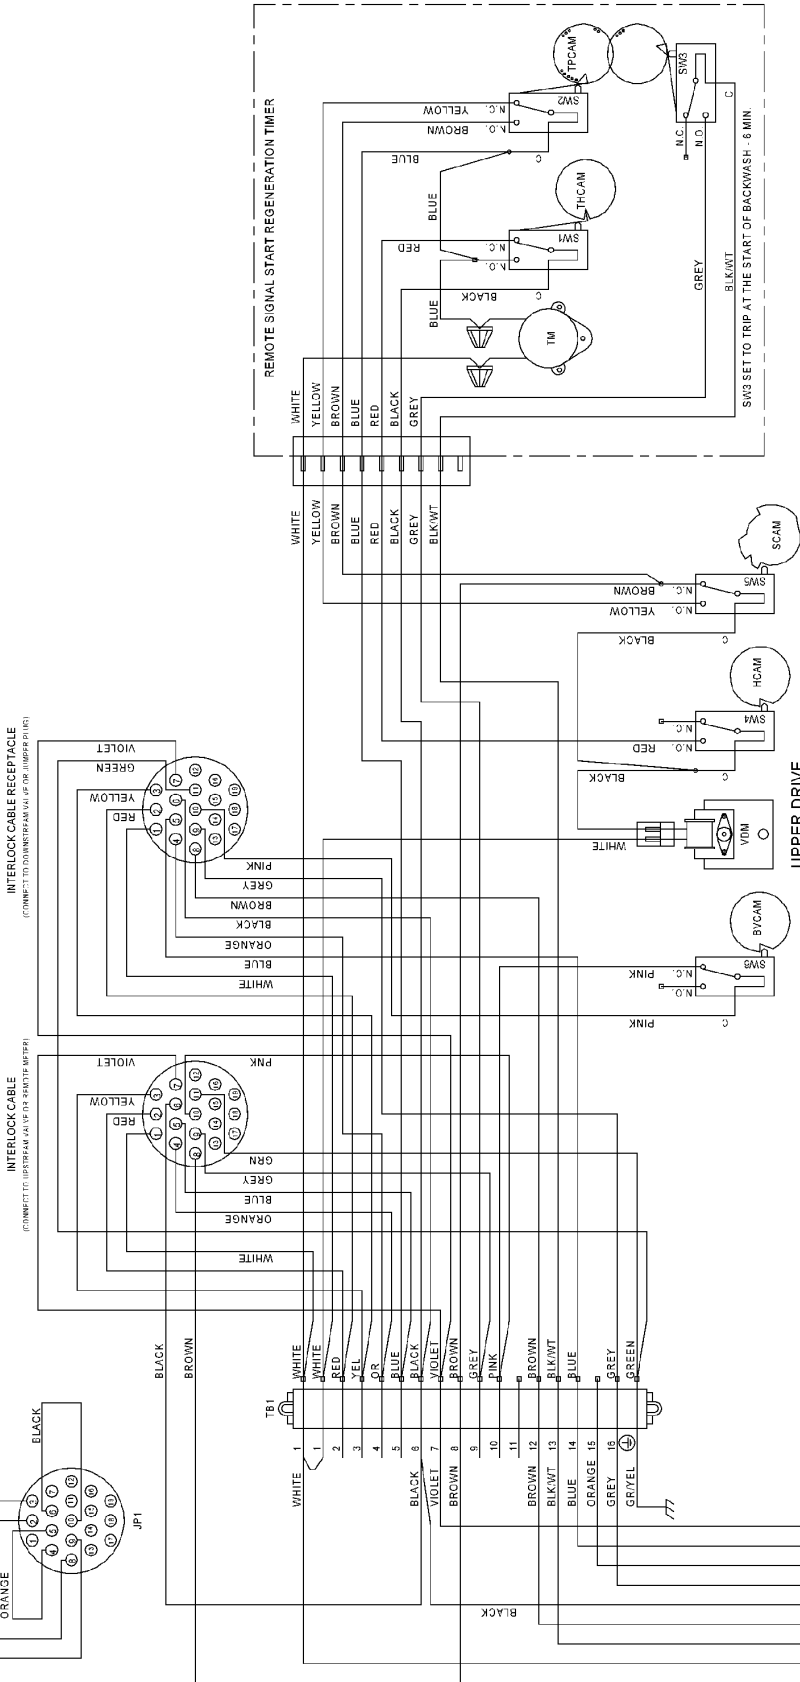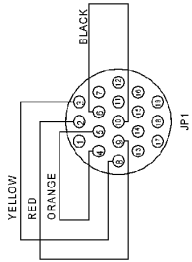

NOTE TO FOUR TANK SINGLE METER ALTERNATING REGENERATION:
 1. TO 3 TANKS IN SERVICE.
 2. ONE TANK IN REGENERATION OR STANDBY
 3. ALL VALVES IN SYSTEM WIRED ALIKE.
 4. LAST VALVE IN SYSTEM RECEIVES JUMPER PLUG ASSEMBLY.
 5. CONNECT JUMPER PLUG TO INTERLOCK CABLE RECEPTACLE.
 6. SPECIAL MULTI VALVE REMOTE METER OR EQUIV. REQUIRED FOR PROPER OPERATION
 7. SPECIAL MULTI VALVE REMOTE METER OR EQUIV. CONNECTED TO REMOTE METER.
 8. VALVE SHOWN IN SERVICE POSITION.

- TB1 - 18 POSITION TERMINAL BLK
- JP1 - JUMPER PLUG ASSEMBLY
- TM - TIMER MOTOR
- VDM - VALVE DRIVE MOTOR
- LDM - LOWER DRIVE MOTOR
- SW1 - VALVE STOP SWITCH
- SW2 - TIMER PROGRAM SWITCH
- SW3 - TIMER AUX SWITCH
- SW4 - VALVE HOMING SWITCH
- SW5 - VALVE STEP SWITCH
- SW6 - BRINE CAM SWITCH
- SW7 - LOWER DRIVE SWITCH (INSIDE)
- SW8 - LOWER DRIVE SWITCH (OUTSIDE)
- SW9 - LOWER DRIVE SWITCH (OUTSIDE)
- T-CAM - TIMER HOMING CAM
- H-CAM - TIMER PROGRAM CAM
- SCAM - VALVE STOP CAM
- LDCAM - BRINE VALVE CAM
- LOCAM - LOWER DRIVE CAM

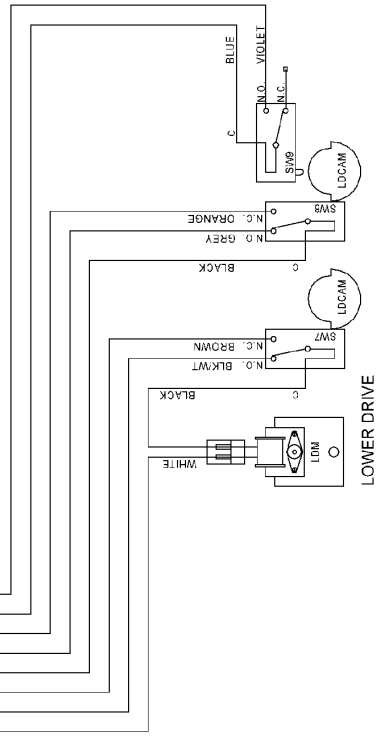

1600/1700 SYSTEM NOZZLE & THROAT CHART

1600 Brine System

Standard

Size	Color	Nozzle	Throat
#0.....	Red	10913-0	10914-0
#1.....	White	10913-1	10914-1
#2.....	Blue	10913-2	10914-2
#3.....	Yellow	10913-3	10914-3
#4.....	Green.....	10913-4	10914-4

PVC

Size	Color	Nozzle	Throat
#0.....	Gray	12973-0	12974-0
#1.....	Gray	12973-1	12974-1
#2.....	Gray	12973-2	12974-2
#3.....	Gray	12973-3	12974-3
#4.....	Gray	12973-4	12974-4

Stainless Steel

Size	Color	Nozzle	Throat
#0.....	Silver	10225-0	10226-0
#1.....	Silver	10225-1	10226-1
#2.....	Silver	10225-2	10226-2
#3.....	Silver	10225-3	10226-3
#4.....	Silver	10225-4	10226-4

1700 Brine System

Standard

Size	Color	Nozzle	Throat
#3.....	Yellow	14801-03C	14802-03C
#4.....	Green.....	14801-04C	14802-04C
#5.....	White	14801-05C	14802-05C
#6.....	Red	14801-06C	14802-06C

SERVICE ASSEMBLIES

Adapters:

61525	Softwater Adapter Kit, 2900s
61415	Adapter Assy, Sidemount 2850/2900/2930
61415NP	Adapter Assy, Sidemount, NP 2850/2900/2930
61415-20	Adapter Assy, Sidemount, BSP/MTC 2850/2900/2930
61415-20NP	Adapter Assy, Sidemount, BSP/NP 2850/2900/2930

Air Checks:

60002-34	Air Check, #500, 34 inches Long
60003-34	Air Check, #500, HW, 34 inches Tube
60009-01	Air Check, #900, Commercial, HW Less Fittings

Auxiliary Micro Switch:

60320-02	Switch Kit, 3200/9000 Timer Auxiliary
60320-11	Switch Assy, 2900, Lower Drive (For Adding 2nd Switch)
60320-08	Switch Assy, 2900, Lower Drive Aux (For Adding Third Switch)

Brine Line Flow Controls (BLFC):

60020-25	BLFC, .25 GPM, 1600
60020-50	BLFC, .50 GPM, 1600
60020-100	BLFC, 1.0 GPM, 1600
60011-090	Brine Valve, 1650, Short Stem
60010-25	BLFC, 1650, .25 GPM, Plastic
60010-50	BLFC, 1650, .50 GPM, Plastic
60010-100	BLFC, 1650, 1.0 GPM, Plastic

Brine Valves:

60011	Brine Valve, 1650, Less BLFC
60029	Brine Valve, 1600, Short Stem Brass, Std O-rings
60029HW	Brine Valve, 1600, Short Stem Hot Water
60034-XX	Model 1700 brine valve assy (specify flow control 1.0 - 5.0)
60604-XX	Model 1710 brine valve assy (specify flow control 1.0 - 5.0)

Covers:

60217-02	Environmental Lower Cover, Black
60219-02	Environmental, Cover, Black
60232-XX	Designer 2 Piece
60232-110	Cover, Designer, 1 Piece Black
14800-02	Cover, Dust, Lower, 2900, Black

Drain Line Flow Controls (DLFC):

60366-XX	1-inch FNPT x 3/4-inch FNPT (specify flow control .6 - 7.0)
60701-XX	1-inch FNPT x 1-inch FNPT (specify flow control 8.0 - 25.0)
60702-XX	1-inch FNPT x 1-inch MNPT (specify flow control 8.0 - 25.0)
60708-XX	1-inch FNPT x 3/4-inch FNPT (specify flow control 8.0 - 25.0)
60721-XX	1-inch FNPT x 1-inch FNPT (specify flow control .6 - 7.0)

Cam Assemblies:

60160-00	Drive Cam Assy, RR, White
60160-20	Drive Cam Assy, Std
60160-22	Drive Cam Assy, Link, Environmental 2900 Lower Drive
60160-30*	Drive Cam Assy, Upflow
60160-31*	Drive Cam Assy, Upflow, Variable

24-Hour Gear Assemblies:

19205	Gear Assy, 24 Hour, Silver, 5600, 12 A.M.
60519-02	Gear Assy, 3200 24 Hour 2 Times/Day, w/ Silver Label
60519-03	Gear Assy, 3200, 24 Hour 3 Times/Day, w/Silver Label
60519-04	Gear Assy, 3200, 24 Hour 4 Times/Day, w/Silver Label
60519-06	Gear Assy, 3200, 24 Hour (12:00) 6 Times/Day, w/Silver Label

Injector Assemblies (Complete):

60480-XX	1600/1650 - 3/8-inch brine (specify size of injector)
----------	--

Meters:

60393	Meter Assy, 2900, 2-inch Std
60394	Meter Assy, 2900, 2-inch Ext
60616	Meter Assy, Elec 2-inch
60620	Meter Assy, 2-inch Plastic, Std
60621	Meter Assy, 2-inch Plastic, Ext
60625	Meter Assy, 2-inch Plastic Electronic
61439	Meter Sleeve w/O-ring, Machd

Piston Assemblies:

60103	Piston Assy, 2900/2930, HWBP Lower
60103-01	Piston Assy, 2900/2930, HWBP, HW, Lower
60104	Piston Assy, 2900/2930, NHWBP Lwr, 2900s, Soft Wtr Rgn
60104-01	Piston Assy, 2900/2930, NHWBP, HW Lwr, 2900s Soft Wtr Rgn
61540	Piston Assy, 2900s, Downflow Upper
61540-01	Piston Assy, 2900s Downflow Upper, HW
61545*	Piston Assy, 2900s, Upflow Upper
61545-01*	Piston Assy, 2900s, Upflow Upper, HW
61550	Piston Assy, 2900s, HWBP Lower
61550-03	Piston Assy, 2900s, HWBP Lower, HW
61555	Piston Assy, 2900s, NHWBP Lower
61555-03	Piston Assy, 2900s, NHWBP Lower, HW

Program Wheel Assemblies:

60405-20	Program Wheel, w/3/4-inch Ext Label 1-1/2 inch Std Set @ 100
60405-50	Program Wheel, w/2-inch Std Label Set @ 21
60405-60	Program Wheel, w/2-inch Ext Label
60405-70	Program Wheel, w/1-1/2 inch Ext Label

SERVICE ASSEMBLIES *CONTINUED*

Safety Brine Valves:

60014.....	Safety Brine Valve Assy, 2310
60038.....	Safety Brine Valve , 2350
60027-FFA.....	Safety Brine Valve Body, 2300 Fitting Facing Arm
60027-FFS.....	Safety Brine Valve Body Fitting Facing Stud
60026-30SAN.....	Float Assy, 400A/2350, 30-inch HW
60028-30.....	Float Assy, 2300, 30-inch White
60028-30.....	Float Assy, 2300, 30-inch, Blue/White
60068-30.....	Float Assy, 2310, w/30-inch Rod

Sales & Service Aids:

40738.....	Literature, 2900 Spec Sheet
41689.....	Literature, 2900s S/Manual
40717.....	Literature, Catalog Assy, PWT Residential/Commercial

Seal & Spacer Kits:

61530.....	Seal & Spacer Kit, 2900s Upper
61530-01.....	Seal & Spacet Kit, 2900s, HW Upper
60128.....	Seal & Spacer Kit, 2900/2930 Lower
60128-01.....	Seal & Spacer Kit, 2900/2930, HW Lower

Service Equipment:

11098.....	Stuffer Tool Assy, Complete
12682.....	Puller Tool Assy, 2900/3150
12683.....	Stuffer Tool Assy, 2900/3150
13061.....	Puller Assy, Port Ring
16174.....	Silicone, 2 oz. Tube
60460.....	Meter Checker Kit, Std
60461.....	Meter Checker Kit, Ext
16586-8.....	Silicone, Dow #7 8 Lb

Service Valve Operator Assemblies:

60150.....	SVO Assy, 1600 O/S
60150-01.....	SVO Assy, 1600 N/S

Skipper Wheel Assemblies:

14860.....	Skipper Wheel Assy, 7 Day
14381.....	Skipper Wheel Assy, 12 Day

*Upflow Only

For Fleck Product Warranties visit:
Fleck para las garantías de los productos visite: } waterpurification.pentair.com
Pour Fleck garanties produit visitez le site :



WATER QUALITY SYSTEMS

5730 NORTH GLEN PARK ROAD, MILWAUKEE, WI 53209
P: 262.238.4400 | WATERPURIFICATION.PENTAIR.COM | CUSTOMER CARE: 800.279.9404 | tech-support@pentair.com

[§]For a detailed list of where Pentair trademarks are registered, please visit waterpurification.pentair.com/brands.
Pentair trademarks and logos are owned by Pentair plc or its affiliates. Third party registered and unregistered trademarks and logos are the property of their respective owners.

41689 REV G MY16 © 2016 Pentair Residential Filtration, LLC All Rights Reserved.

Section 8: 2900 Control Manual

NXT2 Manual



FLECK® NXT2 TIMER SERVICE MANUAL

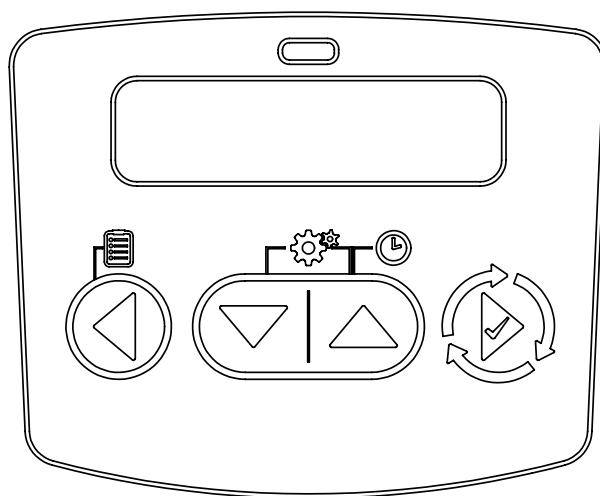


TABLE OF CONTENTS

OPERATING PARAMETERS	3
FEATURES	3
TIMER DISPLAY	4
TIMER OPERATION	5
TIMER FEATURES	6
SYSTEM DEFINITIONS	8
MASTER PROGRAMMING MODE FLOW CHART	9
USER PROGRAMMING MODE FLOW CHART	10
DIAGNOSTIC PROGRAMMING MODE FLOW CHART	11
TIME OF DAY PROGRAMMING MODE FLOW CHART	12
NXT2 TIMER ASSEMBLY (2510, 2750, 2850, 2900, 3150, 3900 VALVES)	14
NXT2 TIMER ASSEMBLY (2815 VALVE)	15
NXT TO NXT2 CONVERSION KITS	16
NXT2 WIRING DIAGRAM	17
POWER SUPPLY CONNECTIONS	18
NETWORK/COMMUNICATION CABLES AND CONNECTIONS	18
ERROR CODES AND TROUBLESHOOTING	19

IMPORTANT PLEASE READ:

- The information, specifications and illustrations in this manual are based on the latest information available at the time of release. The manufacturer reserves the right to make changes at any time without notice.
- This manual is intended as a guide for service of the valve only. System installation requires information from a number of suppliers not known at the time of manufacture. This product should be installed by a plumbing professional.
- This unit is designed to be installed on potable water systems only.
- This product must be installed in compliance with all state and municipal plumbing and electrical codes. Permits may be required at the time of installation.
- It is established that when daytime water pressure exceeds 80 psi (5.5 bar), the maximum pressure rating of 125 psi (8.6 bar) can be exceeded. A pressure regulator must be installed on this system or warranty is voided.
- Do not install the unit where temperatures may drop below 32°F (0°C) or above 120°F (52°C).
- Do not place the unit in direct sunlight. Black units will absorb radiant heat, increasing internal temperatures.
- Do not strike the valve or any of the components.
- Warranty of this product extends to manufacturing defects. Misapplication of this product may result in failure to properly condition water, damage to product, or personal injury.
- A prefilter should be used on installations in which free solids are present.
- In some applications local municipalities treat water with Chloramines. High Chloramine levels may damage valve components.
- Correct and constant voltage must be supplied to the controller to maintain proper function.
- The system is intended to treat only potable quality water. It is not intended as the permanent primary treatment of water from a source that is contaminated, such as from radon, pesticides, insecticides, sewage or wastewater.
- This system is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the system.
- Cleaning shall not be made by children without supervision.
- Periodic cleaning and maintenance may be required to function properly.
- All plumbing and electrical should be done in accordance with local codes.
- An uninterrupted power supply is required. The control uses a transformer to supply 24 VDC. Please make sure your voltage supply is compatible with your unit before installation.

CALIFORNIA PROPOSITION 65 WARNING

▲ WARNING: This product contains chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.

OPERATING PARAMETERS

Minimum Pressure	20 psi/1.4 bar/138 kPa
Maximum Pressure	125 psi/8.61 bar/861 kPa
Minimum Water Temperature	34°F/1°C
Maximum Water Temperature	110°F/43°C
Minimum Ambient Temperature	34°F/1°C
Maximum Ambient Temperature	120°F/52°C
Maximum Humidity	75%
Input Voltage	100-240 VAC
Input Frequency	50/60 Hz
Output Voltage	24 VDC
Output Current	2.7 amps
Maximum Altitude	2,000 meters
System Type	4 - Single Unit 5 - Parallel Interlock (2-8 Unit) 6 - Parallel Series Regeneration (2-8 Units) 7 - Alternating Interlock (2 Units) 8 - Alternating Delayed (2 Units) 9 - Alternating with Standby Units (2-8 Units) 14 - Demand Recall (2-8 Units)
Valve Type	2510 2750 2815 2850 2900S 2910 (Europe only) 3150 3900
Regeneration Type	Softener/Filter Meter Delayed Softener/Filter Meter Immediate Time Clock Day of the Week Remote Regeneration
Regeneration Flow	Downflow Upflow Filter
Electrical Rating	24V DC

FEATURES

- On-screen multilingual support: English, Francais, Deutsch, Italiano, Espanol, Nederlands, Portugues
- Time of day super capacitor backup for 12-hour power loss
- 2 to 4 line scrolling text OLED display, high contrast easy to read in low light conditions and at a distance
- Full functional user interface with easy programming allowing forward and backwards menu navigation
- Network two to eight valves via shielded CAT5 cables
- LED Status Indicator
 - Blue: In Service
 - Flashing Blue: Regeneration Queued
 - Green: Regeneration
 - Flashing Green: Standby
 - Red: Error condition present
- Two Programmable Auxiliary relay outputs
 - Time-based
 - Volume based (Chemical pump)
 - Alarm-based
 - Cycle-based
 - Standby
- Remote input
 - Remote Lockout
 - Remote Regeneration
- Easy installation with plug-in wiring harnesses
- Assistance Name and Phone Number contact fields
- Error Log History
- Water Usage Daily (up to 13 weeks)
- Push Settings
- Capacitive Touch buttons
- Two Regeneration Lockout Windows
- Reset to factory default settings or from saveable custom settings
- Full calendar display
- Master Programming Lockout
 - Code-based
 - Time-based
 - Delayed
- Icons for easy system status identification
- Dynamic network addressing
- Diagnostics
 - Real-time Flow Rate
 - Peak Flow Rate (can be reset)
 - Totalizer (can be reset)
 - Reserve Capacity
 - Use Since Last Regeneration
 - Last Regeneration
 - Identifiable Software Version
 - Total Number of Regenerations
 - Regeneration Interval
 - Last Settings Change
 - Error Log History
 - Average Daily Usage (per weekday, 3 month history)

TIMER DISPLAY


System Number Network Indicator Valve State Flow Indicator Status LEDs Master Indicator Time of Day

Blue LED
On - Unit in Service
Blinking - Regeneration Queued

Green LED
On - Unit in Regeneration
Blinking - Unit in Standby

Red LED
On - Error present

Display Screen
Alternates between Date, Flow Rate, and Volume Remaining (If a regeneration is queued, displays time until regeneration)

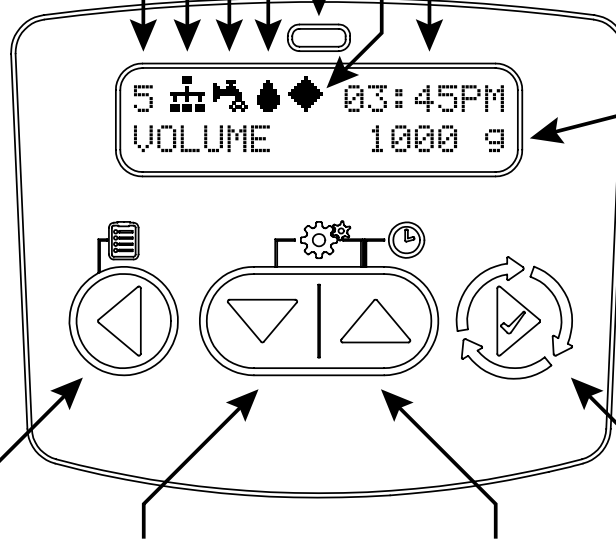

Left Button
Press:
Navigate to previous menu option

Press and Hold: Enter Diagnostic menu

Down Button
Press:
Adjust menu value down

Press and Hold: Enter Time of Day menu

Up Button
Press:
Adjust menu value up

Press and Hold: Enter Time of Day menu

Extra Cycle Button
Press:
Navigate to next menu option

Press and Hold:
Initiate a regeneration

Left Button + Down Button
Press and Hold -
Enter Master Programming

Down Button + Up Button
Press and Hold -
Enter User Programming

Display Icons

- | | | | |
|--|----------------------------------|--|-------------------------|
| | Valve State: Service | | Lock Window |
| | Valve State: Standby | | Initializing |
| | Flow Indicator (flashing) | | Upper Drive Movement |
| | Regeneration | | Lower Drive Movement |
| | Master Unit (auto-assigned) | | Remote Regeneration |
| | Network Indicator - Connected | | Master Programming |
| | Network Indicator - Disconnected | | User Programming |
| | Network Indicator - Unit Missing | | Diagnostics |
| | USB Connected (Field Programmer) | | Time of Day Programming |
| | Error Condition Present | | |
| | Remote Lock | | |

TIMER OPERATION

Setting the Time of Day

NOTE: Set Time of Day on any unit and the rest of the units in the system will update the Time of Day automatically.

1. Press and hold the Up button for 2 seconds. The "Time" value is displayed. Press the Up or Down buttons to adjust as desired.
2. Press the Extra Cycle button to advance to the "Year" field. Press the Up or Down buttons to adjust as desired.
3. Press the Extra Cycle button to advance to the "Month" field. Press the Up or Down buttons to adjust as desired.
4. Press the Extra Cycle button to advance to the "Calendar Day" field. Press the Up or Down buttons to adjust as desired.
5. Press the Extra Cycle button to return to the normal display screen.

NOTE: Press and hold the Left button to exit without saving.

Manually Initiating a Regeneration

1. When timer is In Service or Standby, press and hold the Extra Cycle button on the main screen.
2. The timer advances to Regeneration Cycle Step #1, and begins programmed time count down.
3. Press the Extra Cycle button once to advance valve to Regeneration Cycle Step #2 (if active).
4. Press the Extra Cycle button once to advance valve to Regeneration Cycle Step #3 (if active).
5. Press the Extra Cycle button once to advance valve to Regeneration Cycle Step #4 (if active).
6. Press the Extra Cycle button once to advance valve to Regeneration Cycle Step #5 (if active).
7. Press the Extra Cycle button once more to advance the valve back to In Service.

NOTE: A manually initiated or queued regeneration can be cleared by pressing and holding the Back button. A system queued regeneration can only be cleared by stepping through a manual regeneration. If regeneration occurs for any reason prior to the delayed regeneration time, the manual regeneration request shall be cleared. Pressing the Extra Cycle button while in regeneration will cause the upper drive to advance to the next step immediately.

Timer Operation During Regeneration


In the Regeneration Cycle step display, the timer shows the current regeneration cycle name the valve is in, or has reached, and the time remaining in that step. Once all regeneration steps are complete, the timer returns to In Service and resumes normal operation.

CYCLE 1/5	
BACKWASH	00:10:00

CYCLE 2/5	
DRAW	00:60:00

CYCLE 3/5	
RAPID RINSE	00:10:00

CYCLE 4/5	
TANK REFILL	00:12:00

CYCLE 5/5	
PAUSE	00:00:00



Press the Extra Cycle button during a system queued Regeneration Cycle to immediately advance the valve to the next cycle step position and resume normal step timing.

Timer Operation During Programming

The timer enters the Program Mode in Standby or Service Mode as long as it is not in regeneration. While in the Program Mode, the timer continues to operate normally monitoring water usage. Timer programming is stored in memory permanently.

Timer Operation During A Power Failure

All program settings are stored in permanent memory. Current valve position, cycle step time elapsed, and time of day are all stored during a power failure, and will be restored when power is re-applied. Time is kept during a power failure, and time of day is adjusted upon power up (as long as power is restored within 12 hours).

NOTE: The time of day on the main display screen will flash for 5 minutes when there has been a power outage. The flashing of the time of day can be stopped by pressing any button on the display.

Flow Meter Equipped Timer

As treated water is used, the Volume Remaining display counts down from the calculated system capacity to zero. When zero is reached, a Regeneration Cycle begins if no other units are in regeneration.

TIMER FEATURES

Remote Lock

The timer does not allow the unit/system to go into Regeneration until the Regeneration Lockout Input signal to the unit is cleared. This requires a contact closure to activate the unit. The recommended gauge wire is 16 AWG with a maximum wire length run of 50 feet.

Regeneration Day Override Feature

If the Day Override option is turned on and the valve reaches the set Regeneration Day Override value, the Regeneration Cycle starts if no other unit is in Regeneration. If other units are in regeneration, it is added to a regeneration queue. This occurs regardless of the remaining volume available.

Lock Settings (access to Master Programming)

Lock Settings prevents the user from accessing Master Programming. In Master Programming, select the desired Lock Settings option (Off, Time Based, Delayed, or Enter Code).

Time Based - User must set clock to 12:01 pm to unlock

Delayed - User must press and hold the Left and Down buttons for 60 continuous seconds to unlock

Enter Code - User must input code "1201" to unlock

Capacitive Buttons

Capacitive button entry warrant different consideration than tactile button entry. Do not wear gloves. Be sure to keep your hands and the capacitive buttons free of debris, grease, or water. Buttons may become temporarily unresponsive if environmental conditions change such as sudden humidity or temperature changes. If buttons become unresponsive, wait 5 to 10 minutes for the buttons to recalibrate.

LED Status indicator

Blue - Unit in Service

Flashing Blue - Regeneration Queued

Green - Unit in Regeneration

Flashing Green - Unit in Standby

Red - Error with codes

Power Loss Backup

Time of day super capacitor backup for power loss; rated to last minimum 12 hours

Continuous Flow Detect

Alert appears when specified continuous flow rate is detected during service over a specified duration. Continuous flow rate is adjustable from 0.1 to 99999.9 GPM/LPM (accuracy of flow rate detected will vary based on capability of meter). Duration range is adjustable from 1 to 255 hours.

Remote Regeneration

Ability to trigger a regeneration via a remote input.

Regeneration Types

Softener/Filter Meter Delayed - When volume remaining reaches zero and the scheduled regeneration time is reached (default 2 a.m. softener; 12 a.m. filter), the unit will regenerate.

Softener/Filter Meter Immediate - When volume remaining reaches zero, the unit will regenerate.

Time Clock - Once volume remaining reached zero and the selected regeneration time is reached (default 2 a.m. softener; 12 a.m. filter), the unit will regenerate.

Day of the Week - Once volume remaining reaches zero and the selected Day of the Week is reached, the unit will regenerate.

Remote Regeneration - Remote Regeneration is accomplished by a 3rd party device completing a contact closure connected to the remote regeneration input connector. The 3rd party device must complete the signal duration time that was set in the duration signal time in programming to start a regeneration. You can set the remote regeneration for immediate regeneration or delayed regeneration at the set time that was programmed for regeneration time in programming.

Reset to Factory Defaults

While powering up the unit, when the Pentair logo appears, press and hold the Extra Cycle button to access the Reset menu then select Reset to Factory Defaults. Press the Extra Cycle Button to confirm your selection and to advance to the service screen. Furthermore, you may select Reset to Non-Factory Defaults to save a set of unique control parameters.



END

Power on the unit. When Pentair logo appears, press and hold the Extra Cycle button. The Reset menu appears.

Use the up/down buttons to select.

Press the Extra Cycle button to set the desired option and return to the Service screen.

Lock Window

Lock Window prevents the unit from regenerating during a specified time frame. Two lock windows are available (Lock Window #1 and Lock Window #2). In Master Programming, enable a Lock Window then select the desired Lock Start time and Lock End time.

Settings Review

To prevent unintentional changes to Master Programming, enable Settings Review to view and navigate through Master Programming settings without the ability to edit.

TIMER FEATURES *continued...*

Push Settings

The ability to transmit user settings from one unit to all other connected units. Select the desired Master Programming settings on one unit then push the same settings to all other connected units. After the push settings have completed, you may still make unique changes to individual units.

Auxiliary Relays

The NXT2 has two auxiliary relays that may be activated based on cycle, time, or volume.

AUX. 1: CYCLE BASED SP BW BD RR RF SB x x ✓ x x x	Activates during selected cycle step
AUX. 1: TIME BASED- START TIME #1 1 M	Activates upon selected start time (Range: 0-91 minutes)
AUX. 1: TIME BASED- END TIME #1 5 M	Deactivates upon selected end time (Range: Start Time plus 1 minute)
AUX. 1: VOLUME BASED - VOLUME-G 00100	Activates when selected volume (gallon) is reached (Range: 0-99999)
AUX. 1: VOLUME BASED - DURATION-S 0010	Selected duration in seconds (Range: 0-9999 seconds)

System 4 - Single Unit

Single Tank configuration
Time Clock: No Meter
Immediate: One Meter
Delayed: One Meter
Remote Signal Start

System 5 (2-8 Units) Parallel Interlock)

All tanks in parallel supplying treated water. Each unit in the system will have its own flow meter/sensor input. The control will delay the start of Regeneration if another unit is already in Regeneration. Once that unit has completed a Regeneration cycle, and has returned to Service, the unit with the longest regeneration queue time will begin Regeneration. No more than one unit will be in Regeneration at a time.

System 6 (2-8 Units) Parallel Series Regeneration

All tanks in parallel supplying treated water. Only #1 control will monitor flow meter/sensor input. When a regeneration is required for the system, it will regenerate valve address #1 first, immediately followed by #2, then #3, then #4 if installed. No more than one unit will be in Regeneration at a time.

System 7 (2 Units) Alternating Immediate

One tank online supplying treated water, one tank in Standby. Only #1 control will monitor its flow meter/sensor input. Regeneration of a unit will begin after the other control has left Standby and returned to Service. When the Regeneration cycle is complete, the regenerated unit will enter Standby. Standby on each tank is controlled by the relay on the NXT2 circuit board.

System 8 (2 Units) Alternating Delayed

Immediate Transfer Delayed Regeneration
One tank online supplying treated water, one tank in Standby. Only #1 control will monitor its flow meter/sensor input. Online unit depletes its volume. Once this occurs the offline unit comes online. The previously online unit goes offline and delays its regeneration until the programmed regeneration time has been reached.

System 9 (2-8 Units) Alternating with Standby Units

Up to 7 tanks online supplying treated water, one tank in Standby. Meter/sensor input is required on each tank. Regeneration of a unit will begin after the other control has left Standby and returned to Service. When the Regeneration cycle is complete, the regenerated unit will enter Standby. Standby on each tank is controlled by the relay on the NXT2 circuit board.

System 14 (2-8 Units) Demand Recall

Meter input is required on each tank. Unit #1 will begin In Service with #2, #3, and #4 (if installed) will begin in Standby. At least one unit is In Service at all times. When flow rate to the Primary Service Unit increases to a user specified rate, the next unit in sequence will move from Standby to Service. As the flow rate falls below the user specified rate, subsequent tanks will return to Standby. When the Primary Service Unit regenerates, the next unit in sequence will become the new Primary Service Unit. As each unit's capacity is reached, the controller will initiate a Regeneration of that unit. Depending on the number of units in the system and flow rate demand, the regenerated unit will then be placed either into Standby or Service. Only one unit will be in Regeneration at a time.


MASTER PROGRAMMING MODE FLOW CHART

CAUTION Before entering Master Programming, please contact your local professional water dealer.

NOTE: Depending on current option settings, some values cannot be viewed or set.


Master Programming Mode

1. Press and hold the Left and Down buttons simultaneously for 3 seconds to enter Master Programming mode.
2. To navigate, press the Extra Cycle button to advance to the next value. Press the Left button to retreat to the previous value.
3. Where applicable, use the Down and Up buttons to adjust a value as desired. When entering data into text fields (such as Assistance Name) or numerical fields (such as Hardness), press the Extra Cycle button to advance to the next character/digit and press the Left button to retreat to the previous character/digit. Proceed through all available characters/digits to advance to the next value.
4. To reset/clear a value (such as Assistance Name), while on the value, press and hold the Down and Up buttons simultaneously for 5 seconds.
5. To exit Master Programming Mode, progress through all available values or after 5 minutes of inactivity the timer will exit automatically. To exit master programming without saving changes, press the Left button until you return to the service screen.
6. Depending on the current controller programming, certain values may not be able to be viewed or set.
7. The timer will display local information, not system information.
8. In the event of a regeneration occurring while displaying master programming, the regeneration step and time remaining will be displayed. When regeneration has been completed, the display will return to the main screen.

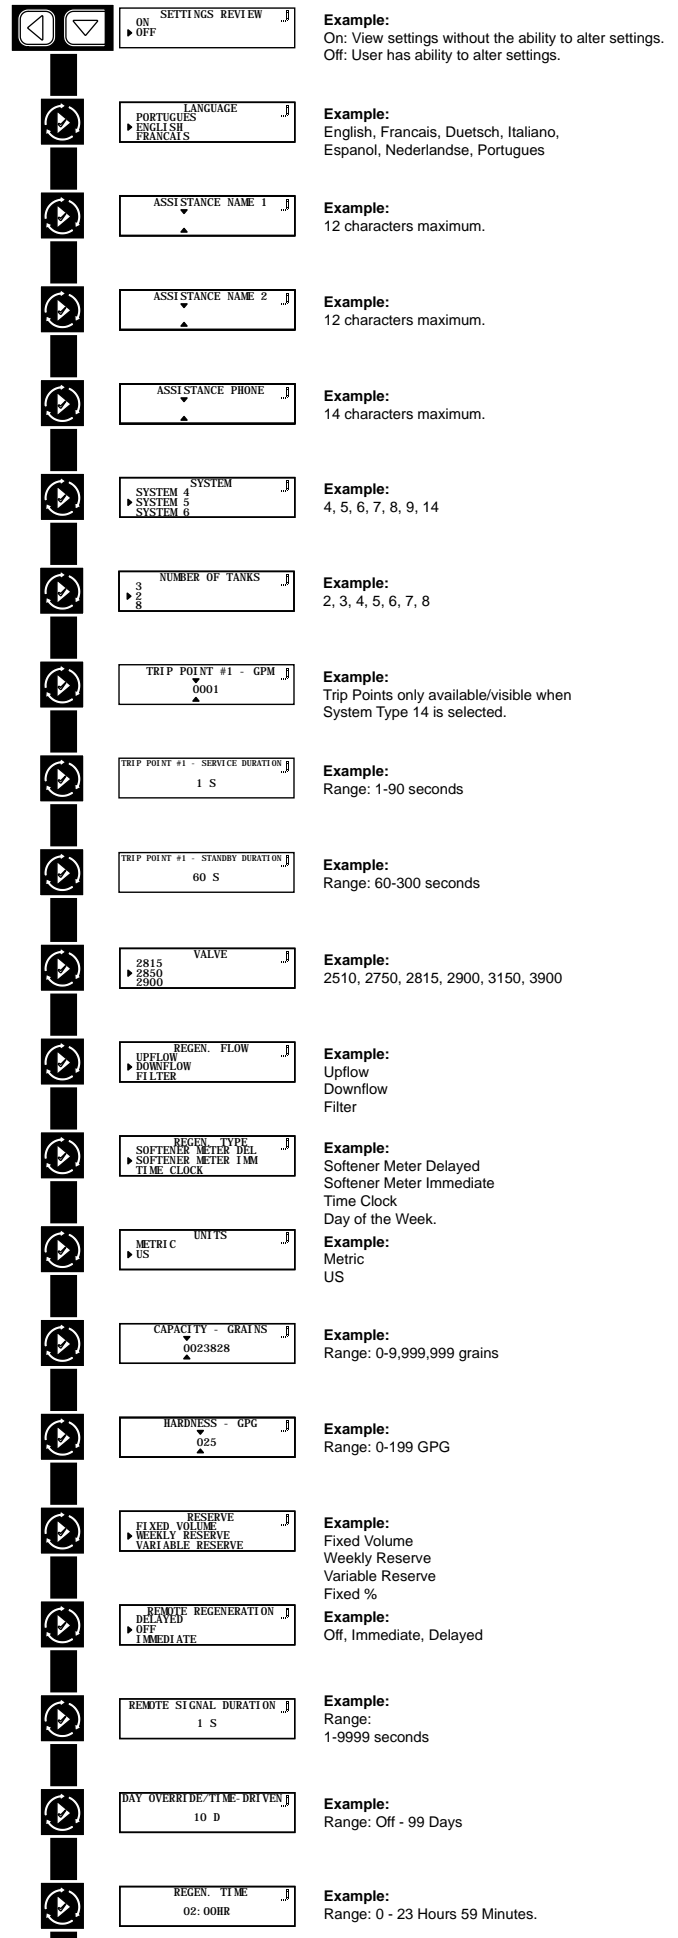

MASTER PROGRAMMING MODE

FLOW CHART *continued...*

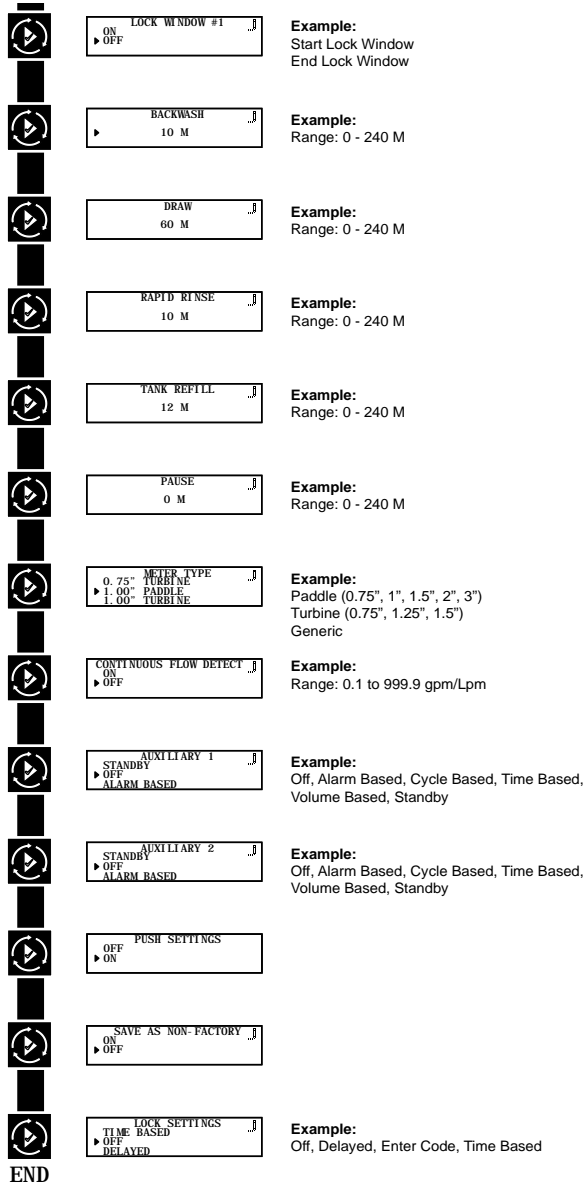


USER PROGRAMMING MODE

FLOW CHART

User Programming Mode

1. Press and hold the Down and Up buttons simultaneously for 3 seconds to enter the User Programming mode.
2. To navigate the menu, press the Extra Cycle button to advance to the next value. Press the Left button to retreat to the previous value.
3. Where applicable, use the Up and Down buttons to adjust a value as desired.
4. After progressing through all available values, the timer will return to Normal operation.
5. To exit diagnostic mode, progress through all cycles, or press & hold Left button at any time, or simply wait 5 minutes and timer will automatically return to normal operation.
6. Depending on the current controller settings, certain values may not be able to be viewed or set.
7. The timer will display local information, not system information.
8. In the event of a regeneration occurring while displaying user programming, the regeneration step and time remaining will be displayed. When regeneration has been completed, the display will return to the main screen.

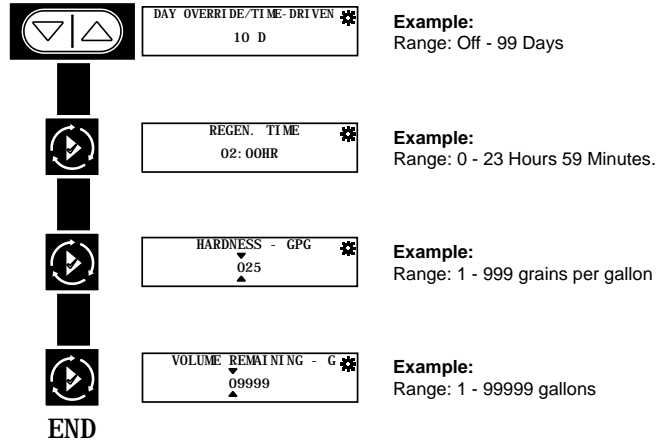

DIAGNOSTIC PROGRAMMING MODE FLOW CHART

Diagnostic Programming Mode

1. Press and hold the Left button to enter Diagnostic Programming mode.
2. To navigate, press the Extra Cycle button to advance to the next value. Press the Left button to retreat to the previous value.
3. Where applicable, use the Up and Down buttons to adjust a value as desired.
4. To reset/clear a value (such as Totalizer or Error Log), while on the value, press and hold the Up and Down buttons simultaneously.
5. After progressing through all available values, the timer will return to normal operation.
6. To exit diagnostic mode, press and hold the Left button at anytime or after 5 minutes of inactivity the timer will return to normal operation automatically.
7. Depending on the current controller programming, certain values may not be able to be viewed or modified.
8. The timer will display local information, not system information.
9. In the event of a regeneration occurring while displaying diagnostics, the regeneration step and time remaining will be displayed. When regeneration has been completed, the display will return to the main screen.

	FLOW RATE 29.7 GPM	Example: Real-time flow rate reading.
	PEAK FLOW 30.1 GPM	Example: Peak flow since last regeneration.
	TOTALIZER 482474 G	Example: Gallons at the outlet since installation.
	RESERVE 1588 G	Example: Reserve Capacity setting.
	USE SINCE REGEN 7331 G	Example: Gallons at the outlet since last regeneration.
	LAST REGEN. 4 H	Example: Time since last regeneration.
	SOFTWARE VERSION 13026	Example: Installed software version.
	NO. OF REGENS 32	Example: Total number of regenerations since installation.
	REGEN INTERVAL 3 D 21 H	Example: Duration between regenerations.
	LAST SETTINGS CHANGE 14 H 0 M	Example: Last time programming settings were changed.

	ERROR LOG ERROR LOG EMPTY	Example: Record of error events chronologically.
	SUN-AVERAGE USAGE 29.7 G	Example: Average usage from past Sunday.
	SUN-DAILY USAGE 2017-10-10 0 G 2017-01-02 0 G 2016-12-26 0 G	Example: Average usage from past 3 Sundays.
	MDN-AVERAGE USAGE 29.7 G	Example: Average usage from past Monday.
	MDN-DAILY USAGE 2016-10-10 0 G 2017-01-02 0 G 2016-12-26 0 G	Example: Average usage from past 3 Mondays.
	TUE-AVERAGE USAGE 29.7 G	Example: Average usage from last Tuesday.
	TUE-DAILY USAGE 2016-10-10 0 G 2017-01-02 0 G 2016-12-26 0 G	Example: Average usage from past 3 Tuesdays.
	WED-AVERAGE USAGE 29.7 G	Example: Average usage from last Wednesday.
	WED-DAILY USAGE 2016-10-10 0 G 2017-01-02 0 G 2016-12-26 0 G	Example: Average usage from past 3 Wednesdays.
	THU-AVERAGE USAGE 29.7 G	Example: Average usage from last Thursday.
	THU-DAILY USAGE 2016-10-10 0 G 2017-01-02 0 G 2016-12-26 0 G	Example: Average usage from past 3 Thursdays.
	FRI-AVERAGE USAGE 29.7 G	Example: Average usage from last Friday.
	FRI-DAILY USAGE 2016-10-10 0 G 2017-01-02 0 G 2016-12-26 0 G	Example: Average usage from past 3 Fridays.
	SAT-AVERAGE USAGE 29.7 G	Example: Average usage from last Saturdays
	SAT-DAILY USAGE 2016-10-10 0 G 2017-01-02 0 G 2016-12-26 0 G	Example: Average usage from past 3 Saturdays.

END

TIME OF DAY PROGRAMMING MODE


FLOW CHART

Setting the Time of Day

NOTE: Set Time of Day on any unit and the rest of the units in the system will update the Time of Day automatically.

1. Press and hold the Up button for 2 seconds.
The "Time" value is displayed. Press the Up or Down buttons to adjust as desired.
2. Press the Extra Cycle button to advance to the "Year" field.
Press the Up or Down buttons to adjust as desired.
3. Press the Extra Cycle button to advance to the "Month" field.
Press the Up or Down buttons to adjust as desired.
4. Press the Extra Cycle button to advance to the "Calendar Day" field.
Press the Up or Down buttons to adjust as desired.
5. Press the Extra Cycle button to return to the normal display screen.


NOTE: Press and hold the Left button to exit without saving.

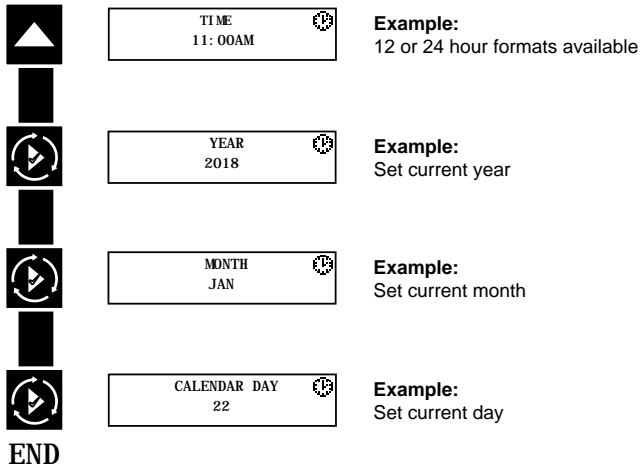

NXT2 Programming Parameters and Ranges

System Type	4				5	6	7	8	9	14	Programming Parameter Ranges	
	Time Clock	Day of the Week	Softener/Filter Metered Immediate	Softener/Filter Metered Delayed							Interlock	Series
Settings Review	x	x	x	x	x	x	x	x	x	x		On, Off
Language	x	x	x	x	x	x	x	x	x	x		English Francais Deutsch Italiano Español Nederlands Portugues Custom
Assistance Name 1, 2	x	x	x	x	x	x	x	x	x	x		Time Clock
Assistance Phone	x	x	x	x	x	x	x	x	x	x		Day of the Week
Regen Type	x	x	x	x	x	x	x	x	x	x		Softener/Filter Metered Immediate
Valve	x	x	x	x	x	x	x	x	x	x		Softener/Filter Metered Delayed
Regen Flow	x	x	x	x	x	x	x	x	x	x		2510 2750 2815 2850 2900 3150 3900
Units	x	x	x	x	x	x	x	x	x	x		Uplow, Downflow, Filter
Remote Regeneration	x	x	x	x	x	x	x	x	x	x		US, Metric
Auxiliary 1, 2	x	x	x	x	x	x	x	x	x	x		Off, Immediate, Delayed
Lock Window 1, 2	x	x	x	x	x	x	x	x	x	x		Off, Alarm Based, Cycle Based, Time Based, On, Off
Meter Type	x	x	x	x	x	x	x	x	x	x		On, Off
Continuous Flow Detect	x	x	x	x	x	x	x	x	x	x		Paddle (0.75", 1", 1.5", 2", 3") Turbine (0.75", 1.25", 1.5") Generic
Save as Non Factory	x	x	x	x	x	x	x	x	x	x		On, Off
Lock Settings	x	x	x	x	x	x	x	x	x	x		On, Off
Day Override/Time Driven	x	x	x	x	x	x	x	x	x	x		Off, Delayed, Enter Code, Time Based
Regen Time	x	x	x	x	x	x	x	x	x	x		Off-99 Days
Day of the Week	x	x	x	x	x	x	x	x	x	x		Any
Capacity			x									SU, MO, TU, WE, TH, FR, SA
Hardness												0-9,999,999 Grains
International Hardness Units												0-1,000,000 Lx°FTH, 0-701,557 Lx°EH
Reserve												0-199,999 GPG
Number of Tanks (Max)	1	1	1	1	8	8	2	2	8	8		0-199,999 mg/L, °EH, °FTH, °DH
Push Settings												mg/L, °EH, °FTH, °DH
Trip Point #1-7 GPM												Weekly Reserve, Variable Reserve, Fixed %, Fixed Volume
Trip Point #1-7 SD												2, 3, 4, 5, 6, 7, 8
Trip Point #1-7 STBD												On, Off
												0-7,569 LPM
												1-90s
												60-300s

NXT2 TIMER ASSEMBLY
(2510, 2750, 2850, 2900, 3150, 3900 VALVES)

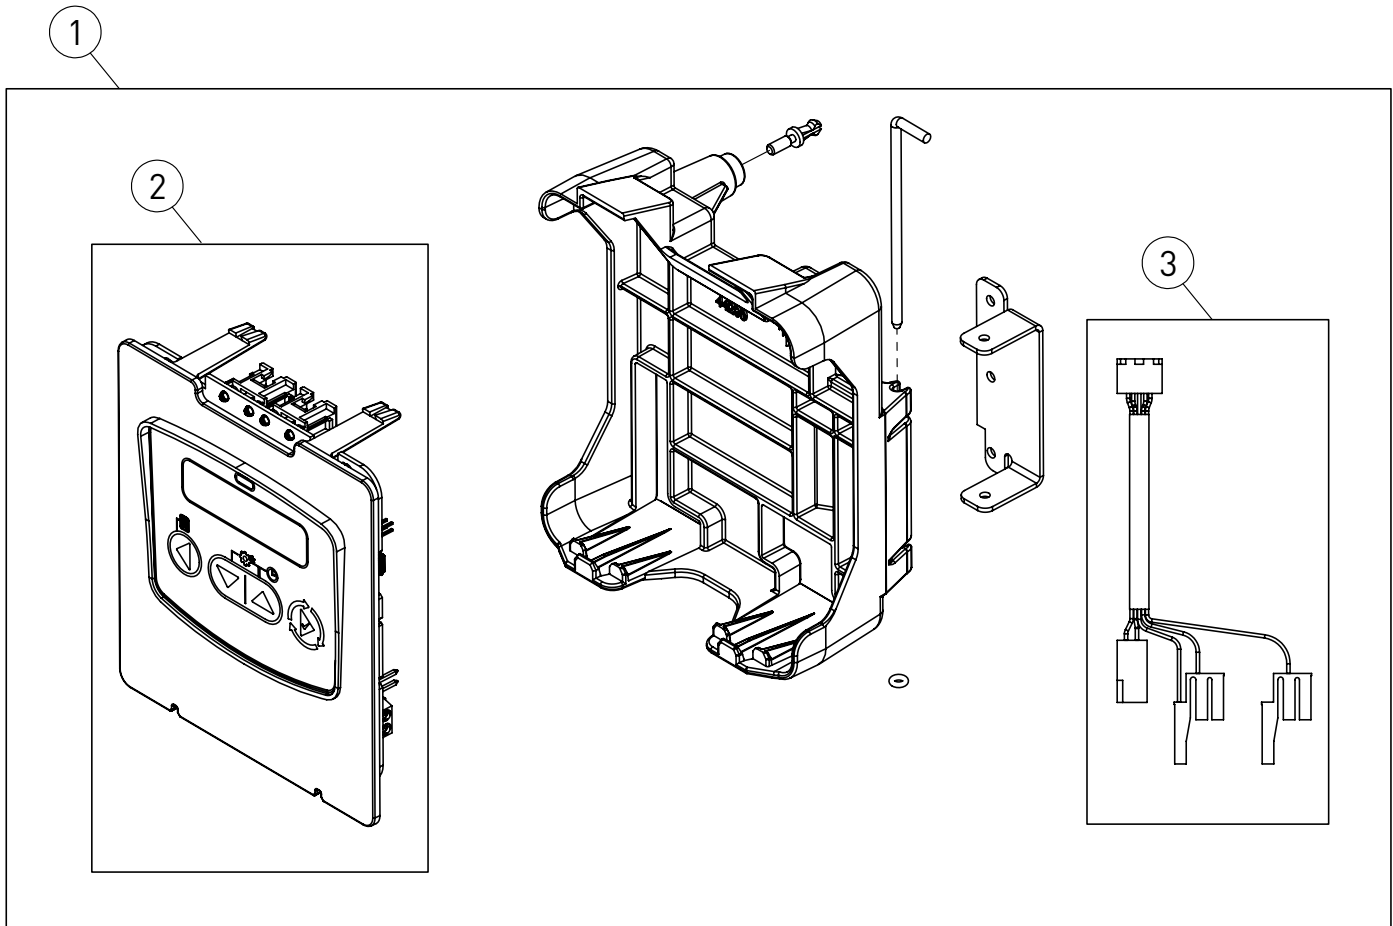


62115 Rev A

Item No.	QTY	Part No.	Description
1.....	1.....	62115	Timer Assy, NXT2

Service Assemblies

2.....	1.....	62120	Control Panel Assy, NXT2, Programmed
3.....	1.....	40941	Wire Harness, Upper Drive

NXT2 TIMER ASSEMBLY (2815 VALVE)

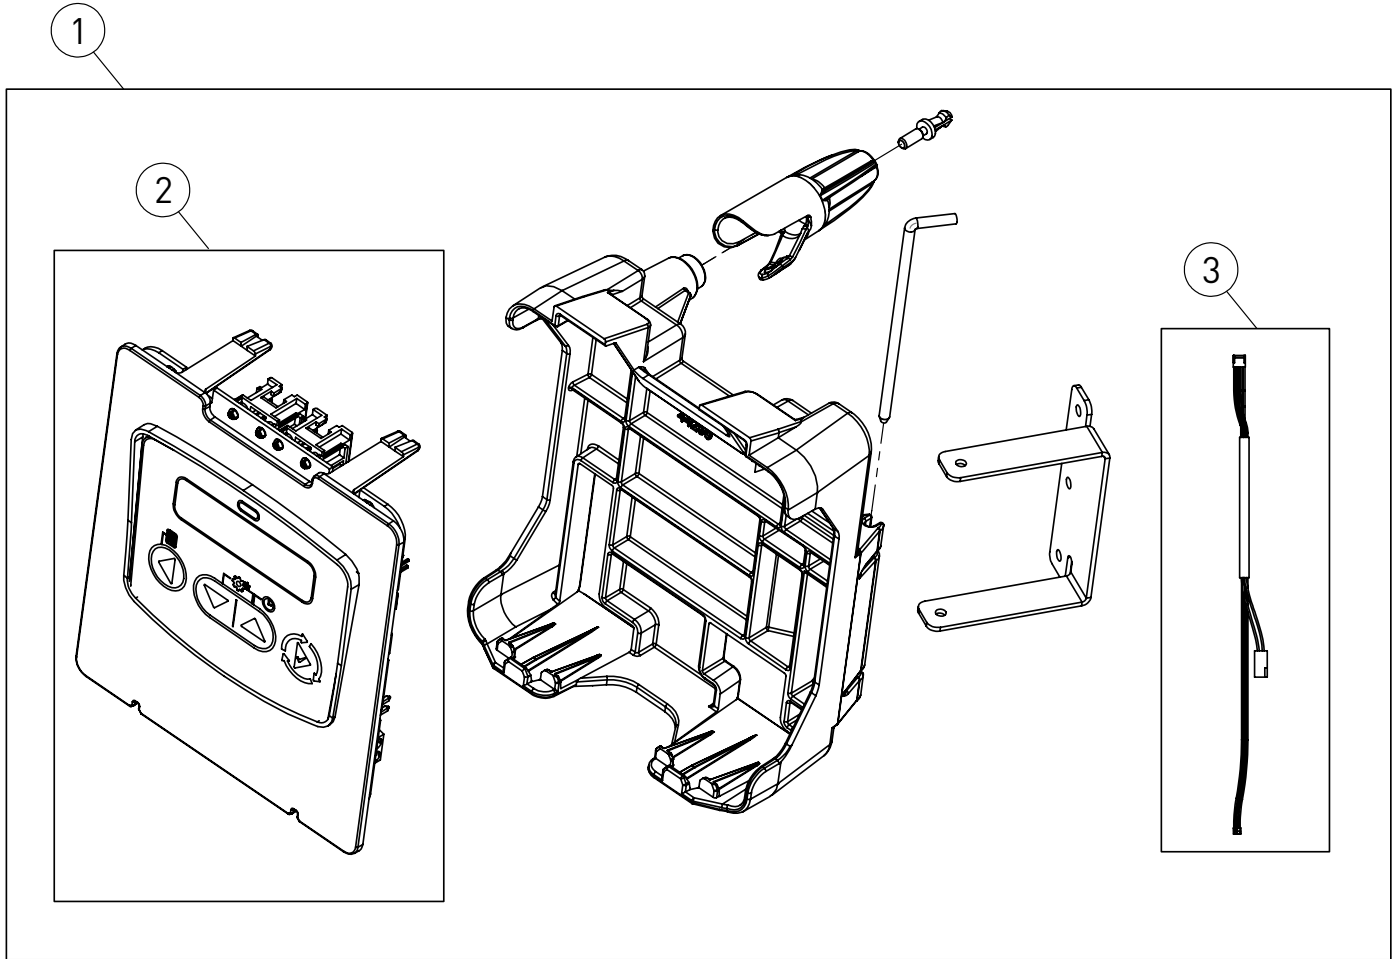


62115-01 Rev A

Item No.	QTY	Part No.	Description
1.....	1.....	62115-01.....	Timer Assy, NXT2, 2815

Service Assemblies

2.....	1.....	62120.....	Control Panel Assy, NXT2, Programmed
3.....	1.....	44076.....	Wire Harness, Upper Drive

NXT TO NXT2 CONVERSION KITS

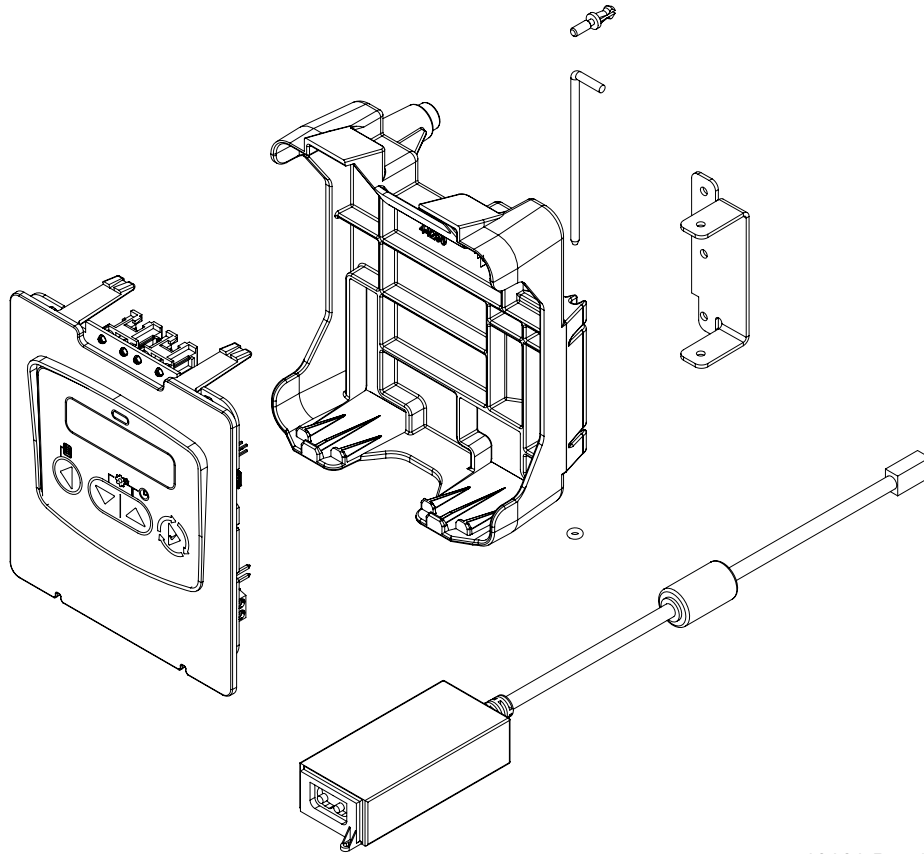


62121 Rev A

Item No.	QTY	Part No.	Description
	1.....	62121-01.....	Conversion Kit, NXT2, US
	1.....	62121-02.....	Conversion Kit, NXT2, Euro
	1.....	62121-03.....	Conversion Kit, NXT2, Aust
	1.....	62121-04.....	Conversion Kit, NXT2, Japan

NOTE: All Conversion Kits include timer wire harness (not pictured), and appropriate power supply plug end (also not pictured)

NXT2 WIRING DIAGRAM

*WIRING DIAGRAMS ARE REFERENCE ONLY. ALL WIRING SHOULD BE DONE BY A CERTIFIED ELECTRICIAN AND MEET ALL ELECTRICAL CODES.

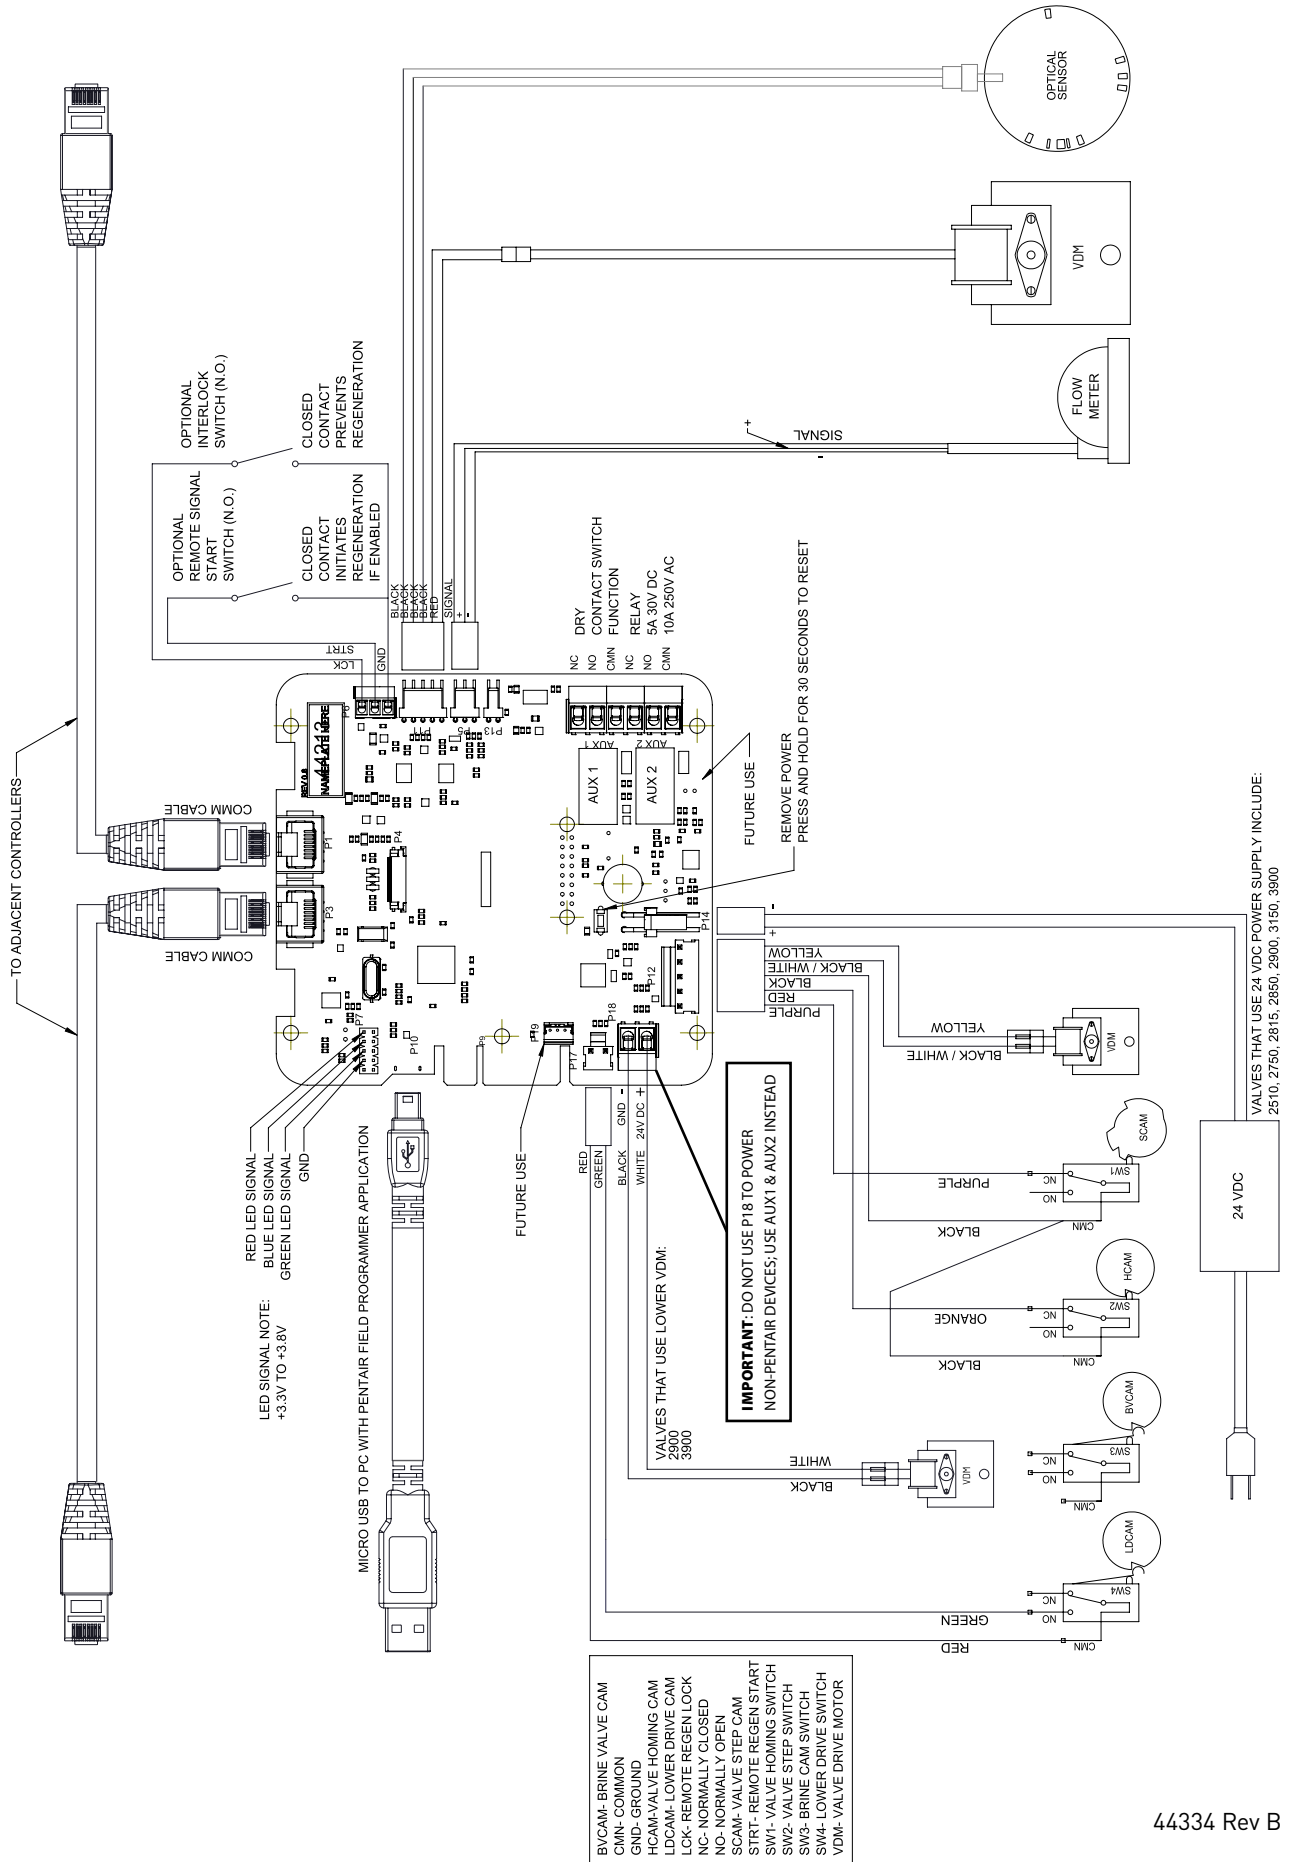

- BVICAM- BRINE VALVE CAM
- CMN- COMMON
- GND- GROUND
- HCAM-VALVE HOMING CAM
- LDCAM- LOWER DRIVE CAM
- LCK- REMOTE REGEN LOCK
- NC- NORMALLY CLOSED
- NO- NORMALLY OPEN
- SCAM- VALVE STEP CAM
- SW1- VALVE HOMING START
- SW2- VALVE STEP SWITCH
- SW3- BRINE CAM SWITCH
- SW4- LOWER DRIVE SWITCH
- VDM- VALVE DRIVE MOTOR

POWER SUPPLY CONNECTIONS

Installing the Power Supply:

NOTE: Power Supply includes a harness with 2 black wires that connect to circuit board, see page 15.

1. Insert black and black transformer wires into 24VDC input of control.


NETWORK/COMMUNICATION CABLES AND CONNECTIONS

Use a shielded CAT5 Network/Communication cable.

Connect the network/communication cable first before programming.


Cable length between timers/units should not exceed 25 feet. Connect each unit in series (do not form a loop) together from one communication port to the next communication port. It does not matter which one goes to the next one.

2510/2750/2815/2850/2900 Valves:

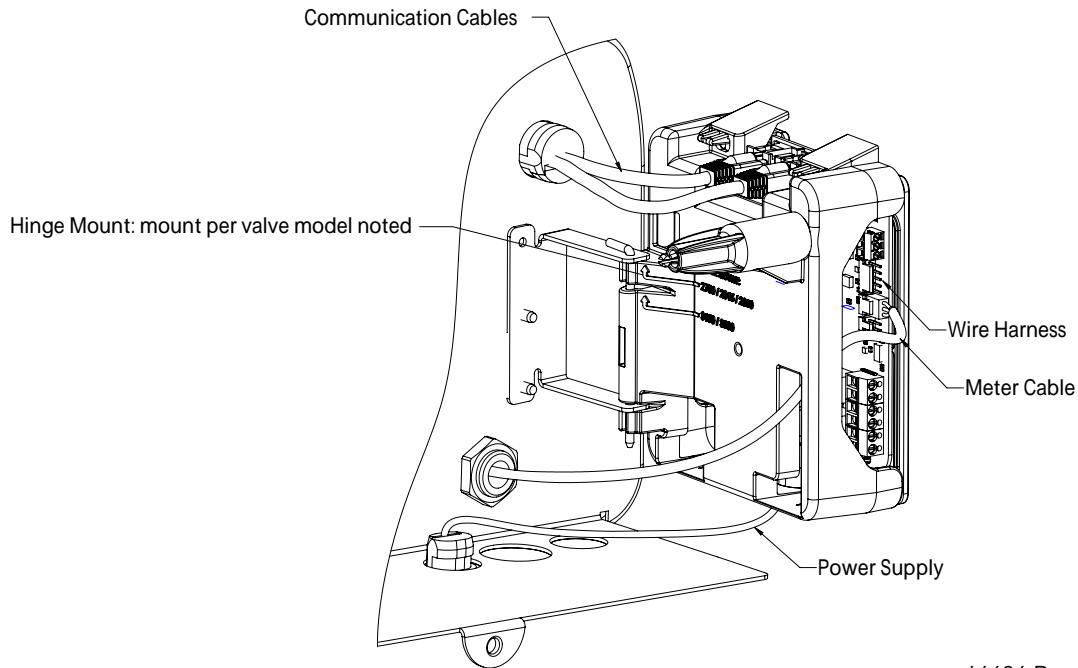

44404 Rev A

3150/3900 Valves:

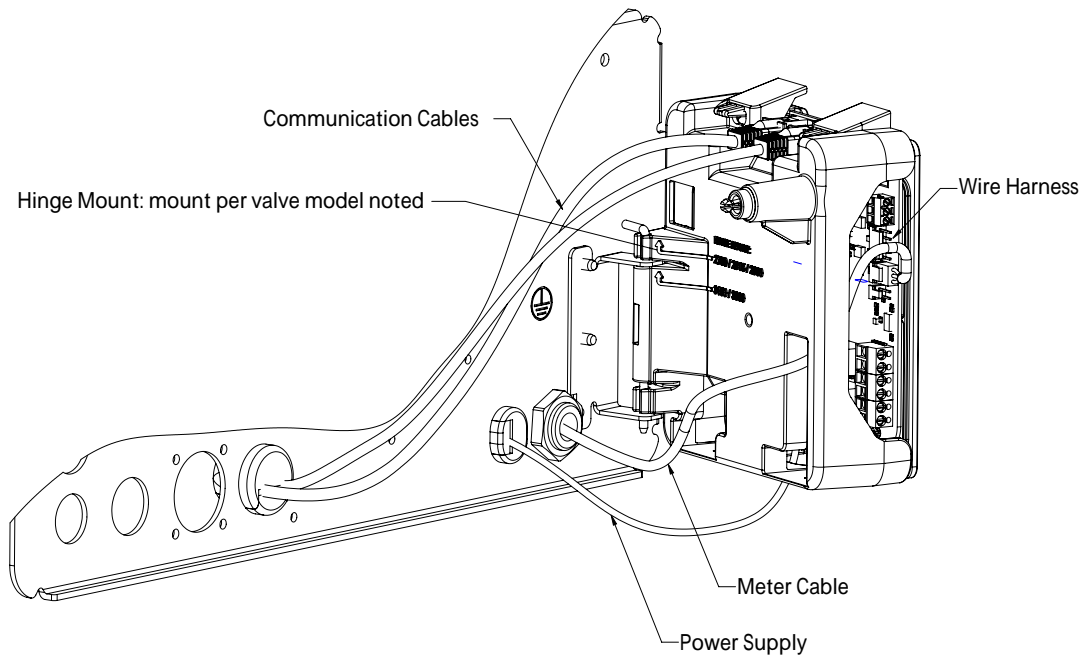

44403 Rev A

ERROR CODES AND TROUBLESHOOTING

Detected Errors

If a communication error is detected, an Error Screen will appear.

- All units In Service remain in the In Service position.
- All units in Standby go to In Service.
- Any unit in Regeneration when the error occurs completes Regeneration and goes to In Service.
- No units are allowed to start a Regeneration Cycle while the error condition exists, unless they are manually forced into Regeneration.
- When an error is corrected and the error no longer displays (it may take several seconds for all of the units in a system to stop displaying the error message), the system returns to normal operation.

NOTE: During the error condition, the control continues to monitor the flow meter and update the volume remaining. Once the error condition is corrected, all units return to the operating status they were in prior to the error. Regeneration queue is rebuilt according to the normal system operation. Or, if more than one unit has been queued for regeneration, then the queue is rebuilt according to which one communicates first.

Message Displayed	Cause For Error	Correction
Error Valve Count Mismatch	Number of NXT2 detected does not match selected system type in Master Programming	Push correct valve settings in Master Settings
Motor Stall No Changes Detected in the Optical Sensor for 6 Seconds	The motor is on but no encoder pulses are detected within a given duration while homing.	Check the P11 connection and trigger a manual regeneration.
Motor Run-On No CAM Switch Change Detected	The motor is on but no encoder pulses are detected or CAM Switches change state within a given duration.	Verify correct valve type is chosen. Trigger a manual regeneration.
Optical Sensor Undesired change detected by the Optical Sensor	The motor is off but additional encoder pulses are detected.	Trigger a manual regeneration.
Over-Current Motor Over-Current is Detected	Motor current exceeds thresholds.	Trigger a manual regeneration.
Flow Meter Error Continuous Flow Detected	Flow exceeded specified threshold for a specific duration.	Trigger a manual regeneration.
Error Send/Receive Failure	During a setting push, a packet was missing.	Reconnect communication cables and push setting in Master Settings.
Error System Type Mismatch on Network	The system type among connected units does not match.	Push correct system settings in Master Settings.
Microcontroller Error	Calibration or manufacturing test was not performed	Contact your Pentair representative.
100 Days Without Regen	100 Days have expired without a regeneration	Trigger a manual regeneration

For Pentair Product Warranties visit: pentair.com/assets/residential-filtration-warranty



13845 Bishops Dr. | Suite 200 | Brookfield, WI 53005 | United States
P: 262.238.4400 | Customer Service: 800.279.9404 | tech-support@pentair.com | pentair.com

All indicated Pentair trademarks and logos are property of Pentair. Third party registered and unregistered trademarks and logos are the property of their respective owners.

© 2020 Pentair. All rights reserved.

44381 REV C JN20
